



 
 
 
**20682**

 [www.russellhobbs.com](http://www.russellhobbs.com)

**£10,000 prize draw**

**EXTRA year guarantee FREE rewards gallery**

[www.russellhobbs.co.uk/productregister/](http://www.russellhobbs.co.uk/productregister/) Register online now! See back for details

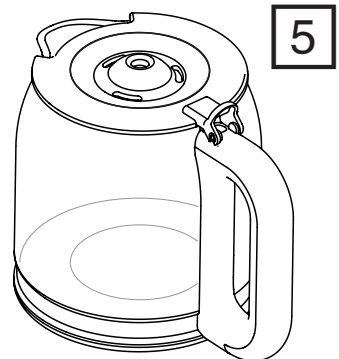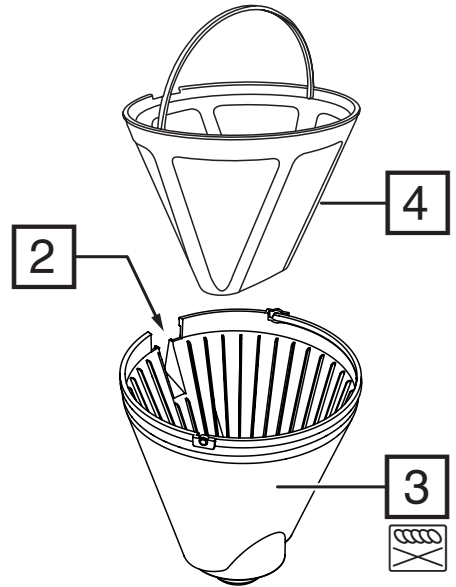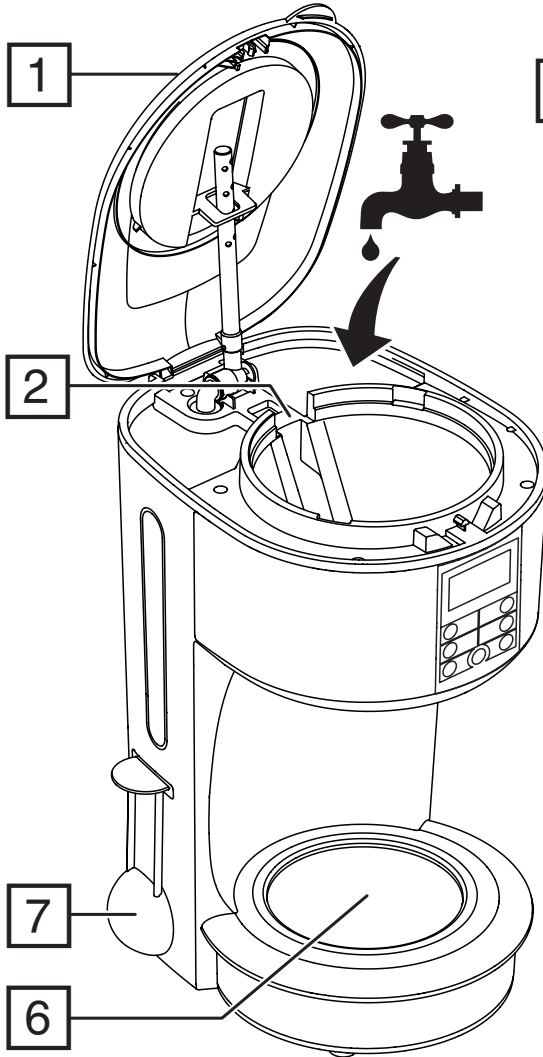

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

---

**IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/ instructed and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8 years.

Misuse of the appliance may cause injury.

 The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.

 Don't immerse the appliance in liquid.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

- Sit the appliance on a stable, level, heat-resistant surface.
- Keep the appliance and cable away from the edges of worktops.
- Don't use accessories or attachments other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't use the appliance if it's damaged or malfunctions.

**HOUSEHOLD USE ONLY**

---

**PARTS**

- |                     |   |
|---------------------|---|
| 1. Lid              | 5. Carafe   |
| 2. Slot             | 6. Hotplate   |
| 3. Filter holder    | 7. Scoop  |
| 4. Permanent filter |  Dishwasher - top rack |

---

**BEFORE USING FOR THE FIRST TIME**

Fill the reservoir to the **max** mark, and run the appliance without coffee.

---

**FILLING**

1. Remove the carafe from the hotplate.
2. Open the lid.
3. Fill the reservoir with the exact amount of water required. Note that the brewing process will use all of the water that you put in the reservoir.

4. Put 1 scoop of filter-ground coffee into the filter for each cup.
5. Close the lid.
6. Replace the carafe on the hotplate.

---

## SET THE CLOCK

It isn't necessary to set the clock to use your coffee maker but you will need to set it if you want to use the timer functions.

1. Put the plug into the power socket.
  2. Use the **h** and **min** buttons to set the correct time in 24 hour format.
- The clock will retain its settings until the coffee maker is unplugged.

---

## COFFEE STRENGTH

Pressing the 1-4☑ button will make the brewed coffee slightly stronger. You can also use it if you are only brewing a partial carafe of coffee (i.e. not completely filling the reservoir). Your coffee maker will then alter the brewing process so your coffee will have about the same strength as it would if you had made a full carafe.

---

## MAKING COFFEE

Note: If you want to use the coffee strength feature press the 1-4☑ button before pressing the ☕ button.

1. Press the ☕ button. The ☕ button will light up.
2. Shortly afterwards, coffee will start to drip into the carafe.
3. If you want to stop the coffee maker while it's brewing, press the ☕ button.
4. Once brewed, the hotplate will keep the carafe warm for up to 40 minutes.

---

## USING THE TIMER

Note: Make sure the clock is set to the correct time. Use the **h** and **min** buttons.

1. Set the timer to the time you want to start brewing.
    - a) Press the ⌚ button .
    - b) Use the **h** and **min** buttons to set the time you want brewing to start.If you don't press either the **h** or **min** buttons within 5 seconds, the coffee maker will revert to "normal", and the current time will show. Press the ⌚ button to start again.
  2. Press the AUTO button. AUTO will show on the display.
  3. At the time you set, the ☕ button will light up, and the coffee maker will start up.
  4. To cancel the timer before brewing has started, press the button again.
  5. If you want to use the coffee strength feature when using the timer, press the 1-4☑ button now.
- If you want to cancel the timer before brewing has started, press the ☕ button.
  - If you want to stop the coffee maker while it's brewing, press the ☕ button.

---

## KEEP WARM/AUTO SHUT-OFF

1. Your coffee maker will keep the coffee warm for about 40 minutes.
2. 40 minutes after brewing your coffee maker will shut down and the time of day will be displayed.
3. To wake the appliance, press the **min** button.

---

## A QUICK CUP

If you want a quick cup of coffee before the brewing cycle has finished:

1. You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
2. To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds.
3. When you replace the carafe on the hotplate the non-drip valve opens to let any remaining coffee through.

---

## CARE AND MAINTENANCE

1. Unplug the appliance and let it cool.
2. Tip the contents of the filter holder into the bin.
3. Wipe all surfaces with a clean damp cloth.
4. Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
5. Hand wash the carafe and filter holder.
6. Replace the filter holder.
7. Close the lid, and press down to lock it.



You may wash these parts in the top rack of a dishwasher.



---

## SELF CLEAN

To prevent scale building up, use the self clean function at least monthly in normal water areas, more often in hard water areas.

Ensure the kitchen is well ventilated, as heating vinegar causes an unpleasant smell.

This operation will take 35-45 minutes.

1. Mix 6 cups of white vinegar with 4 cups of water in the carafe.
2. Pour the mixture into the reservoir. Close the lid.
3. Replace the carafe on the hotplate.
4. Put the plug into the power socket.
5. Press the  button.  will show on the display.
6. Part of the mixture will come through. The remainder will soak in the boiler for 30 minutes, then come through.
7. At the end of the operation, the appliance will switch itself off.
8. Fill the reservoir to the max mark, and run the appliance without coffee.
9. Do this 2 or 3 times, till the vinegar smell has gone.





---

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE

If you ring Customer Service, please have the Model No. to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0345 658 9700 (local rate number)

---

## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



---

## ONLINE/SPARES

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products and/or spares



---

## REGISTER ONLINE FOR –



£10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit [www.russellhobbs.co.uk/productregister/](http://www.russellhobbs.co.uk/productregister/)

You must register within 28 days of purchase.