

RUSSELL HOBBS ErP Data Sheet

Column A	Column B	Column C	Column D	Column E
Model	Model name	Mode	Power Consumption (W)	Remarks
19270-56, 19270*****, 21140, 21140*****	Steamer	Off	0.0	
		auto-off The appliance operated approximately 60mins and turned into "OFF" when the timer is srttled to 60mins.	0.0	
20920, 20920-56, 20922-56 (LW-126C)	Crepe maker	Off	0.0	
N20630AMZ	Steam Iron	Off	0.3	
		Standby	0.3	
21396 (TA4001-CB, TA7700-CE, TA7701-CE, TA7701K-CE)	Toaster	Off	0.0	
22340, 22340-56, 23470-56, 23471, 23471-56, 23470-56C, RHBL300, 23472-56, 23472, 23475-56	Blender	Off	0.1	
22601-56	Toaster	Off	0.0	
22610, 22610-56, 22620, 22620-56, 22611, 22611-56, 22613, 22613-56	Coffee maker	Standby	0.4	
22760, 22760*****, 26010, 26010*****	Juice Extractor	Off	0.0	
23820, 23820-56, 2382W-XY	Blender	Off	0.1	
23960, 23970, 20569, 2396WXYZ, 2397WXYZ, 2056WXYZ,	Steam Iron	Off	0.0	
23986-56, RHC100, RHC100WXYZ	Steam Iron	Off	0.3	
		auto-off The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"	0.4	
24010, 27010-56, 27011-56, 26780, 2401WXYZ, 2701WXYZ,2678WXYZ	Coffee maker	Off	0.4	
24020, 2402WXYZ	Coffee maker		0.4	
24030, 24050, 24390, 2403WXYZ, 2405WXYZ, 2439WXYZ	Coffee maker		0.4	
24040, 2404WXYZ	Coffee maker		0.4	
RHT112, RHT112WXYZ, 24370, 2437WXYZ, RHT114, RHT114WXYZ, 24380, 2438WXYZ	Toaster	Off	0.0	
24411, 2441W-XY, RHT041, RHT041WXY, 26290, 2629W-XY	Toaster	Off	0.0	
24540, 2454WXYZ, 24530, 2453WXYZ, 24520, 2452WXYZ	Sandwich maker	\	\	No power switch
24630, 24630-56	Popcorn maker	Off	0.0	
24660, 24660-56, 24661, 24661-56, 2466WXYZ, RHMFP5, RHMFP5WXYZ	Chopper	Off	0.1	
24690, 24691,24700, 24701, 24702, 24703, 24710, 24690WXYZ, 24691WXYZ,24700WXYZ, 24701WXYZ, 24702WXYZ, 24703WXYZ, 24710WXYZ, RHSM5BLK, RHMS5WXYZ	Hand blender	Off	0.3	
25580, 25580-56, 25580WXYZ	Steam Iron	Off	0.0	
25630, 25630-56, 2563WXYZ,RH5V6000, RH5V6000WXYZ	Slow cooker	Off	0.2	
25900, 25910, 25900WXYZ, 25910WXYZ	Steam Iron	Off	0.3	
26390, 26390-56, 2639WXYZ, RHT722, RHT722WXYZ	Toaster	Off	0.0	
26470, 26470-56, 26480, 26480-56, 28440, 28440-56, 2647WXYZ, 2647WXYZ-56, 2648WXYZ, 2648WXYZ-56, 2844WXYZ, 2844WXYZ-56	Steam Iron	Off	0.0	
26461, 26461-56, RHC250, RHC200, 2646WXYZ, 2646WXYZ-56,	Steam Iron	Off	0.4	
		auto-off The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"	0.4	
26750,2675WXYZ, 26750-70, 2675WXYZ-70, RHK2675, RHK2675BLK, RHK2675WXYZ	Kettle	Off	0.0	
26760, 26770, RHT2676BLK, RHT2677BLK	Toaster	Off	0.0	
26800, 26800-56, 2680WXYZ	Sandwich maker	\	\	No power switch
26810, 26810-56, 2681WXYZ	Sandwich maker	\	\	No power switch
27020, 27030, 27040, 27020WXYZ, 27030WXYZ, 27040WXYZ	Rice cooker	Off	0.0	
27080-56, 2708WXYZ	Rice cooker	Off	0.0	
27110, 27110-56, 27111, 27111-56 2711WXYZ, RHFP2711, RHFP2711WXYZ	Food processor	Off	0.1	
27120, 27121, 2712WXYZ, RHBL2712, RHBL2712WXYZ	Blender	Off	0.1	
27130-56, 27131-56, RHMFP2713, 2713WXYZ, RHMFP2713WXYZ	Chopper	Off	0.2	
27140-56, 27141-56, RHSM2714, 2714WXYZ, RHSM2714WXYZ	Hand blender	Off	0.2	
27280-56, 27280WXYZ, 27281-56, 27281WXYZ,RHC2728, RHC2728WXYZ	Steam Iron	Off	0.3	
		auto-off When the appliance montionless and upright position willrun into auto off mode after 8 mins	0.3	
27360, 27360-70,RHK2736,2736WXYZ, 2736WXYZ-70, RHK2736WXYZ	Kettle	Off	0.0	
27370-56, 2737WXYZ, RHT2737, RHT2737WXYZ	Toaster	Off	0.0	
27450, 27450-70, 2745WXYZ, 2745WXYZ-70	Kettle	Off	0.4	
27550, 27560	Hand blender	Off	0.3	
27600, 27600-56, 27600WXYZ, RHC2760, RHC2760WXYZ	Handheld steamer	Off	0.3	

		Standby	0.4	
27610, 27620, 27630, RHAF2761, RHAF2762, RHAF2763, 2761WXYZ, 2762WXYZ, 2763WXYZ, RHAF2761WXYZ, RHAF2762WXYZ, RHAF2763WXYZ	Air fryer	Off	0.3	
27680, 27680-56, 27680WXYZ, RHAF2768, RHAF2768WXYZ	Air fryer	Off	0.4	
27740, 2774WXYZ, RHT82, RHT514, RHT82WXYZ, RHT514WXYZ	Toaster	Off	0.0	
27660, 27660-56, 2766WXYZ	Fabric Shaver	\	\	Battery operated, only charging with USB cable
20750, 20750-56, 2075WXYZ	Toaster	Off	0.0	
24080, 2408WXYZ	Toaster	Off	0.0	
24090, 24091, 24092, 24093, 24094, 2409WXYZ	Toaster	Off	0.0	
27390, 27390-56, 2739WXYZ	Toaster	Off	0.0	
28270 2827WXYZ RHMC30, RHMC30WXYZ	Rice cooker	Off	0.2	
RHMC20, RHMC20WXYZ,	Multicooker	Off	0.0	
22780, 22780-56, 2278WXYZ	Oven	Off	0.0	
23380, 23380-56, 2338W-XY	Toaster	Off	0.0	
26550, 2655WXYZ, 26910, 2691WXYZ, RHT2655BLK, RHT2655WXYZ	Toaster	Off	0.0	
25141, 2514WXYZ, 23230, 2323WXYZ	Toaster	Off	0.0	
14048-56, 14048, 1404WXYZ	Egg boiler	Off	0.0	
15199, 15199-56, 1519WXYZ	Hotplate	Off	0.0	
18790, 1879WXYZ, 28361, 2836WXYZ	Toaster	Off	0.0	
21391-56, 21395-56, 21396-56, 23510-56, 23520-56, 23610-56	Toaster	Off	0.0	
24570, 2457WXYZ	Deep Fryer	Off	0.2	
24580, 2458WXYZ	Deep Fryer	Standby	0.3	
20680, 20680-56, 20690-56, 20681-56, 20682, 20682-56	Coffee maker	Standby	0.8	
22740-56, 22750-56, 23200	Slow cooker	Off	0.0	
21680, 2168WXYZ	Toaster	Off	0.0	
21690, 2619WXYZ, 27250, 2725WXYZ	Toaster	Off	0.2	
23310-57, 23310-56, 23340-56, 2331X, 2331X-56, 2334X-56, 2334X	Toaster	Off	0.0	
17888-56, 1788WXYZ	Griddle	\	\	no power switch
23980, 23990, 27090, 26261, 26261-56, 23980WXYZ, 23990WXYZ, 27090WXYZ, 26261WXYZ, 26261-56WXYZ	Steam Iron	Off	0.0	
23991-56, 23991-56WXYZ	Steam Iron	Off	0.3	
		auto-off The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"	0.4	
23300, 23300-56, 2330W-XY	Steam Iron	Off	0.4	
		auto-off The appliance operated approximately 8mins (vertical) and turned into "OFF"	0.4	
22550-56, 2255WXYZ	Grill	Off	0.0	
21644, 2164WXYZ, 26061, 2606WXYZ, 21650, 2165WXYZ, 26070, 2607WXYZ	Toaster	Off	0.0	
28550, 28550-56, 28550WXYZ	Handheld Steamer	Off	0.5	
28040, 28040-56, 28040WXYZ, 28041, 28041-56, 28041WXYZ, 27410, 27410-56, 27410WXYZ	Handheld Steamer	Off	0.4	
		auto-off The appliance operated approximately 15mins and turned into "OFF"	0.4	
27220, 27220-56, 27220WXYZ	Handheld Steamer	Off	0.4	
		auto-off The appliance operated approximately 15mins and turned into "OFF"	0.4	
25591, 25591WXYZ, 25592, 25592WXYZ	Handheld Steamer	Off	0.0	
		auto-off The appliance operated approximately 15mins and turned into "OFF"	0.0	
24360, 2436SXYZ, 24360-70, 2436S-70XYZ, RHK112WHI, RHK112SYZ	Kettle	OFF	0.0	
24720WXYZ, 24710WXYZ, 24722WXYZ, RHBL5WXYZ	Table Blender	Off	0.1	
24310, 2431WXYZ, 23250, 2325WXYZ	Toaster	Off	0.0	
27500	Food Processor	Off	0.4	
26050, 26051, 26052, 26053, 26380, 26381, 26382, 26383, 26050-70, 26051-70, 26052-70, 26053-70, 26380-70, 26381-70, 26382-70, RHK700, RHK720	Kettle	Off	0.0	

