

REMINGTON ErP Data Sheet				
Column A	Column B	Column C	Column D	Column E
Model	Model name	Mode	Power Consumption (W)	Remarks
MB09A	Trimmer	Off	0.1	
PG05A	Personal Groomer	Off	0.1	
PG13A	Personal Groomer	Off	0.0	
RG019A	Personal Groomer	Off	0.3	
WPG4030,WPG403SXYZ	Personal Groomer	Off	0.1	
R17A	Shaver	Off	0.1	
		Off	0.1	
R09A, R10A	Shaver	Off	0.4	
XR1400, XR1410, R16A, XR140WSYZ, XR141WSYZ	Electric Shaver	Off	0.1	
PF7200, PF720WXYZ	Electric Shaver	Off	0.4	
CI1019, CI101WXYZ	Curling iron	Off	0.0	
CI6325	Curling iron	Standby	0.5	
CI27A		Off	0.3	
	Curling iron	Auto-Off	0.3	
CI19A		Off	0.5	
	Curling iron	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.4	
CI30A		Off	0.2	
	Multi Styler	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.2	
S31A		Off	0.4	
	Straightener	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.4	
S33A	Straightener	Off	0.3	
S38A		Off	0.2	
	Straightener	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.2	
S3500	Straightener	Off	0.2	
S-3500,CS-1500,S3500,CS1500, S-350WXYZ,CS-150WXYZ,S350WXYZ,CS150WXYZ		Off	0.2	
	Straightener	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.4	
S5500, S5520, S6500	Straightener	Standby	0.3	
S7710		Off	0.3	
	Straightener	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.3	
S9500, S9520, S44A, S45A		Standby	0.6	
	Straightener	Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.6	
D23A	Hair dryer	Off	0.1	
D18A	Hair dryer	Off	0.1	
D14A	Hair dryer	Off	0.0	
D1500, D150WXYZ	Hair dryer	Off	0.1	
D11A, D21A	Hair dryer	Off	0.1	
D2400, D240WXYZ	Hair dryer	Off	0.1	
D3015, D301WXYZ	Hair dryer	Off	0.1	
D5220, D522WXYZ	Hair dryer	Off	0.1	
D5210, D521WXYZ	Hair dryer	Off	0.6	
D35A	Hair dryer	Off	0.0	
D3190, D319WXYZ	Hair dryer	Off	0.0	
D26A	Hair dryer	Off	0.1	
AC9140, AC914WXYZ	Hair dryer	Off	0.1	
AC5999, AC599WXYZ	Hair dryer	Off	0.1	
AC9096	Hair dryer	Off	0.1	
AS27A		Off	0.2	
	Air styler	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.2	
AS15A	Air styler	Off	0.1	
HC10A	Hair Clipper	Off	0.1	
AS20A	Air styler	Off	0.1	

S1510	Straightener	Off	0.0	
H9100, H910WXYZ	Hair Setter	\	\	no power switch
H5600, H560WXYZ	Hair Setter	\	\	no power switch
MB08A	Trimmer	\	\	non-rechargeable battery operated
PG180, PG18WXYZ	Personal Groomer	\	\	non-rechargeable battery operated
NE3000, NE3140, NE3150, NE3350, NE3550, NE3560, NE3570, PG3560	Battery operated nose & ear trimmer	\	\	non-rechargeable battery operated
MB4120 MB412WXYZ	Hair Clipper	\	\	non-rechargeable battery operated
AS1220, AS122WXYZ	Air styler	Off	0.1	
		Standby	0.5	
CI95, CI95W1, CI9532, CI9532C	Curling iron	Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.5	
		Off	0.5	
CI12AA	Curling iron	Auto-Off The appliance operated approximately 60min and turned into "Off"	0.5	
		Standby	0.6	
S6500	Straightener	Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.6	
F26A	Shaver	Off	0.4	
R36A	Shaver	Off	0.4	
RG040A, RG041A, RG042A, RG043A	Hair Clipper	Off	0.0	
HC8000, HC9000, HC800WXYZ, HC900WXYZ	Hair Clipper	Off	0.3	
HC5810, HC5810L, HC5810WXYZ	Hair Clipper	Standby	0.5	
MB320C	Moustache & Beard Trimmer	Off	0.3	
D12A	Hair dryer	Off	0.0	
D13A	Hair dryer	Off	0.0	
MB01A	Trimmer	\	\	non-rechargeable battery operated
HG01A	Personal Groomer	\	\	non-rechargeable battery operated
KF40E	Hair Setter	\	\	no power switch
R29A&R33A, R34A, R35A, R33B, R34B, R35B	Personal Groomer	Off	0.1	
F10A	Personal Groomer	Off	0.3	
F25A	Personal Groomer	Off	0.0	
PR1230, PR1330, PR123WXYZ, PR133WXYZ,	Personal Groomer	Off	0.3	
R08A	Personal Groomer	Off	0.1	
PR1240, PR1250, PR1245, PR1340, PR1350	Personal Groomer	Off	0.0	
S17A	Straightener	Standby	0.4	
S30A	Straightener	Standby	0.4	
S12A, S6700	Straightener	Standby	0.4	
S1450	Straightener	off	0.0	
S2880, S2950	Straightener	off	0.0	
S37A	Straightener	standby	0.6	
S5500	Straightener	standby	0.6	
S6500	Straightener	standby	0.6	
HC-335, HC-340, HC09A, KH3000, HC-33WXYZ, HC-34WXYZ, HC09WXYZ, KH300WXYZ	Hair Clipper	\	\	Always in charging mode
R27A	Shaver	Off	0.3	
D16A	Hair dryer	Off	0.1	
D5000	Hair dryer	Off	0.1	
D25A	Hair dryer	Off	0.0	
AS13A	Air styler	Off	0.1	
AS300, AS404	Air styler	Off	0.1	
D28A	Hair dryer	Off	0.1	
D5215	Hair dryer	Off	0.1	
HC06A	Hair Clipper	Off	0.0	
AC8000, AC800WXYZ	Hair dryer	Off	0.1	
AC8820, AC882WXYZ	Hair dryer	Off	0.1	
RG018A	Trimmer	Off	0.3	
SF4810, WSF481VXYZ	Woman Shaver	\	\	non-rechargeable battery operated
F01A	Shaver	\	\	non-rechargeable battery operated
D15A	Hair dryer	Off	0.0	
AC5000, AC50WXYZ	Hair dryer	Off	0.1	
D7777, D777WXYZ	Hair dryer	Off	0.1	
AS22A, AS7050, AS7051, AS21A, AS19A, AS18A, AS17A	Air styler	Off	0.1	
D27A&D27B&D31A	Hair dryer	Off	0.1	
		Standby		
S32A, S32B	straightener	Auto-standby the appliance operated approximately 60min and turned into "Standby"	0.4	
R11A, R12A, R13A	Shaver	Off	0.3	

S18A	Straightener	Off	0.3	
WDF4820,WDF4830,WDF4840	Shaver	Off	0.3	
F03A WDF5030 WDF503SXYZ	Shaver	Off	0.4	

