

 
 
 


Russell Hobbs



classic toaster

instructions

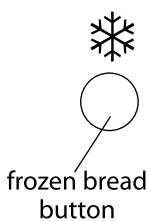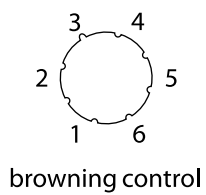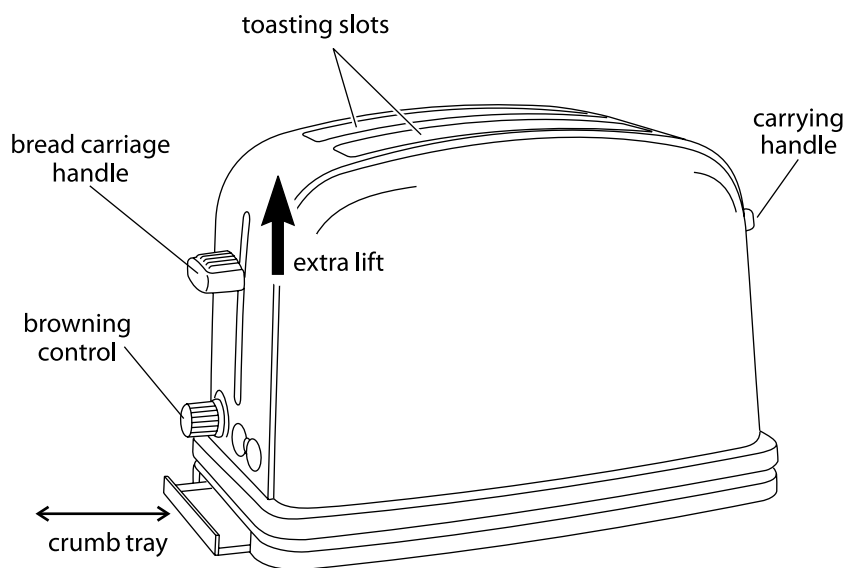

Read the instructions and keep them safe. If you pass the toaster on to anyone else, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the toaster is working.

important safeguards

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult.
- 2 Don't put the toaster in water or any other liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright on a firm, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 If overcooked, bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's in use.
- 6 The area round the toasting slots gets hot – don't touch!
- 7 Route the cable so it doesn't overhang, and can't be caught or tripped over accidentally.
- 8 The toaster must not be operated by an external timer or remote control system.
- 9 When using a single toasting slot, don't let anything get into the other slot, as both slots will be "live" when the bread carriage handle is lowered.
- 10 Don't let the toasting slots become covered during toasting, or while the toaster is still hot.
- 11 If bread gets jammed, unplug the toaster, let it cool down fully, then carefully remove the bread that's jamming it. Don't use anything sharp, such as a knife or fork, you may damage the elements.
- 12 Don't toast sandwiches or buttered items, the fillings or the butter may burn.
- 13 Don't use torn, curled, or misshapen bread, you may jam the toaster.
- 14 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 15 Clean the crumbs out of your toaster frequently. A build up of crumbs is unhygienic, and could cause a fire hazard.
- 16 Don't use the toaster unless the crumb tray is in place.
- 17 Keep the toaster and the cable away from sources of heat.
- 18 Don't use the toaster for any purpose other than those described in these instructions.
- 19 Don't use the toaster if it's damaged or malfunctions.
- 20 If the cable is damaged, return the toaster, to avoid hazard.



household use only


before using for the first time

- 1 Before using the toaster for the first time, you need to cure the elements. This will remove their protective coating.
- 2 This may smell a bit, but it's nothing to worry about. Just make sure the room is well ventilated.
- 3 Check that there's nothing in the slots, turn the browning control to max, and operate the toaster without bread.
- 4 When it's done, leave it to cool down fully, then you can use it normally.

toasting bread

- 5 Sit the toaster upright on a firm, level, heat-resistant surface.
- 6 Don't put it on or near anything that could be damaged even by moderate heat.
- 7 Route the cable so it doesn't overhang, and can't be caught or tripped over accidentally.
- 8 If overcooked, bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's in use.
- 9 Put the plug into the power socket. Switch the socket on, if it's switchable.
- 10 Turn the browning control to the required setting (1 = light, 6 = dark).
- 11 Put bread into the toasting slots (maximum thickness 25mm).
- 12 Press the bread carriage handle down fully – it'll only lock down if the toaster is connected to the electricity supply.
- 13 When it's done, the toast will pop up, and the elements will turn off.
- 14 The area round the toasting slots gets hot – don't touch!


eject

- 15 To stop toasting, press the  button. The toast will pop up, and the elements will turn off.

extra lift

- 16 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

frozen bread

- 17 This takes the guesswork out of toasting frozen bread.
- 18 Leave the browning control at the setting you use with normal, unfrozen bread.
- 19 Put the frozen bread into the slots, lower the bread carriage handle, to start the toaster, then press the  button.
- 20 The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- 21 The light will come on, and the elements will heat up.
- 22 When it's done, the toast will pop up, the light will go out, and the elements will turn off.

reheating toast

- 23 When reheating toast, use a low setting, otherwise you'll burn your toast. Don't reheat buttered toast, it may catch fire. Only reheat plain, unbuttered toast.

hints and tips

- 24 If you're toasting more than one slice of bread, make sure the slices are of similar size, thickness and freshness, otherwise they'll brown differently.
- 25 Old (yesterday's) bread contains less moisture than fresh bread, so makes crisper toast.
- 26 Old or thin bread cooks faster than fresh or thick bread, so you should use a lighter setting.
- 27 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs

- 28 Clean the crumbs out of your toaster frequently. A build up of crumbs is unhygienic and could cause a fire hazard.
- 29 Unplug the toaster and let it cool. Slide the crumb tray out and empty it. Wipe it with a damp cloth, dry, then slide it back into place under the toaster.
- 30 Don't use the toaster unless the crumb tray is in place.

care and maintenance

 
- 31 Unplug the toaster when not in use, before moving and before cleaning. Let it cool before cleaning and storing away.
- 32 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 33 Don't let anything enter the slots, you might damage the elements.
- 34 Don't put the toaster in liquid.
- 35 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

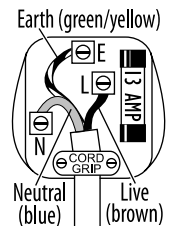

spare parts

Note the Model No (on the rating label) and the parts you need, ring 0845 658 9700 or email service@saltoneurope.com for prices, then purchase using VISA or MASTERCARD.

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service
(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns
Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.