



Russell Hobbs




instructions

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

important safeguards

Follow basic safety precautions, including:






 
 
- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
- 5 Don't touch the soleplate, and keep away from the steam coming from it.
- 6 Take care when emptying the iron – it may contain hot water.
- 7 Don't use the iron in the vicinity of children.
- 8 Use the iron on a stable, level, heat-resistant surface, preferably an ironing board.
- 9 Don't leave the iron unattended while plugged in, or while it's standing on the ironing board. It could be knocked over by you, by a child, or by a pet.
- 10 Unplug the iron before filling, before cleaning, and after use.
- 11 Don't fill the iron directly from the tap, use the jug.
- 12 Don't fill past **max**, or water may escape in use.
- 13 Sit the iron upright when you're not ironing, and when you store it away.
- 14 Leave the iron upright to cool before cleaning.
- 15 Unplug the appliance when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 16 Don't fit any attachment or accessory other than those we supply.
- 17 Keep the appliance and the cable away from hotplates, hobs or burners.
- 18 Don't use the iron for any purpose other than those described in these instructions.
- 19 Take care not to scratch the soleplate – avoid buttons, zips, etc.
- 20 The appliance has a protective thermal fuse, which will blow if it overheats. If this happens, the appliance will stop working, and must be returned for repair.
- 21 Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- 22 If the cable is damaged, it must be returned, in order to avoid hazard.

household use only

before using for the first time


- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.

preparation

- 1 Check for textile care symbols (   ).
- 2 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures .

switch on

- 3 Sit the iron on its heel.
- 4 Put the plug into the power socket (switch the socket on, if it's switchable).
- 5 The iron beeps every time you press a button, to acknowledge the command.

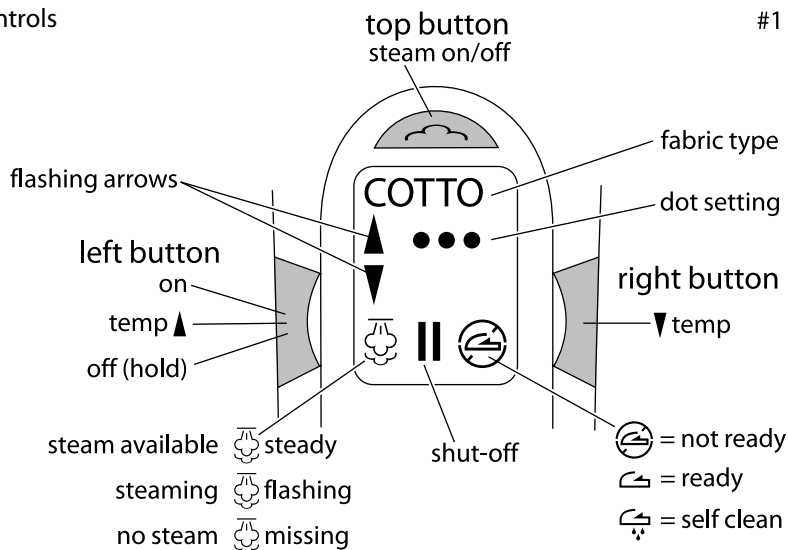

6 Press and release the **left button**, to turn the display on.

7 The display will show ACRYL at the top, a single dot ● just below it, a flashing **up** arrow ▲, and the ⊖ symbol.

8 Complicated? – not really, it's just telling you what's going on:

ACRYL this is the type of fabric (acrylic) associated with this temperature, the others are (in ascending temperature order) NYLON, POLY (polyester), BLEND (polyester/cotton), WOOL, COTTO (cotton), and LINEN

- this is the traditional temperature dot setting, the range is ●, ●●, ●●●, and sometimes **max**

▲ the **up** arrow flashes to tell you that the temperature is rising towards the chosen temperature, the other is the **down** arrow ▼, which flashes to tell you that the temperature is falling towards the chosen temperature – you'll see this if you reduce the temperature from, say, LINEN to COTTO

⊖ this tells you that the iron isn't ready for use – when it's ready for use, the symbol changes to ⊞ (the flashing arrow ▲ or ▼ disappears at the same time)

☁ this isn't showing yet because, you can't use steam – you're outside the temperature range, you'll just get water spotting – when it's on, you're in the right temperature range for steam, so you can press the top button to turn the steam on if you need it (then it'll flash to show that you're steaming)

|| when this flashes, it means the iron hasn't moved for a bit (30 seconds with the soleplate down or on its side, 8 minutes upright) so it's turned itself off

set the temperature

9 Press and release the **left button** to increase the temperature.

10 The range is ACRYL (low), NYLON, POLY, BLEND, WOOL, COTTO, LINEN (high).

11 Each press moves the display to the next fabric type.

12 Press and release the **right button** to reduce the temperature.


temperature setting guide

label marking	temperature dot setting	display
cool – nylon, acrylics, polyester	•	ACRYL_NYLON
warm – wool, polyester mixtures	••	POLY_BLEND_WOOL
hot – cotton, linen	•••	COTTO_LINEN
do not iron		

✱ If the instructions on the fabric label differ from this guide, follow the instructions on the label.


reducing temperature

13 Reducing the temperature takes a bit longer, as the element has to lose the heat it has built up, so be patient. It's best to organise your ironing so that you don't need to reduce the temperature ("preparation" page 2, point 2).

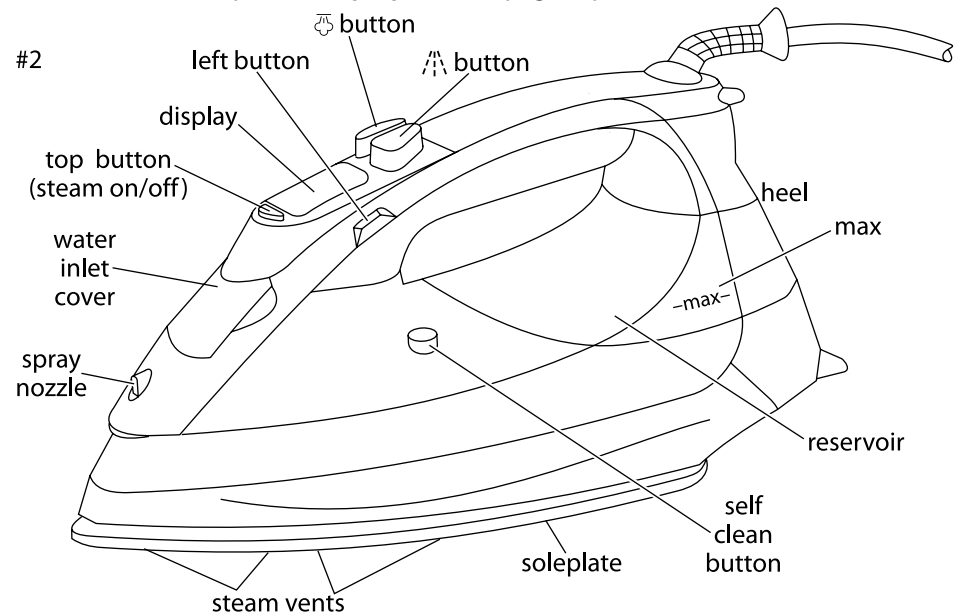




filling (#3)

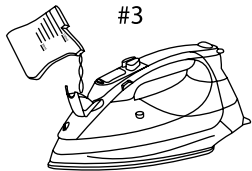
- 14 The iron may be used with tap-water, but if you live in a hard water area, you should use distilled water (not chemically descaled water).
- 15 If you buy distilled water, check that it's marketed as suitable for use in irons.
- 16 Unplug the iron, and sit it on its soleplate.
- 17 Flip the water inlet cover forwards, and pour water from the jug into the water inlet.
- 18 Pour slowly, and try to pour down one side of the inlet, to allow the air in the reservoir to escape, otherwise you'll cause an air lock and the water will overflow.
- 19 Don't fill past **max**, or water will escape in use.
- 20 Wipe up any spillage.




steam ironing



- 21 Steam is only available from the BLEND setting upwards. At lower temperatures, you'll only get water spotting, so the steam function is blocked below BLEND.
- 22 The  symbol will show on the display to tell you that steam is available.
- 23 Press the **top button** to turn the steam on.
- 24 The  symbol will flash to let you know you're steaming.
- 25 To turn the steam off, press the **top button** again – the  symbol will stop flashing.


spray

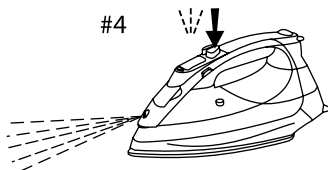- ★ Water spotting affects some fabrics. Test this out on a hidden part of the fabric.
- 26 This works with dry or steam ironing, as long as there's water in the reservoir.
- 27 Check that there's water in the reservoir.
- 28 Lift the iron off the fabric.
- 29 Aim the spray nozzle at the fabric.
- 30 Press the  button.
- 31 You may initially have to press it 2 or 3 times to pump water through the system.




shot of steam

- 32 This works with dry or steam ironing, as long as there's water in the reservoir.
- 33 Check that there's water in the reservoir.
- 34 Check that the  symbol is showing.
- 35 Lift the iron off the fabric.
- 36 Press the  button.
- 37 You may initially have to press it 2 or 3 times to pump water through the system.
- 38 Leave 5 seconds between shots, to let the temperature build up.

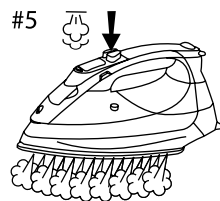

dry ironing

- 39 You can dry iron at the ACRYL, NYLON or POLY settings, because the steam function doesn't work on these settings. If you want to iron at BLEND or higher, then you must empty the reservoir first, to avoid spontaneous bursts of steam.
- 40 Press and hold the left button for 2 seconds to turn the display off, then unplug the iron.
- 41 Hold it over a sink or basin.
- 42 Flip the water inlet cover open.

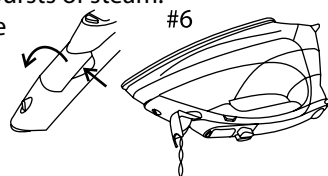


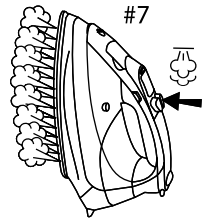
caution the water may be hot.

- 43 Carefully, turn the iron upside down, and empty the water into the sink/basin.
- 44 Wipe any spillage off the iron before use.

vertical steaming

- 45 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.
- 46 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.
- 47 Check that there's nothing behind the fabric that may be damaged by the steam.
- 48 Check that pockets, turn-ups, and cuffs are empty.
- 49 Check that there's water in the reservoir.
- 50 Use the **left button** to increase the temperature to LINEN (max).

- 51 Hold the iron close to (but not touching) the fabric.
- 52 Press the  button (you're using the "shot of steam" function vertically).
- 53 You may initially have to press it 2 or 3 times to pump water through the system.
- 54 Leave 5 seconds between shots, to let the temperature build up.




after use





- 55 Press and hold the left button for 2 seconds to turn the display off.
- 56 Unplug the iron.
- 57 Hold it over a sink or basin.
Flip the water inlet cover open.

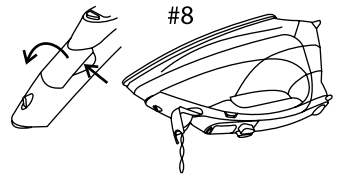caution the water may be hot.

- 58 Carefully, turn the iron upside down, and empty the water into the sink/basin.
- 59 Sit the iron on its heel.
- 60 Leave it to cool down completely.
- 61 When it's cold, wipe off any moisture, and wind the cable round the heel.
- 62 Store the iron on its heel, to avoid corrosion and damage to the soleplate.




self clean

- 63 To prevent scale building up, use the self clean function regularly, at least monthly in normal water areas, more often in hard water areas.
- 64 The display will change from  or  to  after about 5 hours steaming, to let you know that you should self clean now.
- 65 You'll need a basin or a large bowl to catch the water coming out of the soleplate.
- 66 Fill the reservoir half full (not to **max**).
- 67 Plug the iron in and switch the display on.
- 68 Increase the temperature to the COTTO setting.
- 69 Sit the iron on its heel, and wait till the  arrow stops flashing.
- 70 Press and hold the left button for 2 seconds to turn the display off.
- 71 Unplug the iron.
- 72 Now hold the iron over the basin or bowl, with the soleplate down.

caution keep clear of the escaping water and steam

- 73 Press the self clean button, keep it pressed, and gently move the iron to and fro, over the basin or bowl.
- 74 Water and steam will wash scale through the soleplate, and into the basin/bowl.
- 75 When the reservoir is empty, release the self clean button.
- 76 Unplug the iron, and sit it on its heel to cool.
- 77 When it's cold, wipe off any moisture, wipe the soleplate clean, then wind the cable round the heel.
- 78 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

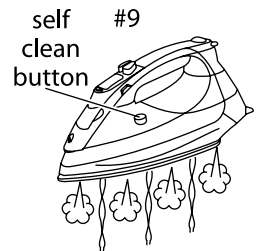

cleaning

- 79 Unplug the appliance when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.

- 80 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 81 Remove spots from the soleplate with a little vinegar.
- 82 Take care not to scratch the soleplate.
- 83 Don't put the appliance in water or any other liquid.
- 84 Don't use harsh or abrasive cleaning agents or solvents.
- 85 Don't use a descaling solution, you'll damage the iron.

auto shut-off

- 86 If the iron is motionless, the element will switch itself off after about 30 seconds with the soleplate down or on its side, or about 8 minutes if it's upright.
- 87 The iron will beep, then a flashing symbol **II** will show in the bottom centre of the display.
- 88 To switch on again, lift it up, tilt it forward, then sit it upright to return to its operating temperature (25-45 seconds, depending on the setting)
- 89 No settings are lost during auto shut-off.

language setting


- 90 The display is currently set up to use English. You may change this to German or French, if you wish.
- 91 Press and hold the **right button** for 2 seconds – the display will show EN at the top left.
- 92 Press and release the **right button** once, and this will change to dE (German), press and release the **right button** once more, and it'll change to FR (French), press and release the **right button** once more, and it'll change to EN (English) again.
- 93 To use the selected language, either press the **left button** once, or wait 3 seconds.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

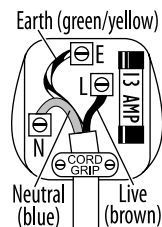

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

Hit www.russellhobbs.co.uk for more products.