




instructions

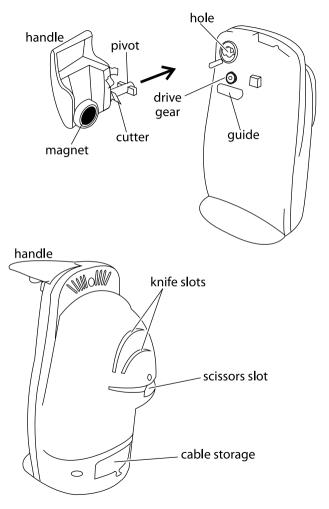

Read the instructions and keep them safe. Pass them on if you pass the can opener on. Remove all packaging, but keep it till you know the can opener works.

important safeguards

Follow basic safety precautions, including:

- 1 This appliance must only be used by a responsible adult. Use and store it out of reach of children.
- 2 Don't put the appliance in liquid. Don't use it in a bathroom, near water, or outdoors.
- 3 Keep fingers clear of the cutter and drive gear, even when you're not using it.
- 4 Don't touch the cut edges of the opened can or lid.
- 5 Don't leave the lid attached to the magnet as its sharp edges could cause injury.
- 6 Don't try to open aluminium cans, ring pull cans, aerosol cans, or other pressurised cans.
- 7 Don't try to open cans of flammable materials (paint, etc.).
- 8 If a can gets jammed, unplug the can opener before trying to free it.
- 9 Don't start to open a can near a seam or a corner.
- 10 Don't use the opener and the sharpener at the same time. You may overload the motor – you may injure yourself.
- 11 Don't run it for more than 1 minute at a time, it'll overheat. After 1 minute, let it cool for 15 minutes before reusing.
- 12 Don't put it on or near a hotplate, hot hob or burner, or in a heated oven.
- 13 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 14 Unplug before moving or cleaning, and when not in use.
- 15 Don't leave the mixer unattended while plugged in.
- 16 Don't use accessories unless we supply them.





- 17 Don't use the opener for any purpose other than those described in these instructions.
- 18 Don't use the opener if it's damaged or malfunctions.
- 19 If the cable is damaged, return the can opener, to avoid hazard.

household use only

fit the handle

- 1 Hold the handle vertically, with the pivot, cutter and magnet at the bottom.
- 2 Put the pivot into the big hole, and move the handle to your left, to push the pivot into the small hole.
- 3 Rotate the handle ninety degrees clockwise, so it rests on the top of the body.

positioning

- 4 Sit the can opener on a stable, level surface, near a power socket.
- 5 Pull the cable fully out of the cable storage area in the back of the body and plug it into the power socket (switch the socket on, if it's switchable).

opening cans

- warning Don't try to open aluminium cans, aerosol cans, pressurised cans, or cans of flammable materials.
 - 6 Wipe the top of the can clean before starting to open it.
 - 7 Rotate the handle ninety degrees anti-clockwise, till it's vertical.
 - 8 Hold the can with its lip on top of the drive gear and its side against the guide.
 - 9 Rotate the handle clockwise till the can is held firmly between the cutter and the drive gear.
- Don't start to open a can near a seam or a corner it may jam.

- 10 Press the handle down firmly to pierce the can and start the motor.
- 11 At this stage, you may let go of both can and handle, though heavy cans or cans with corners may need to be supported/guided.
- 12 As the opener completes its cut, you should support the can. The motor will stop automatically and the magnet will hold the can lid.
- 13 Rotate the handle anti-clockwise to release the can.
- 14 Slide the can lid from the magnet carefully, to avoid cutting your fingers.

sharpening

- 15 Rotate the handle clockwise to start the motor, and hold it down.
- caution this starts the drive gear keep your fingers away from the drive gear and cutter
- 16 Rotate the handle anti-clockwise to stop the motor.
- 17 Don't use it for more than 1 minute at a time, then let it cool for 15 minutes.
- 18 The grinding wheel and slots are designed to keep the blade at the optimum grinding angle.

knives

- 19 Insert the handle end of the blade into one of the knife slots, and draw the blade gently through the slot.
- 20 Do the same with the other slot, to grind both sides of the blade.
- 21 The whole of the cutting edge must come into contact with the grinding wheel.
- 22 If the blade is curved, you may need to raise the knife handle during the operation, to guide the curved section into contact with the grinding wheel.

scissors

- 23 Insert the handle end of one of the blades into the scissors slot, and draw the blade gently through the slot.
- 24 Do the same with the other blade, to grind both blades.

repeat as necessary

25 You may need to repeat the process, depending on the hardness of the blade and the state it's in.

don't overdo it

26 Take care not to over-sharpen, you'll reduce the life (and the width) of the blade – "little and often" is the secret of keeping a good blade sharp.

care and maintenance

- 1 Unplug before cleaning.
- 2 Rotate the handle ninety degrees anti-clockwise till it's vertical, then a bit more, to force the pivot from the small hole to the big hole. You can now pull the handle out.


caution be wary of the cutter - it's sharp

- 3 Wash the handle in warm soapy water.
- 4 Rinse and dry it thoroughly before refitting.
- 5 Wipe the body with a soft, damp cloth, with a little washing-up liquid, if necessary.
- 6 Don't put the body in water or any other liquid.
- 7 Don't put any part of this appliance in a dishwasher.
- 8 Don't use harsh or abrasive cleaning agents or solvents.
- 9 Don't oil or grease the drive gear or cutting blade.



connection

This product doesn't need an earth. Use a 13A BS1362 fuse in a 13A BS1363 plug. Fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

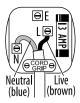

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service Salton Europe Ltd Failsworth Manchester M35 0HS

email: service@saltoneurope.com

telephone: 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products