


WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

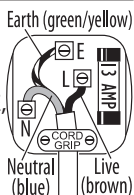

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the Model No. to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong.

If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.co.uk

telephone: 0845 658 9700 (local rate number)

➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward and a chance to win £10,000
visit www.productregister.co.uk/rhobbs




Russell Hobbs



instructions


£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

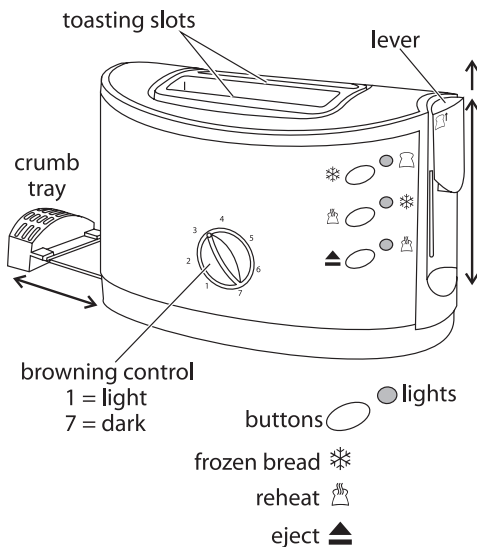

Read the instructions, keep them safe, pass them on if you pass the toaster on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 4 The slot surrounds get hot – don't touch!
- 5 If you're only using one slot, leave the other slot empty, as both slots will become "live".


- 6 Unplug the toaster when not in use.
- 7 Don't put anything on top of the toaster.
- 8 Check that the crumb tray is fitted.
- 9 Sit the toaster upright on a stable, level, heat-resistant surface.
- 10 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 11 Don't toast sandwiches, buttered items, torn, misshapen, or oversized slices of bread. They may jam the toaster and/or catch fire.
- 12 If bread gets jammed, unplug the toaster, let it cool, then carefully remove the bread.
- 13 Don't use the toaster for any purpose other than those described in these instructions.
- 14 Don't use it with a timer or remote control.
- 15 Don't use it if it's damaged or malfunctions.
- 16 If the cable is damaged, return the toaster, to avoid hazard.

household use only

BEFORE FIRST USE

- Check the slots are empty, set the browning level to 7, and use the toaster without bread.
- It may smoke a bit, but it's nothing to worry about – ensure the room is well ventilated.



TOASTING BREAD

- 1 Put the plug into the wall socket.
- 2 Set the browning level (1 = light, 7 = dark).
- 3 Put bread into the slots (max 25mm thick).
- 4 Press the lever down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 5 The  light glows, and the elements heat.
- 6 When it's done, the toast pops up, the light and elements go off.



EJECT

- 7 To stop the toaster mid-cycle, press .

FROZEN BREAD

- 8 Leave the browning control at your usual setting, insert the frozen bread, lower the lever, then press .
- 9 The  light glows, and the toasting time is altered automatically to give the same level of browning you get with unfrozen bread.

REHEATING TOAST

- 10 Leave the browning control at your usual setting, insert the bread, lower the lever, then press .
- 11 The  light glows, the toast gets a short burst of heat, then it pops up.
- 12 Only reheat plain, "unbuttered" toast.

HINTS AND TIPS

- 13 Old (yesterday's) bread has less moisture, so makes crisper toast.
- 14 Old bread, thin slices, and sweet bread products (tea cakes, fruit loaf, etc.) brown faster – use a lower setting.

CARE AND MAINTENANCE

- 15 Unplug the toaster and let it cool.
- 16 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 17 Don't let anything enter the slots.
- 18 Slide the crumb tray out, empty it, wipe it with a damp cloth, dry it, then replace it.