

2. Wipe all surfaces with a clean damp cloth.
3. Keep the connectors dry.
4. Open the lid.
5. Pull the hook at the bottom of the filter away from the lip behind the spout, and slide the filter up and out of the guides on either side of the spout.
6. Rinse the filter under a running tap while brushing with a soft brush.
7. Lower the filter into the guides, and press down, to force the hook over the edge of the lip behind the spout.
8. Close the lid.

Descale regularly, at least monthly

The suppressor is designed to reduce the noise made by the boiling water. If you allow scale to build up, it won't be able to work properly, and the kettle will become noisier. Descale the appliance with a proprietary descaler. Follow the instructions on the package of descaler. Products returned under guarantee with faults due to scale will incur a repair charge.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

CUSTOMER SERVICE

If you ring, have the model number to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice.

If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS
email: service@russellhobbs.com
telephone: 0845 658 9700 (local rate number)

ONLINE

www.russellhobbs.co.uk for more products

REGISTER ONLINE FOR –



£10,000 prize draw,
EXTRA year guarantee,
FREE rewards gallery

Visit www.russellhobbs.co.uk/productregister/

You must register within 28 days of purchase.



Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/mobbs
Register online now!
See back for details



Read the instructions, keep them safe, pass them on if you pass the kettle on.

Remove all packaging before use.

IMPORTANT SAFEGUARDS


Follow basic safety precautions, including:


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.


Don't fill above max, or the kettle may spit boiling water.

Use the kettle only with the stand supplied.

If the cable is damaged, return the kettle, to avoid any hazard.

 The surfaces of the appliance will get hot.

-  Don't put the kettle, stand, cable, or plug in liquid.
- Keep the kettle, stand and cable away from the edges of worktops.

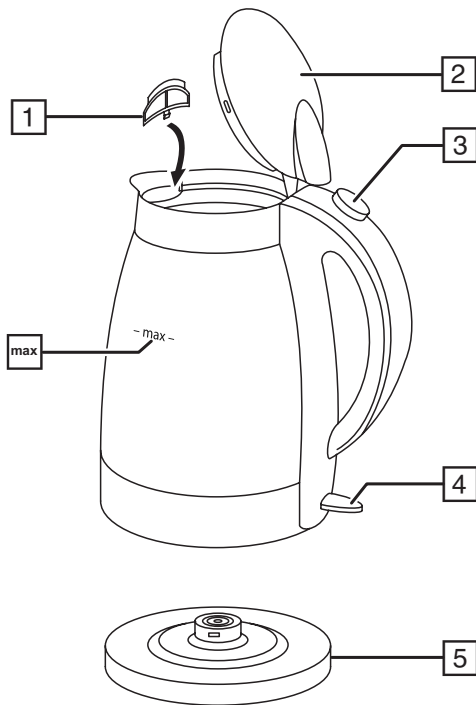

- Unplug the stand when not in use.
- Don't use the kettle without fitting the filter.
- Use the kettle only for heating water.
- Don't use it if it's damaged or malfunctions.

HOUSEHOLD USE ONLY

PARTS

- Filter
- Lid
- Lid release
- Switch
- Stand

BEFORE FIRST USE

Fill to **max**, boil, discard the water, then rinse. Do this twice to remove any manufacturing dust, etc.

FILLING

- Open the lid.
- Fill with at least 1 cup of water, but not above **max**.
- Refit the lid.

USING YOUR KETTLE

- Put the stand on a stable, level surface. Wind excess cable beneath the stand.
- Plug the stand into the wall socket.
- Put the kettle on the stand.
- Move the switch to **I**. The light will come on and the kettle will start to heat.
- When it boils, the kettle will switch off.
- To switch off manually, move the switch to **O**, or simply lift the kettle off the stand.

Note: When you lift your kettle, you may see moisture on the stand. This is normal and is caused by the steam used to switch your kettle off automatically.

BOIL DRY PROTECTION

If your kettle boils dry, a safety cut-out device will automatically switch it off. If this happens, unplug your kettle and allow it to cool down until the cut-out resets itself. Allowing your kettle to boil dry will shorten the life of the element.

CARE AND MAINTENANCE

- Unplug the stand, and let the kettle cool before cleaning.