


- 28 Push the top of the filter towards the spout, to force the top hooks under the top of the spout..
- 29 Close the lid.

WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to Earth (green/yellow) or E, the blue wire to Neutral (blue) or N, and the brown wire to Live (brown) or L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

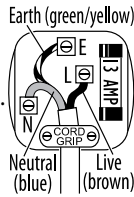

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester M35 0HS
email: service@russellhobbs.com
telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

REGISTRATION AND PRIZE DRAW

Collect your free reward and a chance to win £10,000 visit www.productregister.co.uk/rhobbs




Russell Hobbs



instructions


£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

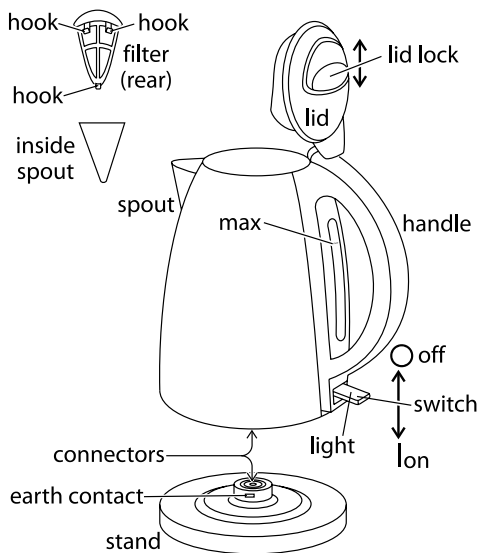

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

STOP IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Keep the kettle, stand, and cable away from the edges of worktops.
- 4 Put the stand on a stable, level surface.
- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.

- 7 Don't use the kettle without fitting the filter.
- 8 Use the kettle only with the stand supplied (and vice versa).
- 9 Don't use the kettle for any purpose other than heating water.
- 10 Don't use it with a timer or remote control.
- 11 Don't use the kettle if it's damaged or malfunctions.
- 12 If the cable is damaged, return the kettle, in order to avoid hazard.

household use only

BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.

FILLING

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above **max**.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.

SWITCHING ON

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Move the switch to **I** – the light will glow, and the kettle will heat up.

SWITCHING OFF

- 8 When it boils, the kettle will switch off.
- 9 To switch off manually, move the switch to **O**, or simply lift the kettle off the stand.

GENERAL

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't tilt the kettle backwards, water might get on to the control area.
- 12 If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.

- 13 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 14 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER

- 15 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 16 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

CARE AND MAINTENANCE

- 17 Unplug the stand, and let the kettle cool.
- 18 Wipe inside and outside with a damp cloth.
- 19 Keep all connectors and sockets dry.

DESCALE REGULARLY

- 20 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.

CLEANING THE FILTER

- 21 Switch the kettle off, and let it cool.
- 22 Open the lid.
- 23 Grip the top of the filter, and push it down and into the kettle to release it.
- 24 Now you can lift it out of the kettle.
- 25 Rinse the filter under a running tap while brushing with a soft brush.
- 26 Rinse the kettle, in case scale particles have fallen inside.
- 27 Lower the filter into the kettle, and engage the bottom hook in the bottom of the spout.