

27 Slide the filter down into the guides.


28 Replace the lid.

WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

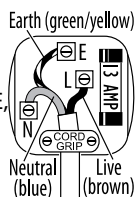

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE


www.russellhobbs.co.uk for more products



Russell Hobbs




instructions

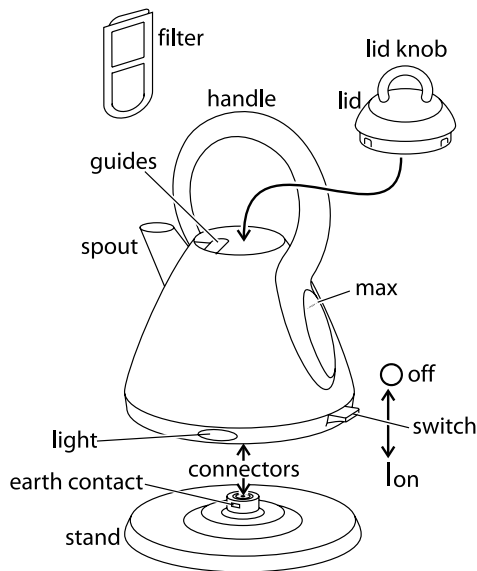

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Unplug the stand when not in use.
- 4 Keep the kettle, stand, and cable away from the edges of worktops.
- 5 Take care when removing the lid – steam will escape from the opening.

- 6 Switch off before opening the lid.
- 7 Put the stand on a stable, level surface.
- 8 Wind excess cable beneath the stand.
- 9 Don't use the kettle without fitting the filter.
- 10 Use the kettle only with the stand supplied.
- 11 Don't use the kettle for any purpose other than heating water.
- 12 Don't use it with a timer or remote control.
- 13 Don't use the kettle if it's damaged or malfunctions.
- 14 If the cable is damaged, return the kettle, to avoid hazard.

household use only

BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.

FILLING


caution steam escapes when you lift the lid

- 1 To minimise exposure to steam, grip the rear of the handle with one hand.
- 2 Grip the lid knob with the other hand.
- 3 Pull the lid up and away from the kettle.
- 4 Fill with at least 2 cups of water, but don't fill above **max**.
- 5 If overfilled, the kettle may spit boiling water.
- 6 Replace the lid, press down, to lock it closed.

SWITCHING ON

- 7 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 8 Move the switch to | – the light will glow, and the kettle will heat up.

SWITCHING OFF

- 9 When it boils, the kettle will switch off.
- 10 To switch off manually, move the switch to , or simply lift the kettle off the stand.

GENERAL

- 11 Pour slowly and don't over-tilt the kettle.
- 12 Don't tilt the kettle backwards, water might get on to the control area.
- 13 If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.
- 14 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 15 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

USE WITH INSUFFICIENT WATER

- 16 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 17 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

CARE AND MAINTENANCE

- 18 Unplug the stand, and let the kettle cool.
- 19 Wipe inside and outside with a damp cloth.
- 20 Keep all connectors and sockets dry.

DESCALE REGULARLY

- 21 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.

CLEANING THE FILTER

- 22 Switch the kettle off, and let it cool.
- 23 Remove the lid.
- 24 Pull the filter out of its guides.
- 25 Brush the filter, under a running tap.
- 26 Rinse the kettle, to remove scale particles.