




Russell Hobbs



instructions

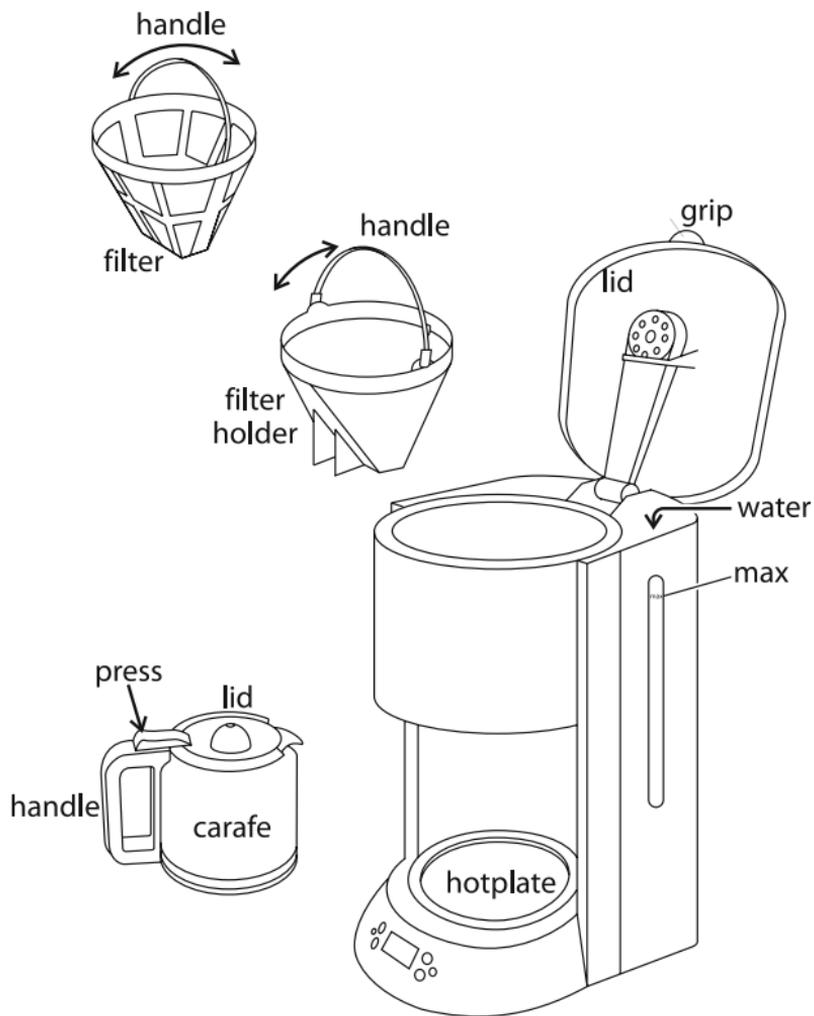

buttons ○
lights ●

☕ ○
● ○
h

TIMER CLOCK
12:00

○ ↑
○ ●
min

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 Keep the appliance and cable away from the edges of worktops and out of reach of children.
- 5 Sit the appliance on a stable, level, heat-resistant surface.
- 6 Unplug the appliance when not in use.
- 7 If you need to stop the coffee maker while it's brewing, press the  button.
- 8 Don't use accessories or attachments other than those we supply.
- 9 Don't use the appliance for any purpose other than those described in these instructions.
- 10 This appliance must not be operated by an external timer or remote control system.
- 11 Don't operate the appliance if it's damaged or malfunctions.
- 12 If the cable is damaged, return the appliance, to avoid hazard.



household use only

BEFORE USING FOR THE FIRST TIME

- Fill the reservoir to **max**, and run the appliance without coffee.
- Let it cool, discard the water, then use it normally.

FILLING

- 1 Remove the carafe from the hotplate.
- 2 Use the grip to open the lid, and expose the reservoir.
- 3 Fill the reservoir with at least 2 cups of water, but not above **max**.
- 4 Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water, plus 2 for the pot.

- 5 Close the lid.
- 6 Replace the carafe on the hotplate.

SWITCH ON

- 7 Put the plug into the power socket (switch the socket on).

COFFEE NOW

- 8 Ignore the clock.
- 9 Press the  button – the  light will glow.
- 10 Shortly afterwards, coffee will start to drip into the carafe.
- 11 When it's done, the hotplate will keep the carafe warm.

AUTO SHUT-OFF

- 12 About two hours after brewing, the coffee maker will shut down.
- 13 If left for much more than an hour, chemical changes in the coffee liquor will affect the flavour. It's best to make a fresh pot.

FINISHED?

- 14 Press the  button (if the coffee maker hasn't already shut down).
- 15 The  light will go out.
- 16 Unplug, and let the coffee maker and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

A QUICK CUP

- 17 You can remove the carafe at any time.
- 18 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you'll find it's more than enough time to pour a couple of cups.

COFFEE LATER

- 19 Check that the  light is off. If it isn't, press the  button to turn it off.
- 20 Set the clock to the correct time:
 - a) Press the  button – CLOCK will appear on the display.
 - b) Use the **h** and **min** buttons to set the correct hour and minute.
- 21 Set the timer to the time you want to start brewing:
 - a) press the  button again – TIMER will show on the display
 - b) Use the **h** and **min** buttons to set the correct hour and minute.

- c) wait till TIMER disappears from the display
- ★ If you pause for more than 8 seconds between button presses, the coffee maker will revert to “normal”, and show the time – you’ll have to start again.
-

ACTIVATION

- 22 You’ve set the clock, you’ve set the timer – now you need to activate it.
- 23 Check that there’s water in the reservoir and coffee in the filter.
- 24 Press the  button, to activate the timer – the  light will glow.
- 25 When the set time is reached, the  light will go out, the  light will glow, and brewing will start.
- 26 To cancel the timer before brewing starts, press the  button.
- 27 To stop the coffee maker while it’s brewing, press the  button.
- 28 The coffee maker will retain its settings till it’s unplugged. It’ll reset to 12:00 next time you plug it in.
-

CARE AND MAINTENANCE

- 29 Unplug the appliance and let it cool down before cleaning or storing away.
- 30 Use the grip to open the lid.
- 31 Lift out the filter.
- 32 Tip the contents of the filter into the bin.
- 33 Lift out the filter holder.
- 34 Press the lever at the rear of the carafe lid to open it.
- 35 Wash the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 36 Clean the outside surfaces of the appliance with a damp cloth.
- 37 Replace the filter holder.
- 38 Drop the filter into the filter holder.
- 39 Close the lid.
- 40 Don’t put any part of the appliance in a dishwasher.
-

DESCALING

- 41 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.

- 42 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
- 43 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

instructions – more instructions are available on our website:


<http://www.russellhobbs.com/ifu/550980>

UK WIRING INSTRUCTIONS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

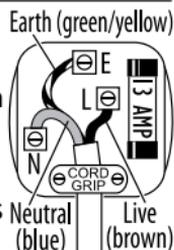



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street,
Failsworth, Manchester M35 0HS

email: servicedepartment@eu.spectrumbrands.com

telephone: 0845 658 9700 (local rate number)

➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products
