


- 23 Rinse the filter under a running tap while brushing with a soft brush.
- 24 Fit the top of the filter into the top of the spout.
- 25 Press the flange towards the catch, to lock it.

UK WIRING INSTRUCTIONS


The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

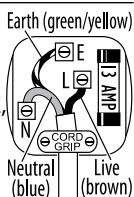

SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

 
www.russellhobbs.co.uk for more products



Russell Hobbs




instructions and guarantee

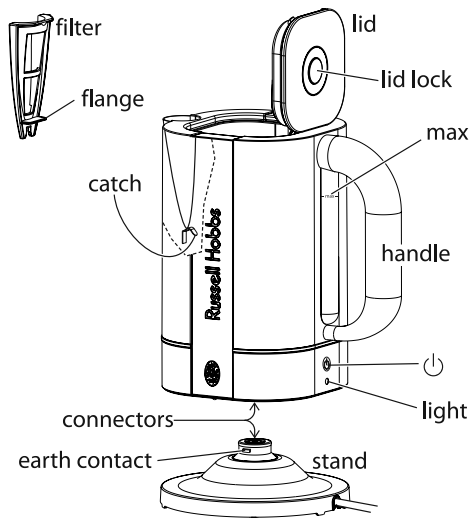

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 4 Put the stand on a stable, level surface.

- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.
- 7 Don't use the kettle for any purpose other than heating water.
- 8 Use the kettle only with the stand supplied (and vice versa).
- 9 This appliance must not be operated by an external timer or remote control system.
- 10 Don't operate the kettle if it's damaged or malfunctions.
- 11 If the cable is damaged, return the kettle, in order to avoid hazard.

household use only

 
TOUCH CONTROLS

- You don't need to press the button hard – a light touch is enough.

 
FILLING

- 1 Press the lid lock to open the lid.
- 2 Fill with at least 2 cups of water, but not above max.
- 3 If you overfill, the kettle may spit boiling water.
- 4 Close the lid, and press down to lock it.

SWITCHING ON

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Press the  button. The light will come on, and the kettle will heat up.

SWITCHING OFF

- 8 When the water boils the kettle will switch off and the light will go out.
- 9 To switch off manually, press the  button.
- 10 Lifting the kettle off the stand will also switch the kettle off.

GENERAL

- 11 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 12 You may see discolouration on the floor of the kettle. Don't worry – it's due to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER

- 13 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 14 To prevent the kettle cycling on and off, remove the kettle from the stand and let it cool before replacing it on the stand.

CARE AND MAINTENANCE

- 15 Unplug the stand from the wall socket, and let the kettle cool down fully before cleaning.
- 16 Wipe the kettle, inside and out, with a damp cloth
- 17 Keep the connectors dry.

DESCALE REGULARLY

- 18 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

CLEANING THE FILTER

- 19 Switch the kettle off, and let it cool.
- 20 Press the lid lock to open the lid.
- 21 Push the flange upwards, then pull the filter away from the catch.
- 22 Lower the filter into the kettle, to release it from the spout.