
 




## BAGEL

- 15 Toast only the brown outsides of bagels.
- 16 Set the browning control at its usual setting.
- 17 Split the bagel, and insert the halves with the brown sides facing the outside elements.
- 18 Press the  button, then the  button.
- 19 When you've done, press the  button to return to normal use.

## CARE AND MAINTENANCE


- 20 Unplug the toaster and let it cool down.
- 21 Wipe outer surfaces with a damp cloth.
- 22 Remove and empty the crumb tray.
- 23 Press and release the crumb tray to unlock it.
- 24 Remove and empty the crumb tray.
- 25 Wipe with a damp cloth, dry, then replace it in the toaster.

## UK WIRING INSTRUCTIONS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

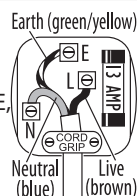

## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [service@russellhobbs.com](mailto:service@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)

## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## ONLINE

 
[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



# Russell Hobbs



instructions and guarantee

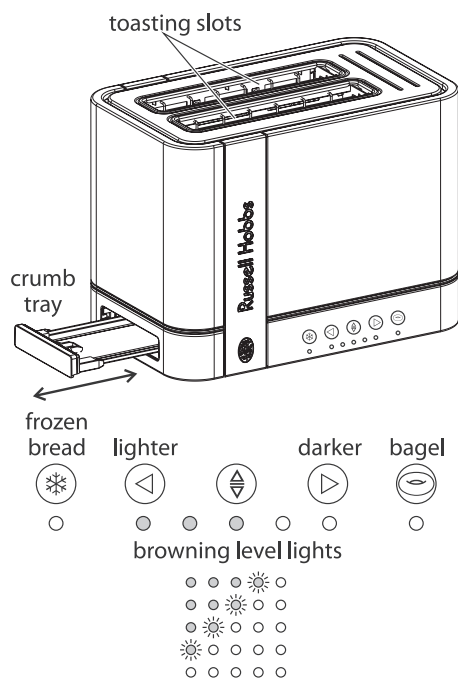

Read the instructions, keep them safe, pass them on if you pass the toaster on. Remove all packaging.

### STOP IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store the toaster out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright on a firm, level, heat-resistant surface.



- 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 5 The area round the toasting slots gets very hot – don't touch!
- 6 Don't put anything on top of the toaster.
- 7 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread.
- 8 Don't toast buttered, misshapen, curled, or torn bread, it may jam, or catch fire.
- 9 Unplug the toaster when not in use.
- 10 Don't use the toaster unless the crumb tray is fitted and closed.
- 11 Don't use the toaster for any purpose other than those described in these instructions.
- 12 This toaster must not be operated by an external timer or remote control system.
- 13 Don't operate the toaster if it's damaged or malfunctions.
- 14 If the cable is damaged, return the toaster, to avoid hazard.

### household use only

#### TOUCH CONTROLS

- Don't press the buttons – just touch them.

#### SLEEP MODE

- If you don't touch the controls for 5 minutes, the lights will go out, to save electricity.
- Press any button to wake the toaster.

#### BEFORE FIRST USE

- Set the browning level to maximum (all browning level lights on), and run the toaster empty, to cure the new elements. It may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

### TOASTING BREAD

- 1 Put the plug into the power socket.
- 2 The lights will run a self-check routine, then 3 browning level lights will stay on.
- 3 Use the buttons at either end of the browning level lights to lighten ◁ or darken ▷ the toast.
- 4 The browning level lights will glow/go off to indicate the level chosen.
- 5 The more lights, the darker the toast.
- 6 Put bread into the toasting slots (maximum thickness 29mm).
- 7 Press the button – the bread will descend, and the elements will heat up.
- 8 The browning level lights will count down:
  - a) the rightmost light will flash, the lights to its left will glow
  - b) the rightmost light will go out, the light to its left will flash
  - c) this will carry on till all the lights are out
  - d) the toast will ascend

### EJECT

- 9 To stop toasting, press the button.
- 10 The toast will ascend.

### FROZEN BREAD

- 11 Put the bread into the toasting slots. Leave the browning control at its usual setting.
- 12 Press the button, then the button.
- 13 The light will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- 14 When you've done, press the button to return to normal use.