

DESCALING

28 Descale regularly, at least monthly. Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler.

★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

instructions – more detailed instructions are available on our website:

 
<http://www.russellhobbs.com/ifu/550979>

UK WIRING INSTRUCTIONS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

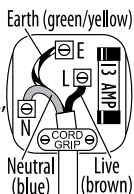

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

➔ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

 
www.russellhobbs.co.uk for more products



Russell Hobbs



instructions and guarantee

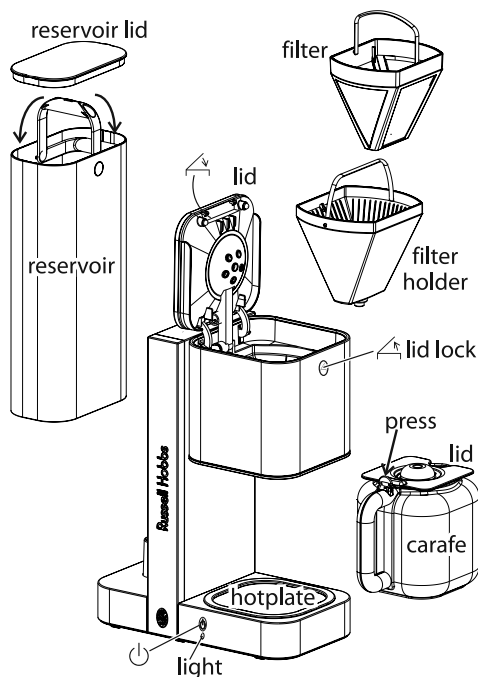

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the appliance on a stable, level, heat-resistant surface.



- 4 Keep the appliance and cable away from the edges of worktops.
- 5 Don't touch hot surfaces (carafe, hotplate).
- 6 Unplug the appliance when not in use.
- 7 Don't use accessories unless we supply them.
- 8 Don't use the appliance for any purpose not described in these instructions.
- 9 Don't use the appliance via an external timer or remote control system.
- 10 Don't use it if it's damaged or malfunctions.
- 11 If the cable is damaged, return the appliance, to avoid hazard.

household use only



TOUCH CONTROLS

- Don't press the button – just touch it.



BEFORE FIRST USE

- Fill to **max**, run without coffee, allow to cool, discard the water, then use it normally.

 


FILLING

- 1 Remove the carafe from the hotplate.
- 2 Lift the lid off the reservoir.
- 3 Fill with at least 2 cups of water, but not above **max**.
- 4 Alternatively, lift the reservoir off, fill it in the kitchen, and carry it back to the appliance.
- 5 Replace the reservoir in the appliance.
- 6 Replace the reservoir lid.
- 7 Press the lid lock to open the lid (↖).
- 8 Put filter-ground coffee into the filter. The amount depends on the type of coffee and individual taste, but we suggest 2 rounded teaspoons per cup of water.
- 9 Close the lid, and press down to lock it (↘).
- 10 Replace the carafe on the hotplate.

 


SWITCHING ON

- 11 Put the plug into the power socket.
- 12 Press the  button – shortly afterwards, coffee will start to drip into the carafe.
- 13 The hotplate will keep it warm for 2 hours.



FINISHED?

- 14 Press the  button – the light will go out.
- 15 Unplug, and let the appliance and carafe cool down fully before cleaning, or for about 10 minutes before refilling.



AUTO SHUT-OFF

- 16 About 2 hours after brewing, the coffee maker will shut down
- 17 After about an hour, chemical changes in the coffee liquor start to affect flavour. It's best to pour it away and make a fresh pot.



A QUICK CUP

- 18 You can remove the carafe at any time.
- 19 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds.



CARE AND MAINTENANCE

- 20 Unplug the appliance and let it cool.
- 21 Press the lid lock to open the lid (↖).
- 22 Empty the filter holder into the bin.
- 23 Wash the carafe and filter holder in warm soapy water, then rinse.
- 24 Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
- 25 Clean the appliance, inside and out, with a damp cloth.
- 26 Close the lid, and press down to lock it (↘).
- 27 Don't put any part of the appliance in a dishwasher.