




# Russell Hobbs




instructions

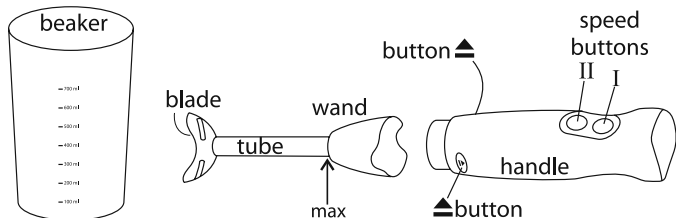

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

## **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the handle in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 The wand blade is sharp and it rotates at high speed.
- 4 So, to avoid serious injury:
  - a) don't switch on till the blade is inside the container
  - b) switch off before lifting the blade from the container
  - c) don't touch the blade – even when cleaning
  - d) don't plug in till just before use
  - e) unplug immediately after use
  - f) don't leave the appliance unattended while plugged in
- 5 When using the wand in hot liquids, don't let the blade break the surface at an angle, in case you spray liquid outside the container.
- 6 Don't use the wand in hot oil – splashes can cause a nasty burn.
- 7 Route the cable so it doesn't overhang, and won't trip or catch.
- 8 Don't fit an attachment or accessory other than those we supply.
- 9 Don't use the appliance for any purpose other than those described in these instructions.
- 10 Don't wrap the cable around the blender.
- 11 Don't operate the appliance if it's damaged or malfunctions.
- 12 If the cable is damaged, return the appliance, to avoid hazard.




**household use only**

---

## FITTING/REMOVING THE WAND

---

- 1 Unplug the appliance before fitting or removing the wand.
- 2 To fit, push the wand on to the end of the handle
- 3 To remove, press the  buttons, and pull the wand off the handle.

---

## SPEED BUTTONS

---

 
- 4 Put the plug into the power socket (switch it on, if it's switchable).
- 5 Press the top button (I) for low speed, release to switch off.
- 6 Press the bottom button (II) for high speed, release to switch off.
- 7 Generally, large quantities, thick mixes, and a high ratio of solids to liquids suggest longer timings and low speed.
- 8 Smaller quantities, thinner mixes, and more liquids than solids suggest shorter timings and high speed.

---

## THE WAND

---

- 9 Generally, the wand can do anything a normal blender can do, but faster, and with less washing up – blend, pulp or purée ingredients in the pan or bowl you're going to cook them in.
- 10 Whatever container you use, make sure it's on a stable, flat surface, and support it with your free hand, to prevent it moving.
- 11 Don't immerse the wand past the top of the tube.
- 12 Use the wand in bursts of a few seconds, otherwise you risk overdoing it.
- 13 Don't run the motor continuously for more than 30 seconds, then let it cool for 1 minute before re-using it.
- 14 Avoid spraying/splashing:
  - a) hold the wand straight
  - b) don't switch on till it's inside the food container
  - c) switch off before lifting it out of the container
  - d) with liquids, switch on and off with the blade under the surface



---

## CARE AND MAINTENANCE

---

- 15 Switch the appliance off, and unplug it.
- 16 Take great care with the blades – don't touch, use a nylon brush.
- 17 Wipe the handle surfaces with a soft damp cloth.
- 18 Don't put any part of the appliance in a dishwasher.



## RECIPES

---

### **coriander pesto** (dip, topping or sauce)

4 handfuls fresh leaf coriander

4 cloves fresh garlic

120g pine nuts

250ml olive oil

120g freshly grated Parmesan

salt and pepper

Put the coriander, garlic, pine nuts, and a bit more than half the oil into the bowl. Fit the bowl lid, and process at moderate speed till it looks smooth.

To adjust the thickness, add a little oil, give it a short burst, and repeat till it's right.

Transfer to a bowl, stir in the Parmesan, taste, and adjust the seasoning.

Serve as a dip (fairly thick), as a topping for soup (not too thick, but not runny), or tossed through warm pasta (fairly runny).


### **recipes are available on our website:**

**blending** – <http://www.russellhobbs.com/ifu/550931>

**smoothies** – <http://www.russellhobbs.com/ifu/550941>

## **WIRING INSTRUCTIONS UK plugs only**

The product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

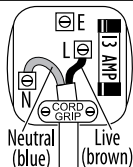

## **ENVIRONMENTAL PROTECTION**

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.







---

## SERVICE

---

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service  
Spectrum Brands (UK) Ltd  
Fir Street  
Failsworth  
Manchester  
M35 0HS

email: [servicedepartment@eu.spectrumbrands.com](mailto:servicedepartment@eu.spectrumbrands.com)

telephone: 0845 658 9700 (local rate number)

---

## GUARANTEE

---

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

---

## ONLINE

---

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products