 
 


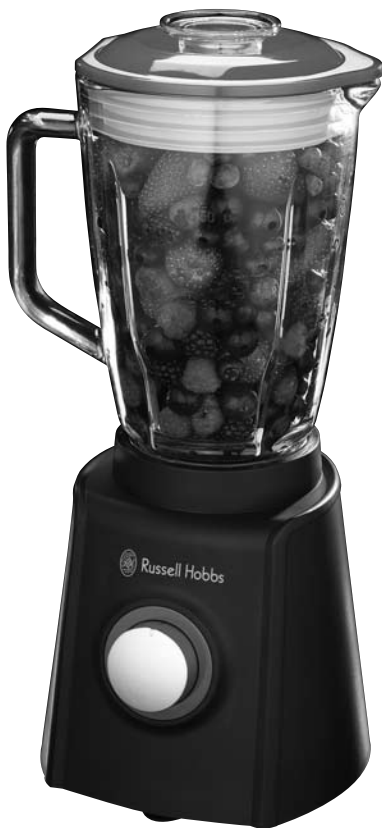

Russell Hobbs



instructions

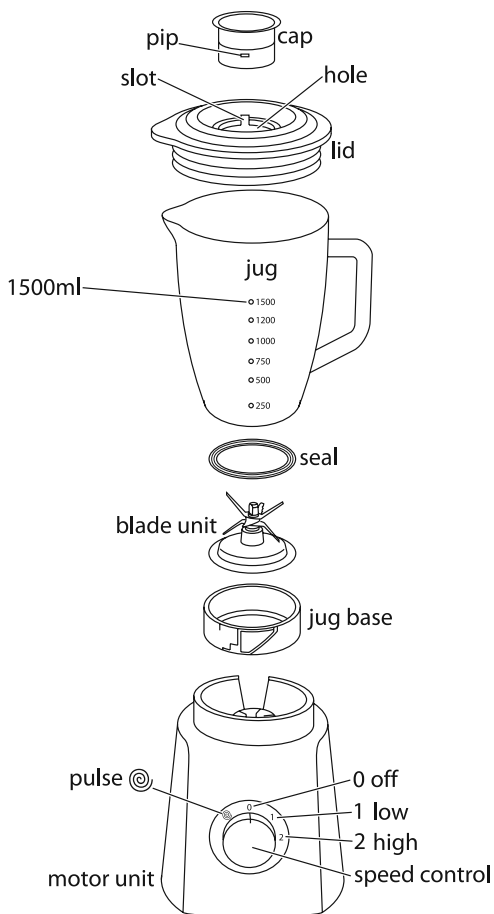

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the motor unit in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Unplug before dismantling or cleaning.
- 4 Switch off (O) before fitting the jug to the motor unit.
- 5 Switch off (O) and wait till the blades come to a complete stop before removing the lid from the jug.
- 6 Take great care when handling the blade unit. 
- 7 Don't use the blender unless the lid is in place.
- 8 Don't fill with anything hotter than you can comfortably handle (i.e. liquid temperature below 40°C).
- 9 Don't put your hand into the jug, even when cleaning.
- 10 Don't put any other object (spoon, spatula, etc.) into the jug while the blender is plugged in.
- 11 Don't leave the blender unattended while plugged in.
- 12 Sit the motor unit on a dry, firm, level surface.
- 13 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 14 Don't let the jug overflow. If liquid gets under the motor unit, it may be sucked into the motor, damaging it.
- 15 Don't fill the jug above the 1500ml mark – if you do, the contents may force the lid off when you start the motor.
- 16 Don't run the motor for more than 2 minutes, or it may overheat. After 2 minutes, switch off for at least 2 minutes, to let it cool.
- 17 Don't use the blender for any purpose other than those described in these instructions.
- 18 Don't use the blender if it's damaged or malfunctions.
- 19 If the cable is damaged, return the blender, to avoid hazard.

household use only

PREPARATION

- 1 Sit the motor unit on a dry, firm, level surface.
 - 2 Route the cable so it doesn't overhang, and won't trip or catch.
 - 3 Lower the jug on to the motor unit, then turn the jug clockwise, to lock it in place.
 - 4 Pull the lid up and off the jug – it's stiff, because of the seal.
 - 5 Put the ingredients into the jug. Don't fill it past the 1500ml mark, or the contents may force the lid off when you start the motor.
-


FIT THE LID

- 6 Put the lid on the jug, and push it down to seal it.
 - 7 Align the pips on the sides of the cap with the slots in the hole in the lid, put the cap into the hole, and turn clockwise to lock it.
 - 8 Don't run the blender without the cap.
-

POWER UP

- 9 Check that the speed control is set to 0.
 - 10 Put the plug into the power socket (switch it on, if it's switchable).
-

SPEED CONTROL

- 11 Turn the speed control clockwise (1 = low, 2 = high).
 - 12 Turn it back to 0 to turn the motor off.
 - 13 Use low speed (1) for lighter applications, using mainly liquid ingredients, and high speed (2) for heavier applications, using mainly solid ingredients.
 - 14 Turning it anti-clockwise to  will give you a short burst at high speed, for more precise control. In this direction, the control is spring-loaded. When you let go, it'll return to 0.
 - 15 Don't run the motor for more than 2 minutes, it may overheat. After 2 minutes switch off for at least 2 minutes, to recover.
-


ADDING INGREDIENTS

- 16 To add ingredients while the blender is working, turn the cap anti-clockwise to unlock it, lift it off, pour the new ingredients via the hole, then replace the cap, and turn it clockwise to lock it.
- 17 Check that the added ingredients don't push the volume in the jug past 1500ml.

FINISHED?

- 18 Turn the speed control to 0, and wait till the blades stop moving.
- 19 Turn the jug anti-clockwise to unlock it, and lift it off the motor unit.

CRUSHING ICE

- 21 Start with half to threequarters of a cup of ice, or 4 to 6 cubes, and add 15ml (1 tablespoon) of fresh cold water.
- 22 Put the lid on the blender, then:
 - a) turn the speed control to  for a second or so, then release it
 - b) check the state of the ice
 - c) repeat till the ice is the consistency that you need

CARE AND MAINTENANCE

- 23 Switch off (0) and unplug before cleaning.
- 24 Clean as soon after use as possible, to prevent residues setting inside the jug.
- 25 Turn the jug anti-clockwise to unlock, and lift it off the motor unit.
- 26 Wash the jug, lid and cap in warm soapy water, rinse well, then leave the jug to drain and air dry.
- 27 Use a brush to clean the blades.
- 28 Wipe the outside of the motor unit with a clean damp cloth.
- 29 We don't recommend using a dishwasher. The extreme environment inside the dishwasher can affect the surface finishes.

BLADE UNIT

- 30 You may remove the blade unit for cleaning.
- 31 Grip the jug handle with one hand.
- 32 Grip the jug base with the other hand.
- 33 Unscrew the jug from the jug base.
- 34 Carefully, lift the blade unit out of the jug base.
- 35 Lift the seal away from the blade unit.
- 36 Wash the seal and blade unit in soapy water, rinse, and air dry.
- 37 Replace the seal round the blade unit.
- 38 Replace the blade unit in the jug base.
- 39 Screw the jug into the jug base.



RECIPES

berry fruity smoothie

300ml apple juice

90g raspberries

12 strawberries, stalks removed

4 ice cubes

Put everything into the jug, ice cubes last. Run at low (1) for 15 seconds, then high (2) for 15 seconds.

recipes are available on our website:

 
blending – <http://www.russellhobbs.com/ifu/550931>

smoothies – <http://www.russellhobbs.com/ifu/550941>



WIRING INSTRUCTIONS UK plugs only

The product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

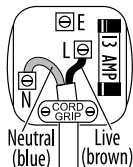

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service
Spectrum Brands (UK) Ltd
Fir Street
Failsworth
Manchester
M35 0HS

email: servicedepartment@eu.spectrumbrands.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products