 
 
 
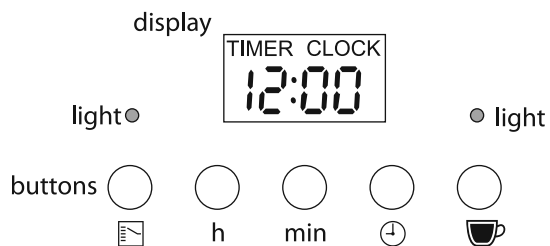 


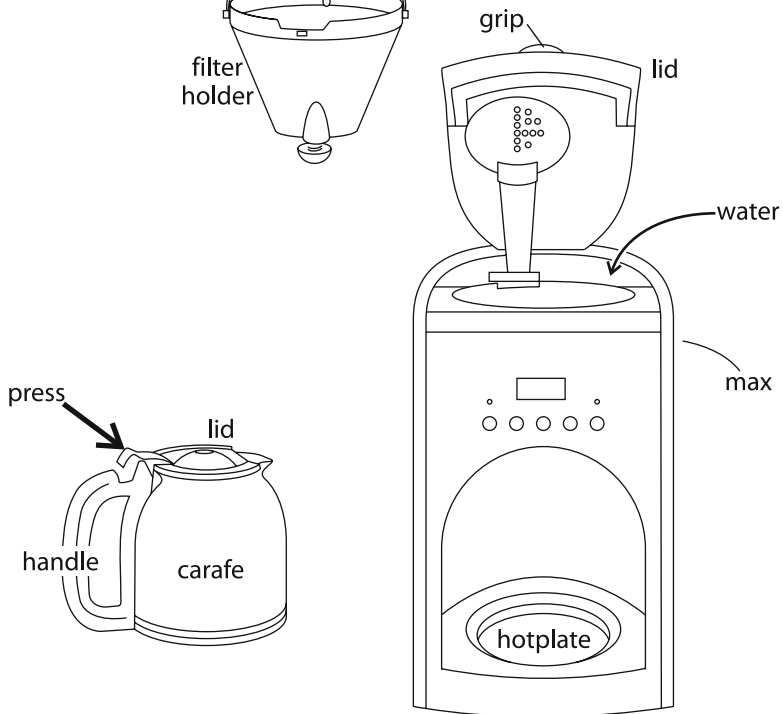

Russell Hobbs

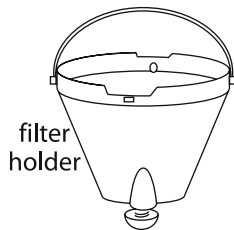

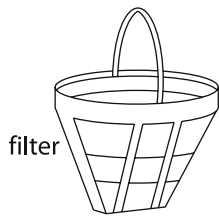

instructions



Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 The scald hazard lasts long after boiling. Keep the appliance and cable away from the edges of worktops and out of reach of children.
- 5 Sit the appliance on a stable, level, heat-resistant surface.
- 6 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 7 Unplug the appliance when not in use, before moving and before cleaning.
- 8 Fill with at least 2 cups of water, but not above the **max** mark.
- 9 Put the carafe on the hotplate before switching the coffee maker on.
- 10 If you need to stop the coffee maker while it's brewing, press the  button.
- 11 Let the appliance cool for about 10 minutes before adding water or re-using, to avoid spitting.
- 12 Don't put the carafe in a microwave oven.
- 13 Don't try to adjust the metal band round the carafe, you'll break the glass.
- 14 Keep the appliance and the cable away from hotplates, hobs or burners.
- 15 Don't use accessories or attachments other than those we supply.
- 16 Don't use the appliance for any purpose other than those described in these instructions.
- 17 This appliance must not be operated by an external timer or remote control system.
- 18 Don't operate the appliance if it's damaged or malfunctions.
- 19 If the cable is damaged, return the appliance, to avoid hazard.

household use only

BEFORE USING FOR THE FIRST TIME

- Fill the reservoir to the **max** mark, and run the appliance without coffee.
- Let it cool, discard the water, then use it normally.

GROUND COFFEE

- 1 If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

STORING COFFEE

- 2 Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

BOTTLED WATER

- 3 If you use bottled water, check that there are no added ingredients, flavourings, etc., and use “still” water, not “sparkling”. The carbon dioxide which gives the “sparkle” will adversely affect the flavour of your coffee.

MILK

- 4 If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

TASTE

- 5 Don't be tempted to reheat coffee in the appliance. You'll damage the appliance and the coffee will be undrinkable.
- 6 Clean the filter holder and carafe after each use. Residue from a previous brew will spoil your coffee.

PREPARATION

- 7 Sit the appliance on a stable, level, heat-resistant surface.
- 8 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 9 Don't plug it in yet.



FILLING

- 10 Use the grip to open the lid, and expose the reservoir.
- 11 Use the carafe to fill the reservoir, to avoid overfilling.
- 12 Remove the carafe from the hotplate.
- 13 Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
- 14 Fill the reservoir with at least 2 cups of water, but not above the **max** mark.
- 15 Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water.
- 16 Close the lid.
- 17 Replace the carafe on the hotplate.



 
SWITCH ON









- 18 Put the plug into the power socket (switch the socket on, if it's switchable).

COFFEE NOW



- 19 Ignore the clock.
- 20 Press and release the  button – the  light will glow.
- 21 Shortly afterwards, coffee will start to drip into the carafe.
- 22 When it's done, the hotplate will keep the carafe warm.

COFFEE LATER


- 23 Check that the  light is off. If it isn't, press the  button to turn it off.
- 24 Set the clock to the correct time.
 - a) Press and release the  button.
 - b) CLOCK will appear on the display.
 - c) Use the **h** and **min** buttons to set the correct hour and minute.

- 25 Set the timer to the time you want to start brewing.
- a) Press and release the  button again.
 - b) TIMER will appear on the display.
 - c) Use the **h** and **min** buttons to set the correct hour and minute.
- ★ If you don't press either the **h** or **min** buttons within 8 seconds, the coffee maker will revert to "normal", and the time will show. You'll have to press the  button, and start again.
- 26 Press and release the  button – the  light will glow.
- 27 When the set time is reached, the  light will go off, the  light will come on, and brewing will start.
- 28 If you want to cancel the timer before brewing has started, press the  button.
- 29 If you want to stop the coffee maker while it's brewing, press the  button.

FINISHED?

- 30 Press and release the  button – the  light will go off.
- 31 Unplug, and let the appliance cool down fully before cleaning, or for about 10 minutes before refilling.

AUTO SHUT-OFF

- 32 About 2 hours after brewing, the coffee maker will shut down. The hotplate and the  light will go off.
- 33 If left for much more than an hour, chemical changes in the coffee liquor start to affect the flavour. It's best to pour it away and make a fresh pot.

A QUICK CUP

- 34 If you want a quick cup of coffee before the brewing cycle has finished:
- 35 You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
- 36 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee.
- 37 When you replace the carafe on the hotplate, the non-drip valve opens, to let any remaining coffee through.

CARE AND MAINTENANCE

- 38 Unplug the appliance and let it cool down before cleaning or storing away.
- 39 Use the grip to open the lid.
- 40 Lift out the filter.
- 41 Tip the contents of the filter into the bin. Don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 42 Lift out the filter holder.
- 43 You may clean the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 44 Clean the outside surfaces of the appliance with a damp cloth.
- 45 Replace the filter holder.
- 46 Drop the filter into the filter holder.
- 47 Close the lid.

- 48 Don't put any part of the appliance in a dishwasher.
 - 49 Don't put the appliance in water or any other liquid.
 - 50 Don't use harsh or abrasive cleaning agents or solvents.
-


DESCALING

- 51 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
- 52 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
- 53 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler. When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water, but without coffee. Discard the water to ensure that no chemical residues are left in the coffee maker.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

WIRING INSTRUCTIONS UK plugs only

 
The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

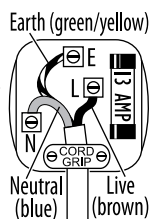

WHEELIE BIN SYMBOL

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Limited, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products