




Russell Hobbs



instructions

£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

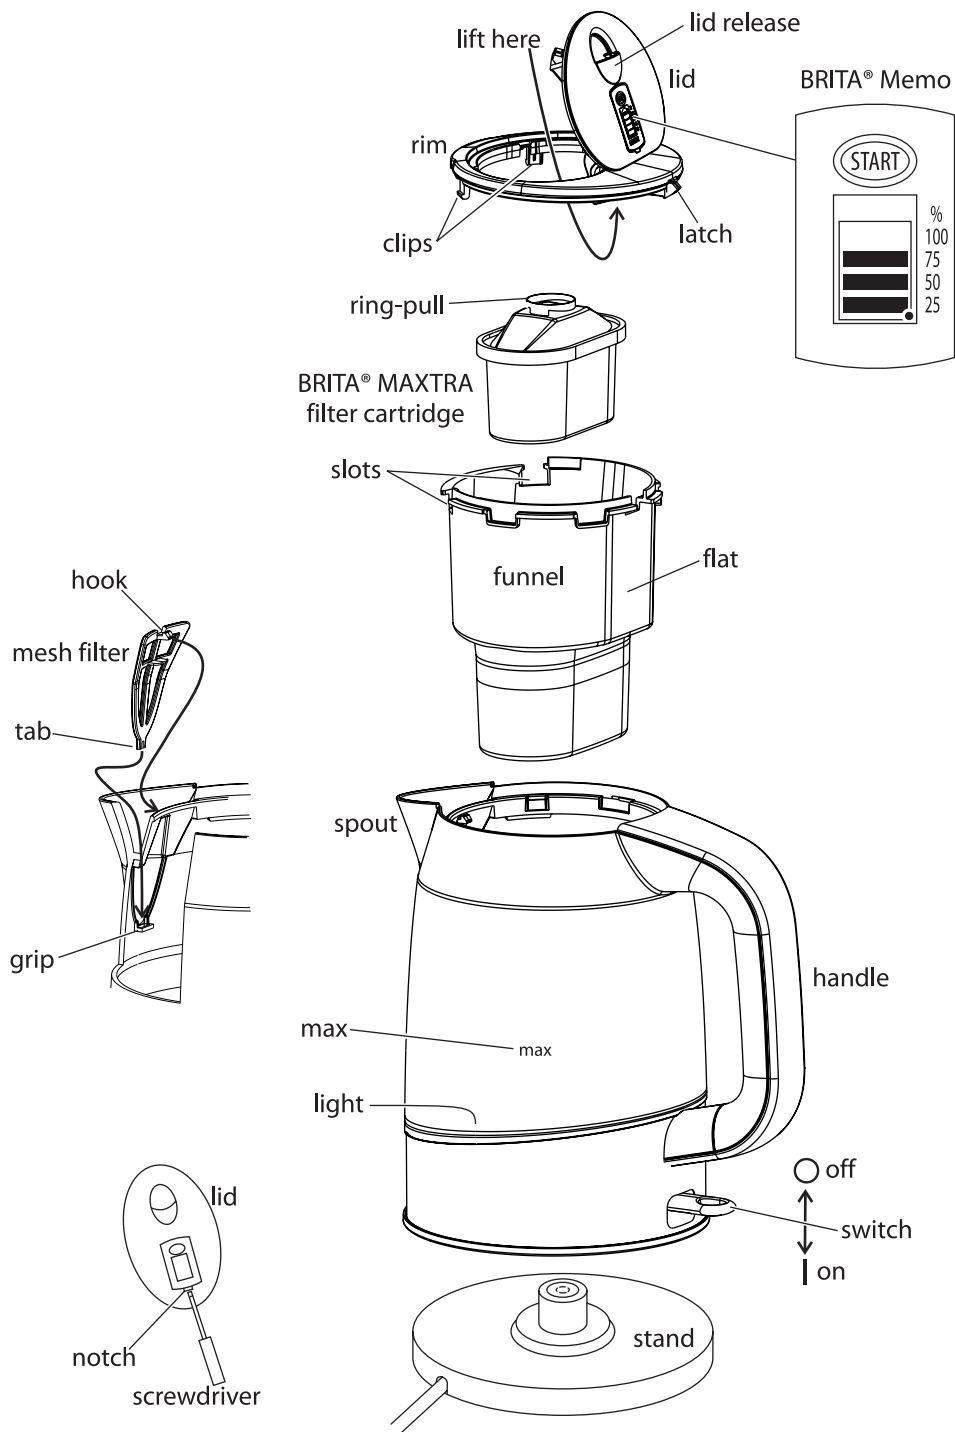

Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.

BRITA® MAXTRA FILTER CARTRIDGE

You can find more information about BRITA® filter cartridges and the BRITA® Memo in the BRITA® Information Guide supplied with the kettle.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult.
Use and store the appliance out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces. Use the handle and lid knob.
- 4 Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 5 Don't use the kettle without fitting both the mesh filter and the filter cartridge, otherwise the kettle may spit boiling water.
- 6 Put the stand on a stable, level surface.
- 7 Wind excess cable beneath the stand.
- 8 Unplug the stand when not in use, before moving and before cleaning.
- 9 Don't use the kettle for any purpose other than heating water.
- 10 Use the kettle only with the stand supplied (and vice versa).
- 11 Use only BRITA® MAXTRA filter cartridges.
- 12 This appliance must not be operated by an external timer or remote control system.
- 13 Don't operate the appliance if it's damaged or malfunctions.
- 14 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.



household use only

BRITA® MAXTRA FILTER CARTRIDGE

- The filter cartridge contains ion exchange resin and activated carbon.
- Reduces limescale and substances, eg. chlorine, that affect taste and odour.
- For your wellbeing, reduces metals such as lead and copper that may be present in your water due to domestic plumbing.
- Reducing the impurities makes the water look and taste better, and the reduction in limescale helps your kettle too.

★ Remember – water is a food, it goes off. Use filtered water within two days.

BEFORE USING FOR THE FIRST TIME

- Pull the lid release up, to open the lid.
- Remove the filter cartridge from inside the kettle, and jump to point 3 below.

PREPARING THE FILTER CARTRIDGE

- 1 Pull the lid release up, to open the lid.
- 2 To remove a used filter cartridge, hold the funnel firmly with one hand, grip the ring-pull with the other hand, and pull the filter cartridge up and out.

- 3 Remove all packaging from the new filter cartridge.
- 4 Don't worry if the inside of the packaging is damp – it's just condensation.
- 5 There might be black carbon particles in the packaging or on the filter cartridge. Don't worry, they're harmless.
- 6 To ensure efficient operation, all air must be removed from the filter cartridge.
- 7 Submerge the filter cartridge in a bowl of cold water and shake it gently till no more bubbles are released..
- 8 You may notice some black carbon particles floating in the water. Again, don't worry, they're harmless.
- 9 Before first use, you must flush the filter cartridge.
- 10 Push the filter cartridge into the funnel till it won't go any further.
- 11 Use a jug to fill the funnel quickly to the bottom of the slots.
- 12 When the funnel empties, fill it to the ring-pull on top of the filter cartridge.
- 13 This should fill the kettle to about the **max** mark.
- 14 Discard the water, and repeat the operation.
- 15 When you've discarded two lots of water, the filter cartridge is ready for use.



RESET THE BRITA® MEMO

- 16 This shows what proportion of the filter cartridge's 4 week life is left.
- 17 Press and hold the START button till all 4 bars appear and flash twice, then let go.
- 18 Every week, one bar will disappear.
- 19 When all 4 bars disappear, a flashing arrow will appear at the top of the display. This means it's time to replace the filter cartridge.
- 20 When the display gets down to one bar, it's a good idea to check that you've got another filter cartridge available. If you haven't, it's time to buy some.
- 21 The flashing dot at the bottom right of the display shows that the Memo is working.

HOLIDAYS

- 22 If you haven't used the kettle for a few days:
 - a) empty the kettle and rinse it out
 - b) flush the filter cartridge (see points 10-15)



FILLING

- 23 Pull the lid release up, to open the lid.
- 24 Fill with at least 2 cups of water, but not above max.
- 25 If you overfill, the kettle may spit boiling water.
- 26 Use a jug to fill the funnel quickly to the bottom of the slots.
- 27 When the funnel empties, fill it to the ring-pull on top of the filter cartridge.
- 28 This should fill the kettle to about the **max** mark.
- 29 If the water level is above the **max** mark, pour some water out of the kettle.
- 30 Close the lid, and press down to lock it.



SWITCHING ON

- 31 Check the switch is off (move it to ○).
- 32 Plug the stand into the wall socket.
- 33 Put the kettle on the stand.
- 34 Move the switch to |. The light will come on, and the kettle will heat up.

SWITCHING OFF

35 When the water boils the kettle will switch off and the light will go out.

36 To switch off manually, move the switch to ○.

GENERAL

37 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.

38 Don't tilt the kettle backwards, water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.

39 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.

40 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER

41 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.

42 To prevent the kettle cycling on and off, remove the kettle from the stand and let it cool before replacing it on the stand.

CARE AND MAINTENANCE

43 Check the switch is off (move it to ○).

44 Unplug the stand from the wall socket, and let the kettle cool down fully before cleaning.

45 Wipe the kettle, inside and out, with a damp cloth

46 Keep the connectors dry.

THE FUNNEL

47 Hold the handle with one hand.

48 Put the other hand under the lid hinge.

49 Lift the rim and lid up and off the kettle.

50 Lift the funnel out of the kettle.

51 Press the hook on top of the filter down and forward, to release the filter into the spout

THE MESH FILTER

52 Lift the filter out of the spout.

53 Rinse the filter under a running tap while brushing with a soft brush.

54 Lower the filter into the spout, till the tab engages in the grip below the spout.

55 Press the top of the filter towards the kettle, to lock the hook in place.

56 Wipe the available surfaces of the funnel with a damp cloth.

57 Don't wipe the filter cartridge.

58 Replace the funnel and filter cartridge.

59 The flat area of the funnel should face the handle.

60 To replace the rim, fit the latch under the top of the handle.

61 Press the front of the rim to lock the clips into the kettle.



DISPOSAL

- 62 Sadly, nothing lasts forever, and the day will come when your appliance comes to the end of its natural life.
- 63 The appliance contains a battery, which must be removed from the appliance, and recycled, or disposed of in an environmentally friendly way.
- 64 Put the end of a screwdriver in the notch above the Memo, and prise it out of the lid.
- 65 Your local authority will have arrangements for recycling or disposing of the BRITA® Memo.



FURTHER INFORMATION

You can find more information about BRITA® filter cartridges and the BRITA® Memo in the BRITA® Information Guide supplied with the kettle.

UK WIRING INSTRUCTIONS


The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

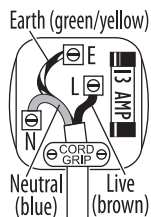

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Limited, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/rhobbs