


## WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

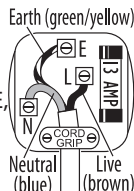

## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product, pack it carefully, include a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt).

551-676

Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [service@russellhobbs.com](mailto:service@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)

## ➔ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products

## REGISTRATION AND PRIZE DRAW

Collect your free reward and a chance to win £10,000 visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)




# Russell Hobbs



instructions

**£10,000 prize draw**  
**PLUS Free Rewards Gallery**  
Register online now to  
collect your reward  
See back for  
details

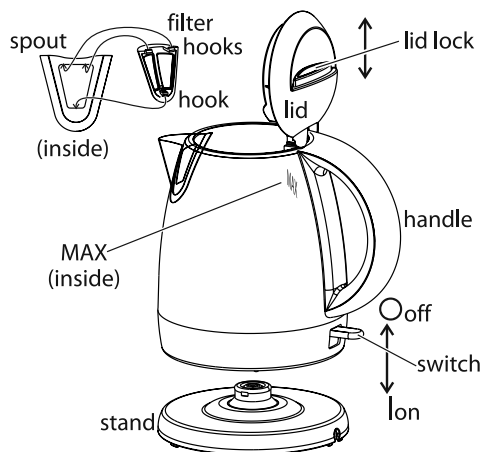

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

### **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors.
- 3 Keep the kettle, stand, and cable away from the edges of worktops.
- 4 Put the stand on a stable, level surface.
- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.
- 7 Don't use the kettle without fitting the filter.
- 8 Use the kettle only with the stand supplied (and vice versa).
- 9 Don't use the kettle for any purpose other than heating water.



- 10 Don't use it with a timer or remote control.
- 11 Don't use it if it's damaged or malfunctions.
- 12 If the cable is damaged, return the kettle, to avoid hazard.

### **household use only**



#### **BEFORE FIRST USE**

- Fill to **max**, boil, discard the water, and rinse.



#### **FILLING**

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above max.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.



#### **SWITCHING ON**

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Move the switch to | – the kettle heats up.



#### **SWITCHING OFF**

- 8 When it boils, it switches itself off.
- 9 To do this manually, move the switch to ○.



#### **GENERAL**

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 12 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.



#### **USING WITH INSUFFICIENT WATER**

- 13 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 14 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.



#### **CARE AND MAINTENANCE**

- 15 Unplug the stand, and let the kettle cool.
- 16 Wipe inside and outside with a damp cloth.
- 17 Keep all connectors and sockets dry.



#### **DESCALE REGULARLY**

- 18 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.



#### **CLEANING THE FILTER**

- 19 Switch off, unplug, and let it cool.
- 20 Squeeze the lid lock into the lid to open it.
- 21 Press the top of the filter down, to release the hooks from the top of the spout.
- 22 Lift the filter out of the kettle
- 23 Brush the filter under a running tap.
- 24 Rinse the kettle, to remove scale particles.
- 25 Lower the filter into the kettle, and engage the bottom hook in the bottom of the spout.
- 26 Push the top of the filter towards the spout, to force the top hooks under the top of the spout.
- 27 Close the lid.