


WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

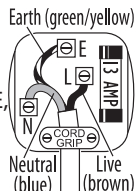

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product, pack it carefully, include a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt).

551-659

Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

➔ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward and a chance to win £10,000 visit www.productregister.co.uk/rhobbs




Russell Hobbs



instructions


£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

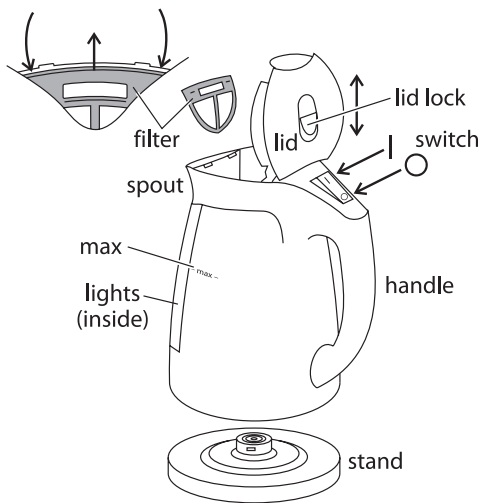

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

STOP IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Keep the kettle, stand, and cable away from the edges of worktops.
- 4 Put the stand on a stable, level surface.
- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.
- 7 Don't use the kettle without fitting the filter.
- 8 Use the kettle only with the stand supplied (and vice versa).

- 9 Don't use the kettle for any purpose other than heating water.
- 10 Don't use it with a timer or remote control.
- 11 Don't use it if it's damaged or malfunctions.
- 12 If the cable is damaged, return the kettle, to avoid hazard.

household use only

BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.

FILLING

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above max.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.

SWITCHING ON

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand – it glows blue.
- 7 Press | – it glows red, and starts to heat up.

SWITCHING OFF

- 8 When it boils, it switches off and glows blue.
- 9 To switch off manually, press ○.

GENERAL

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 12 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER

- 13 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.

- 14 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

CARE AND MAINTENANCE

- 15 Unplug the stand, and let the kettle cool.
- 16 Wipe inside and outside with a damp cloth.
- 17 Keep all connectors and sockets dry.

DESCALE REGULARLY

- 18 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.

CLEANING THE FILTER

- 19 Switch off, unplug, and let it cool.
- 20 Squeeze the lid lock into the lid to open it.
- 21 To remove the filter:
 - a) turn the kettle till the spout faces you
 - b) place your index fingers inside the kettle, at either side of the top of the filter
 - c) press the top of the filter towards the spout, and upwards
 - d) lift it out of the kettle
- 22 Brush the filter under a running tap.
- 23 Rinse the kettle, to remove scale particles.
- 24 To replace the filter:
 - a) slide the filter into the spout, keeping the bottom of the filter against the front of the spout and the rear of the filter against the support at the rear of the spout
 - b) engage the bottom of the filter in the support at of the spout
 - c) engage the top rear of the filter in the support at the top ear of the spout
- 25 Close the lid.