



Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

www.productregister.co.uk/rhobbs
Register online now!
See back for details

 = dishwasher safe




cap

slot



lid

1500ml

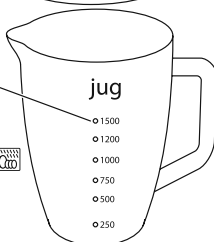

jug



seal


blade unit



jug base



motor unit

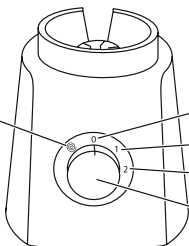

0 off

1 low

2 high





speed control

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
- Keep the appliance and cable out of reach of children; they must not use or play with it.
-  To avoid injury, take care handling the blades, emptying the jug, and cleaning.
-  Don't add hot liquid (over 40°C), as it may be ejected due to sudden steaming.
-  Misuse of the appliance may cause injury.
- 2 Don't leave it unattended while plugged in.
- 3 Unplug before assembling, dismantling or cleaning.
- 4 If the cable is damaged, return the appliance, to avoid hazard.
-  Don't put the motor unit in liquid.
- 5 Don't use the blender unless the lid and cap are fitted.
- 6 Don't put utensils into the jug while the appliance is plugged in.
- 7 Switch off (O) before fitting the jug to the motor unit.
- 8 Switch off (O), and wait till the blades stop before removing the lid from the jug, or removing the jug from the motor unit.

- 9 Don't use accessories or attachments other than those we supply.
- 10 Don't use the appliance for any purpose other than those described in these instructions.
- 11 Don't operate the appliance if it's damaged or malfunctions.
- 12 Don't run the motor for more than 2 minutes, or it may overheat.
After 2 minutes, switch off for at least 2 minutes, to let it cool.

household use only

PREPARATION

- 1 Sit the motor unit on a dry, firm, level surface.
- 2 Route the cable so it doesn't overhang, and won't trip or catch.
- 3 Lower the jug on to the motor unit, then turn the jug clockwise, to lock it in place.
- 4 Pull the lid up and off the jug – it's stiff, because of the seal.
- 5 Put the ingredients into the jug. Don't fill it past the 1500ml mark, or the contents may force the lid off when you start the motor.

FIT THE LID

- 6 Put the lid on the jug, and push it down to seal it.
- 7 Align the pips on the sides of the cap with the slots in the hole in the lid, put the cap into the hole, and turn clockwise to lock it.
- 8 Don't run the blender without the cap.

POWER UP

- 9 Check that the speed control is set to 0.
- 10 Put the plug into the power socket (switch it on, if it's switchable).

SPEED CONTROL

- 11 Turn the speed control clockwise (1 = low, 2 = high).
- 12 Turn it back to 0 to turn the motor off.
- 13 Use low speed (1) for lighter applications, using mainly liquid ingredients, and high speed (2) for heavier applications, using mainly solid ingredients.
- 14 Turning it anti-clockwise to @ will give you a short burst at high speed, for more precise control. In this direction, the control is spring-loaded. When you let go, it'll return to 0.


ADDING INGREDIENTS

- 15 To add ingredients while the blender is working, turn the cap anti-clockwise to unlock it, lift it off, pour the new ingredients via the hole, then replace the cap, and turn it clockwise to lock it.
- 16 Check that the added ingredients don't push the volume in the jug past 1500ml.


FINISHED?

- 17 Turn the speed control to 0, and wait till the blades stop moving.
- 18 Turn the jug anti-clockwise to unlock it, and lift it off the motor unit.

CRUSHING ICE

- 19 Start with half to threequarters of a cup of ice, or 4 to 6 cubes, and add 15ml (1 tablespoon) of fresh cold water.
- 20 Put the lid on the blender, then:
 - a) turn the speed control to  for a second or so, then release it
 - b) check the state of the ice
 - c) repeat till the ice is the consistency that you need

CARE AND MAINTENANCE

- 21 Switch off (0) and unplug before cleaning.
- 22 Clean as soon after use as possible, to prevent residues setting inside the jug.
- 23 Turn the jug anti-clockwise to unlock, and lift it off the motor unit.
- 24 Handwash the jug, lid and cap.
- 25 Use a brush to clean the blades.
- 26 Wipe the outside of the motor unit with a clean damp cloth.
- 27 Handwash the jug, lid and cap, rinse, and air dry.
-  You may wash these parts in a dishwasher.
- 28 If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finishes.
- 29 The damage should be cosmetic only, and should not affect the operation of the appliance.

BLADE UNIT

- 30 You may remove the blade unit for cleaning.
- 31 Grip the jug handle with one hand.

- 32 Grip the jug base with the other hand.
- 33 Unscrew the jug from the jug base.
- 34 Carefully, lift the blade unit out of the jug base.
- 35 Lift the seal away from the blade unit.
- 36 Wash the seal and blade unit in soapy water, rinse, and air dry.
- 37 Replace the seal round the blade unit.
- 38 Replace the blade unit in the jug base.
- 39 Screw the jug into the jug base.

a few simple recipes to get you started

coriander pesto (dip, topping or sauce)

- 4 handfuls fresh leaf coriander
- 4 cloves fresh garlic
- 120g pine nuts
- 250ml olive oil
- 120g freshly grated Parmesan
- salt and pepper

Blend the coriander, garlic, pine nuts, and a bit more than half the oil at speed 2 till smooth. To adjust the thickness, add a little oil, blend, and repeat. Transfer to a bowl, stir in the Parmesan, and adjust the seasoning. Serve as a dip (fairly thick), as a topping for soup (not too thick, but not runny), or with warm pasta (fairly runny).

sweet and sour sauce

- 2 shallots, peeled
- 1 clove garlic
- small piece fresh ginger, peeled
- 1 tbsp soy sauce
- dash white wine vinegar
- 1 tsp mustard
- 1 tsp tomato purée

Blend everything at speed 2 till really smooth. Serve with chicken or fish, or as a dip.

black olive and anchovy tapenade/sauce

- 250g pitted black olives
- 60g anchovy fillets, drained
- 3 tbsp capers, drained

150ml olive oil
2 tbsp brandy (optional)
fresh ground black pepper

Save half the oil. Blend everything else at speed 2 till smooth. To adjust the thickness, add a little oil, blend, and repeat. For tapenade, to spread on toast, you need a paste. For sauce, it should be runny.

horseradish and apple sauce

250ml double cream
6 tbsp horseradish relish
2 sharp flavoured apples
2 tsp paprika

Peel and grate the apples. Blend the cream in the jug at speed 2 till soft peaks form, spoon gently into a large bowl, and gently fold in the rest of the ingredients. Season with black pepper, and serve with beef or sausage.

leek & potato soup (serves 4)

150g potatoes, peeled
150g leeks, trimmed
2 vegetable or chicken stock cubes
800ml water
salt and pepper to taste

Blend the leeks and potatoes at speed 1 for 2 seconds (you want them lumpy, not mushy), and transfer to a 2 litre pan. Add the water and stock cubes, bring to the boil, stirring, then reduce the heat, cover the pan, and simmer for 20 minutes. Cool for 30 minutes, then blend, in batches, till smooth. Warm to serving temperature (don't let it boil), and adjust the seasoning.

Vichyssoise

If you prefer Vichyssoise, add a couple of chives to the leeks and potatoes, add a knob of butter to the pan before heating, cool the soup, and whisk in 150ml of cream before serving it cold.

recipes are available on our website:

blending – <http://www.russellhobbs.com/ifu/550931>

smoothies – <http://www.russellhobbs.com/ifu/550941>



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.



552-522