




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
**[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)**  
Register online now!  
See back for details

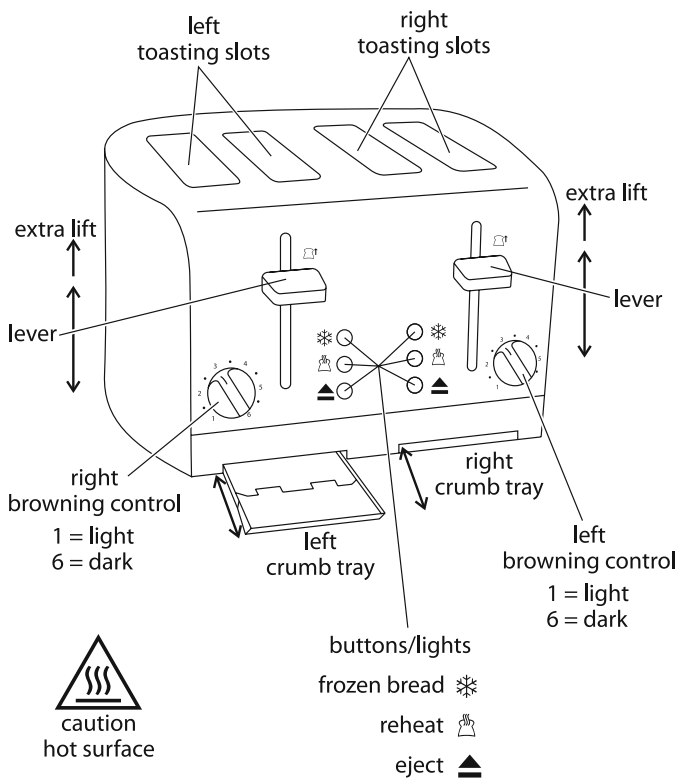


Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging before use.



## IMPORTANT SAFEGUARDS

---

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Sit the toaster upright, on a stable, level, heat-resistant surface.
- 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 5 The surfaces of the appliance will get hot – don't touch.
- 6 Route the cable so it doesn't overhang and can't be caught.
- 7 If you're only using one of a pair of toasting slots, don't let anything get into the other slot, as both slots will become "live" when you lower the bread carriage handle.
- 8 Don't cover the toaster, or put anything on top of it – you'll cause a fire hazard.
- 9 If bread gets jammed, unplug the toaster, let it cool, then remove the bread. Don't use anything sharp, you'll damage the elements.
- 10 Don't toast sandwiches or buttered items, they may catch fire.
- 11 Don't use torn, curled up, oversized, or misshapen slices of bread, as these may jam the toaster.
- 12 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic, and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is fitted and closed.
- 15 Don't connect the toaster to a timer or remote control system.
- 16 Don't use the toaster for any purpose other than those described in these instructions.
- 17 Don't use the toaster if it's damaged or malfunctions.
- 18 If the cable is damaged, return the toaster, to avoid hazard.

**household use only**



---

## BEFORE USING FOR THE FIRST TIME

---

- Check the slots are empty.
  - Set both browning controls to the highest setting (6).
  - Operate the toaster without bread, to cure the new elements.
  - They may smoke a bit, but it's nothing to worry about – ensure the room is well ventilated.
- 



---

## TOASTING BREAD

---

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
  - 2 Don't put it on or near anything that could be damaged even by moderate heat.
  - 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
  - 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
  - 5 Put the plug into the power socket (switch the socket on).
  - ★ Treat the left and right pairs of toasting slots as independent 2-slot toasters – his and hers, yours and mine – whatever works for you.
  - 6 Turn the browning control to the correct level (1 = light, 6 = dark).
  - 7 Put bread in the toasting slots (maximum thickness 32mm (1¼in)).
  - 8 Press the lever down fully – it won't lock down unless the toaster is connected to the electricity supply.
  - 9 The ▲ light will glow, and the elements will heat up.
  - 10 When it's done, the toast will pop up, the light and the elements will go off.
- 



---

## EJECT

---

- 11 To stop the toaster before it's finished, press the ▲ button.
  - 12 The toast will pop up, the light and the elements will go off.
- 



---

## FROZEN BREAD

---



- 13 This takes the guesswork out of toasting frozen bread.
- 14 Leave the browning control at your favoured setting, insert the frozen bread, lower the lever, then press the ❄ button.

- 15 The ☼ light will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- 



## REHEATING TOAST

---

- 16 Leave the browning control at your favoured setting, insert the bread, lower the lever, then press the  button.
- 17 The  light will glow, the toast will be given a short burst of heat, then it'll pop up, and the light will go out.
- 18 You must only reheat plain, "unbuttered" toast.
- 



## HINTS AND TIPS

---

- 19 When toasting more than one slice, use slices of similar size, thickness and freshness.
- 20 Old (yesterday's) bread contains less moisture, so makes crisper toast.
- 21 Old or thin bread cooks faster than fresh or thick bread – use a lighter setting.
- 22 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.
- 



## CRUMBS

---

- 23 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic, and it could cause a fire hazard.
- 24 Unplug the toaster and let it cool down.
- 25 Slide the crumb trays out from underneath the toaster.
- 26 Empty them, wipe them with a damp cloth, dry them, then replace them in the toaster.
- 27 Don't use the toaster unless both crumb trays are fitted and closed.
- 



## CARE AND MAINTENANCE

---

- 28 Unplug the toaster and let it cool.
- 29 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

- 30 Don't let anything enter the slots, you might damage the elements.
- 31 Don't put the toaster in liquid.
- 32 Don't use harsh or abrasive cleaning agents or solvents.





## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: [service@russellhobbs.com](mailto:service@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)



## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



## REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.



551-794