




Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

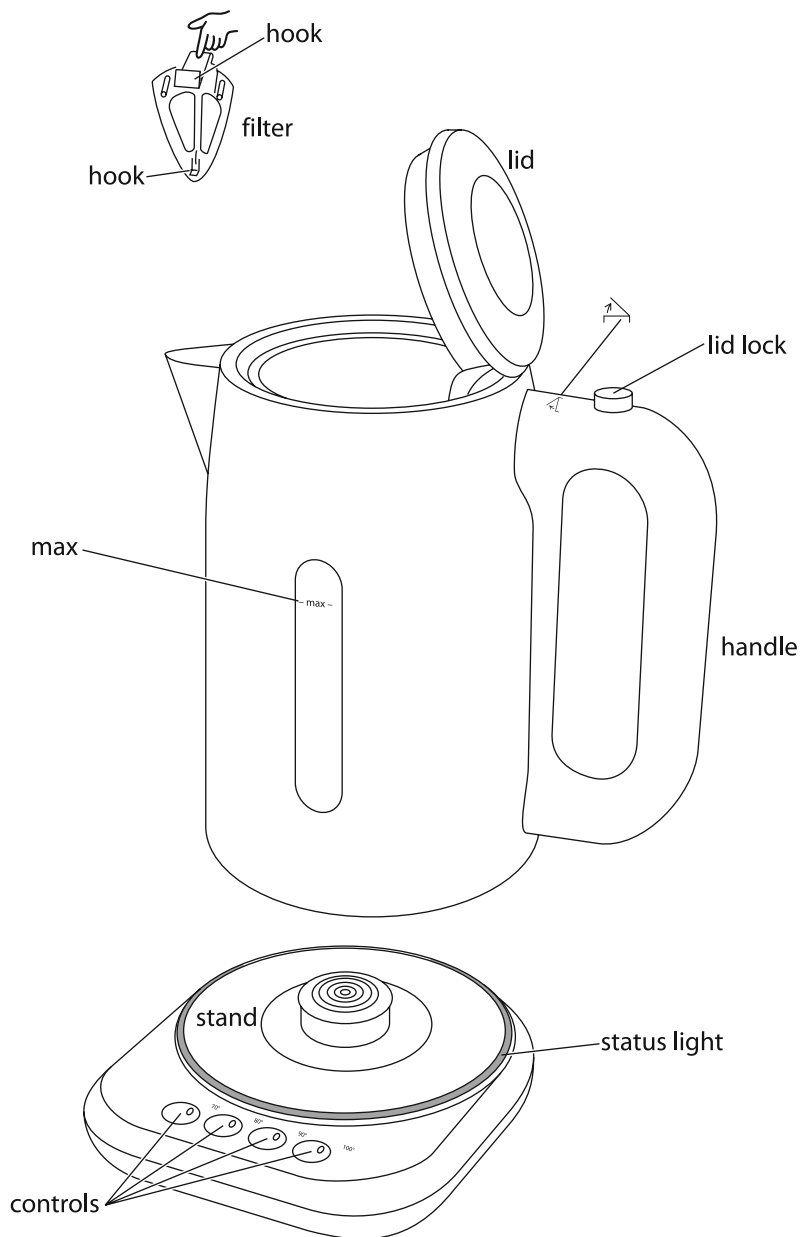



Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
 - Children shall not play with the appliance.
 - Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
 - Keep the appliance and cable out of reach of children under 8 years.
-  The surfaces of the appliance will get hot.
- 2 If you overfill, the kettle may spit boiling water.
 - 3 Use the kettle only with the stand supplied (and vice versa).
 - 4 If the cable is damaged, return the appliance, to avoid hazard.
-  Don't put the kettle, stand, cable, or plug in any liquid.
- 5 Keep the kettle, stand, and cable away from the edges of worktops.
 - 6 Don't use the kettle for any purpose other than heating water.
 - 7 Don't operate the appliance if it's damaged or malfunctions.

household use only

SLEEP MODE

- After 5 minutes of inactivity, the appliance will go to sleep.
- Press any button to wake the appliance. All the buttons will flash.
- To save electricity, unplug the stand.



BEFORE USING FOR THE FIRST TIME

- Fill to max, boil, discard the water, then rinse. Do this three times, to remove manufacturing dust, etc.



FILLING

- 1 Remove the kettle from the stand.
- 2 Press the lid lock to open the lid.
- 3 Fill with at least 2 cups of water, but not above max.
- 4 Close the lid, and press down to lock it.



SWITCHING ON

- 5 Put the stand on a stable, level surface.
- 6 Plug the stand into the wall socket. All the buttons will flash.
- 7 Put the kettle on the stand.

VARIABLE TEMPERATURE

- 8 The temperatures available are: 100 (boil), 90 (coffee), 80, and 70 (that's °C).
- 9 Press the button marked with the temperature you want. The button will glow.
- 10 The colour of the status light will indicate the water temperature.
- | | | | |
|------|-------|--------|-------|
| blue | green | purple | red |
| 70°C | 80°C | 90°C | 100°C |
- a) If the water temperature is below 70°C, the status light will not glow.
- b) If the water temperature is already at or over the temperature you set, nothing will happen – the water is ready to use.
- 11 The status light will flash till the water reaches the set temperature, then glow steadily.
- 12 The colour of the status light will change with the temperature of the water in the kettle.
- 13 When it reaches the set temperature, the light in the button will go off.
- 14 To switch off manually, press the button again.
- ★ Reducing the temperature may take a long time – you may prefer to pour the hot water away, and refill with cold water.

GENERAL

- 15 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 16 You may see some discolouration on the floor of the kettle. Don't worry – it's due to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER


- 17 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 18 To reset the cut-out, remove the kettle from the stand and leave it till it goes cold before replacing it on the stand.

CARE AND MAINTENANCE

- 19 Unplug the stand, and let the kettle cool before cleaning.
- 20 Wipe the kettle, inside and out, with a damp cloth
- 21 Open the lid.
- 22 Push the hook on top of the filter down, then lift the filter out of the kettle.
- 23 Rinse the filter under a running tap while brushing with a soft brush.
- 24 Lower the filter into the kettle, and engage the bottom hook in the bottom of the spout.
- 25 Press the top of the filter towards the kettle, to lock the hook in place.

Descale regularly, (at least monthly).

- 26 Descale the appliance at least monthly with a proprietary descaler. Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

 Russell Hobbs descaler, specially formulated to work with our products, is available from Customer Service (back page).

OPTIMUM TEMPERATURES FOR TEAS AND COFFEES

The temperature of the water used in the preparation of different types of tea and coffee is important.

tea	water temperature °C	brewing time (min)
black tea	80 – 90	5 – 7
whole leaf black tea	80 – 90	4
broken leaf black tea	80 – 90	5
smoked tea	80 – 90	3 – 4
flavoured black tea	80	3 – 4
green tea	70 – 90	2 – 5
flavoured green tea	70 – 80	3 – 4
Sencha (Japanese green tea)	70	45 seconds to 1 minute (2.5g tea per 100ml water) or 2 minutes (3.5g tea per 100ml water)
Genmaicha (Japanese green tea)	90	2 – 3
wu long/oolong/blue/blue-green	80 – 90	about 7 minutes
yellow tea	70 – 80	2 – 4
white tea	70 – 80	7 to 20 minutes (4 to 5 infusions possible)
coffee		
instant coffee	90	
coffee (piston/plunger coffee pot)	90	



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)



GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –

£10,000 prize draw, **EXTRA** year guarantee, **FREE** rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.

