

 
 
 
 


# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
**[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)**  
Register online now!  
See back for details

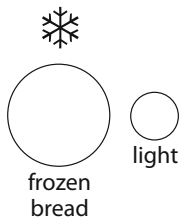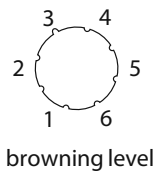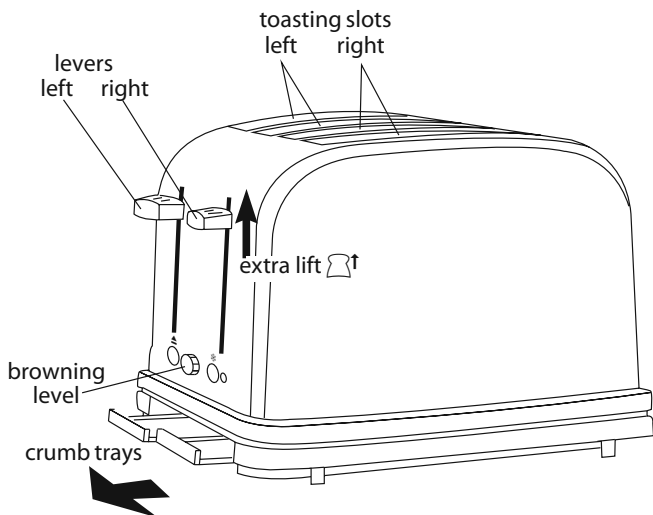


Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.




## **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  - 2 This appliance must not be operated by an external timer or remote control system.
  - 3 Bread may burn. Don't use the appliance near or below curtains or other combustible materials and watch it while it's hot.
-  The surfaces get hot in use.
- 4 Remove and empty the crumb trays.
  - 5 Wipe with a damp cloth, dry, then replace in the toaster.

**6 If the cable is damaged, return the appliance, to avoid hazard.**

 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors.

7 If you're not using all the slots, don't let anything get into the empty slots, as the central elements will be "live" when the lever is lowered.

8 Route the cable so it doesn't overhang, and can't be tripped over or caught.

9 Don't cover the appliance or put anything on top of it.

10 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread.

11 Don't toast "buttered" items, they may catch fire.

12 Don't use torn, curled, or misshapen bread, you may jam the toaster.

13 Don't use the appliance for any purpose other than those described in these instructions.

14 Don't operate the appliance if it's damaged or malfunctions.

## **household use only**



### **BEFORE USING FOR THE FIRST TIME**

- Set the browning level to maximum (6).
- Operate the appliance empty, to cure the new elements.
- This may smell a bit, but it's nothing to worry about.
- Ensure the room is well ventilated.



### **TOASTING BREAD**

1 Sit the toaster upright on a firm, level, heat-resistant surface.

2 Put the plug into the power socket.

3 Set the browning level to the required setting (1 = light, 6 = dark).

4 The left lever operates the left pair of slots, the right lever operates all four slots (it pulls the left lever down with it).

5 Use the left pair of slots for one or two slices. Use the right pair for the third and fourth slices.

6 Put bread into the toasting slots (maximum thickness 25mm/1in).

7 Press the lever down fully.

✱ It won't lock down unless the toaster is connected to the electricity supply.

8 The elements will heat up.


9 When it's done, the toast will pop up.


## **EJECT**

10 To stop the toaster mid-cycle, press the  button.

11 The toast will pop up, and the elements will switch off.

## **FROZEN BREAD**

12 Leave the browning level at your favoured setting, insert the frozen bread, lower the lever, then press the  button.

13 The  light will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

## **EXTRA LIFT**

14 After toasting small items (bagels, crumpets, etc.) the lever may be raised further, to allow them to be removed more easily.

15 You may raise the lever during toasting, to check progress, then lower it again.

## **HINTS AND TIPS**

16 Old (yesterday's) bread has less moisture, so makes crisper toast.

17 Old bread, thin slices, and sweet bread products (tea cakes, fruit loaf, etc.) brown faster – use a lower setting.

## **REHEATING TOAST**

18 Use the lowest setting. Only reheat plain, “unbuttered” toast.

## **CARE AND MAINTENANCE**

19 Unplug the toaster and let it cool down.

20 Wipe outer surfaces with a damp cloth.







## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: [service@russellhobbs.com](mailto:service@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)



## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



## REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.



552-180