






Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

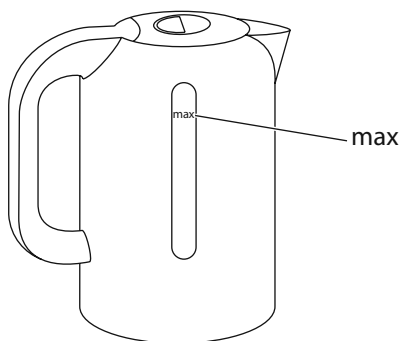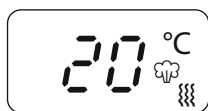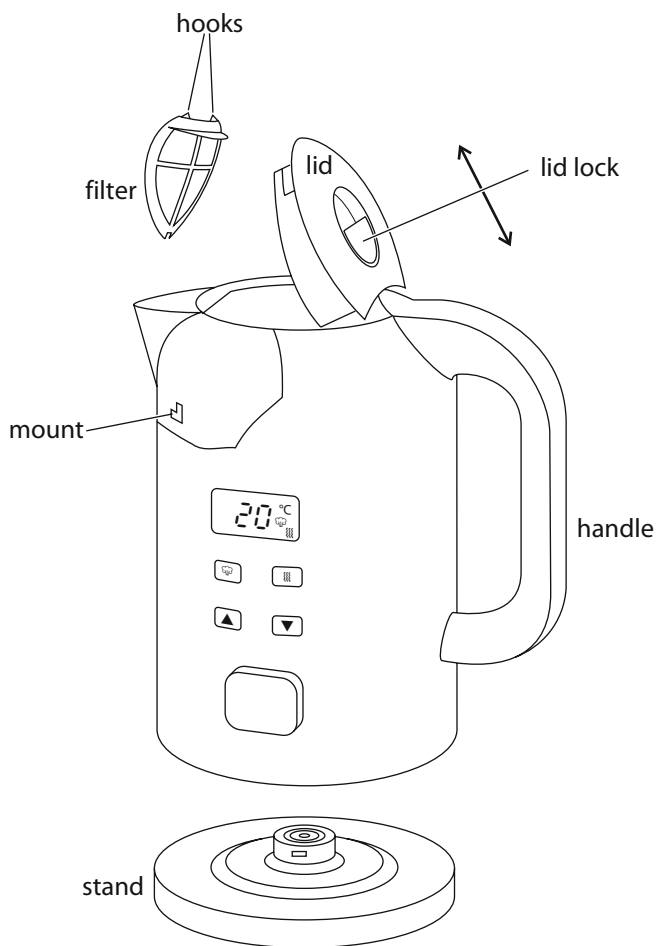

Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:



- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 If you overfill, the kettle may spit boiling water.
- 3 Use the kettle only with the stand supplied (and vice versa).
- 4 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
- ⊘ Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.
- 5 Keep the kettle, stand, and cable away from the edges of worktops.
- 6 Don't use the kettle for any purpose other than heating water.
- 7 Don't operate the appliance if it's damaged or malfunctions.

household use only

FILLING

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above max.
- 3 Close the lid, and press down to lock it.




SWITCHING ON

- 4 Put the stand on a stable, level surface.
- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 The display will show the temperature of the water in the kettle.
- 8 Press and release the  button.
- 9 100 will show on the display.
- 10  will blink on the display.

boil

- 11 If you want to boil the water, do nothing.

variable temperature

- 12 Use the  and  buttons to set the temperature.
- 13 The temperatures available are: 100 (boil), 95, 90, 85, 80, 75, 70, 65, 60, 55, 50, 45, 40, 35, 30, and 25 (that's °C).
- 14 After 5 seconds,  will stop blinking, to show the temperature is set.

- 15 When the water reaches the temperature you set:
- a) ☁ will disappear from the display.
 - b) The display will show the temperature of the water in the kettle.

KEEP WARM – 40 MINUTES

- 16 If you have chosen a temperature below 100, and you want to keep the water warm:
- 17 Press and release the ☺ button.
- 18 ☺ will blink on the display.
- 19 Use the ▲ and ▼ buttons to set the temperature.
- 20 This function only works at the 95, 90, 85, 80, 75, 70, 65, 60, 55, 50, 45, 40, 35, 30, and 25 settings.
- 21 After 5 seconds, ☺ will stop blinking, to show the temperature is set.
- 22 The element will switch on intermittently, to keep the water hot.
- 23 After 40 minutes, the function will switch off.
- 24 ☺ will disappear from the display.
- 25 The display will show the temperature of the water in the kettle.

SWITCHING OFF

- 26 When the water boils the element will switch off.
- 27 To stop the kettle, press and release the ☁ and/or ☺ buttons to remove the corresponding ☁ and/or ☺ icons from the display.
- 28 The display will show the temperature of the water in the kettle.
- 29 To save electricity, unplug the stand.
- 30 The appliance will remember the setting for up to 24 hours.

GENERAL

- 31 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.
- 32 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.
- 33 If you normally heat water to less than 100°C, and keep it warm, you may ignore the ☁ button, and use the keep warm function on its own.

USING WITH INSUFFICIENT WATER

- 34 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 35 You must then remove the kettle from its stand to reset the cut-out.
- 36 Sit the kettle on the work surface till it's cold.

CARE AND MAINTENANCE

- 37 Unplug the stand from the wall socket, and let the kettle cool down fully before cleaning.
- 38 Wipe all surfaces with a clean damp cloth.
- 39 Keep the connectors dry.

CLEANING THE FILTER

- 40 Switch the kettle off, and let it cool.
- 41 Open the lid.
- 42 Grip the top of the filter, and push it down and into the kettle to release it.

43 Lift or tip it out of the kettle.

44 Rinse the filter under a running tap while brushing with a soft brush.

REPLACE THE FILTER

45 Fit the bottom of the filter into the mount at the bottom of the spout.

46 Push the top of the filter towards the spout, to force the top hooks under the rim of the kettle.

DESCALE REGULARLY

47 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.

✱ Products returned under guarantee with faults due to scale will be subject to a repair charge.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)



GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –

£10,000 prize draw, **EXTRA** year guarantee, **FREE** rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.

