






Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for
details

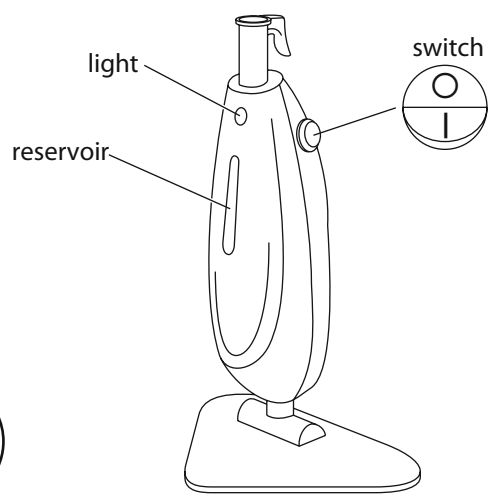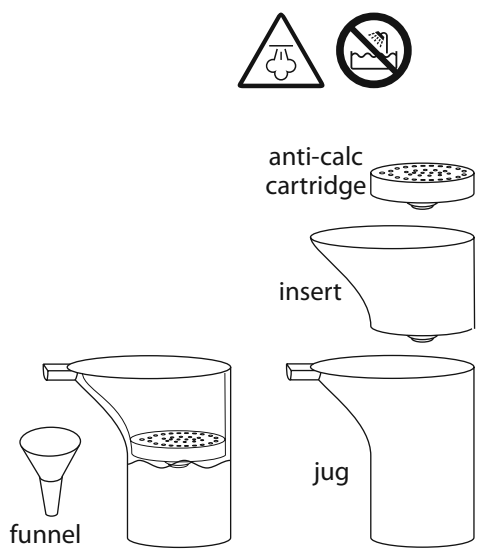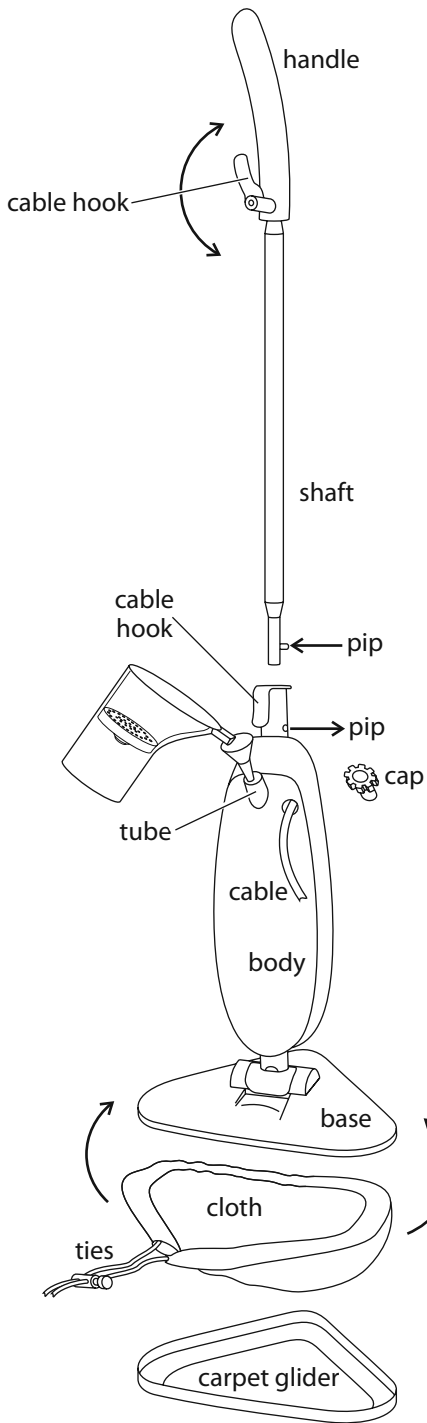



Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.




IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.
- 2 Keep the appliance and cable out of reach of children.
- 3 Don't leave the appliance unattended while plugged in.
- 4 Unplug after use and before carrying out user maintenance.
-  Danger of scalding – the appliance issues steam and hot water.
- 5 Don't use the appliance for cleaning electrical equipment, e.g. the inside of an oven.
- 6 Don't operate the appliance if it's dropped or damaged, or if it malfunctions or leaks.
- 7 If the cable is damaged, return the appliance, to avoid hazard.
-  Don't put the appliance in liquid, and don't use it outdoors.
- 8 Don't use the cleaner on living creatures of any description.
- 9 Don't use accessories or attachments unless we provide them.
- 10 Don't use the appliance for any purpose other than those described in these instructions.

household use only

USAGE

- 1 The steam mop can be used on most tiled, carpeted, parquet, and laminate flooring.
- 2 The flooring must be correctly laid, without gaps or cuts that moisture could penetrate.
- 3 Don't use it on unsealed wooden flooring, glass, soft plastic, or leather.
- 4 Don't use it on waxed flooring – the wax may melt, damaging the appliance and the flooring.
- 5 Test it on an inconspicuous part of the flooring, and check for moisture penetration and/or damage before proceeding.
-  If in doubt, ask the supplier of the flooring for advice.

ASSEMBLY

- 6 Unplug the appliance before assembly or disassembly.
- 7 Push the bottom of the shaft into the top of the body.
- 8 Rotate the handle till the pip engages with the hole in the body.
- 9 Wind the cable round the cable hooks.

FITTING THE CLOTH

- 10 Loosen the ties.
- 11 Fit the cloth over the base.
- 12 Bring the edges of the cloth up and over the flange running round the base.
- 13 Tighten the ties to secure the cloth to the base.

FILLING

- 14 Pull the cap out of the tube.
- 15 Use the jug and anti-calc cartridge supplied with the appliance.
- 16 With the cartridge in place, fill the jug with fresh cold water, up to the bottom of the cartridge.
- 17 Pour the water from the jug into the tube.
- 18 It is important that all the water going into the appliance has passed through the anti-calc filter.
- 19 Replace the cap in the tube.
- ★ Don't add anything to the water – you may damage the appliance, you will destroy the anti-scale cartridge.

TILT OR LOCK?

- 20 The joint where the body meets the base has two positions.
- 21 Hold the front of the base gently with a foot while changing positions.
- 22 Push the handle forward to lock the handle/body upright.
- 23 The appliance is stable in this position.
- 24 Pull the handle back to unlock the handle/body, so the base moves freely (like an upright vacuum cleaner).

USING THE CARPET GLIDER

- 25 If you're going to clean carpet, rest the base and cloth in the carpet glider.
- 26 This will reduce drag, and make moving the mop much easier.

POWER UP

- 27 Rotate the top cable hook, and remove the cable from the hooks.
- 28 Put the plug into the power socket (switch the socket on, if it's switchable).
- 29 The light glows green when the appliance has sufficient water.
- 30 It glows red when the water level gets too low – switch off, unplug, fill.

IN USE

- 31 Unlock the handle/body to allow the base to move freely.
- 32 Hold the cleaner by the handle.
- 33 Move the cleaner over the floor, cleaning a small area at a time.
- 34 When you change areas, overlap the previous area, to avoid missing anything.

CARE AND MAINTENANCE

- 35 Switch the appliance off, unplug it, and let it cool down fully.
- 36 Untie the ties, and remove the cloth from the base.
- 37 Wipe outside surfaces with a clean damp cloth.
- 38 Store the appliance upright in a cool, dry place, away from direct sunlight.

CLOTH

39 You may wash the cloth by hand, or in a washing machine at the 40° setting.

40 Use your normal detergent, but ...

✱ Don't use bleach.

✱ Don't use fabric softener.

✱ Don't tumble dry it, it must be air-dried.

ANTI-CALC CARTRIDGE

41 The life of the anti-calc cartridge depends on the frequency of use and the hardness of the water in your area.

42 It should last for about 100 uses in a soft water area.

✱ The anti-calc cartridge fits into the insert one way only.

CONSUMABLES/SPARES

43 Contact Customer Service (see back page).



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)



GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –

£10,000 prize draw, **EXTRA** year guarantee, **FREE** rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.

