



Russell Hobbs





24630

 www.russellhobbs.com

Register online for an EXTRA year guarantee

Visit www.russellhobbs.co.uk/productregister/ You must register within 28 days of purchase

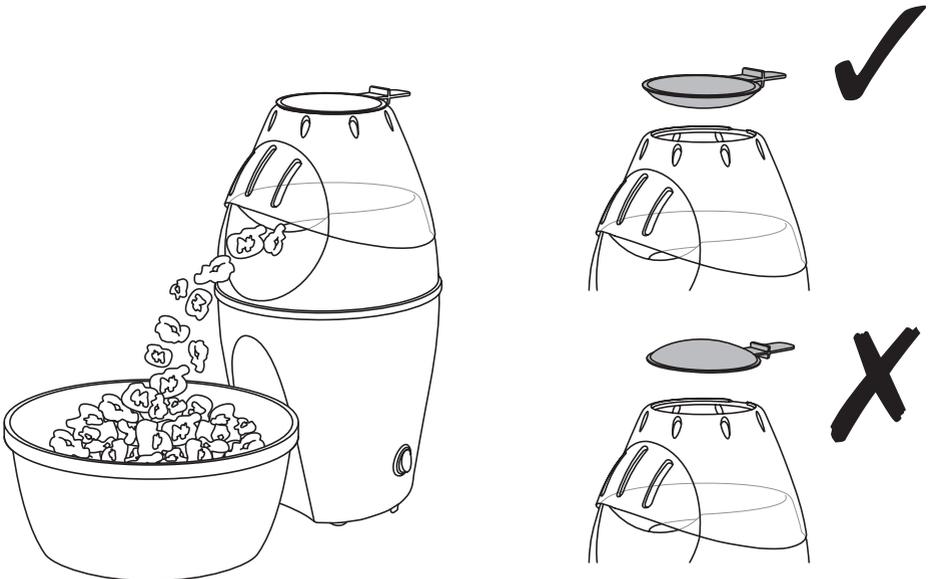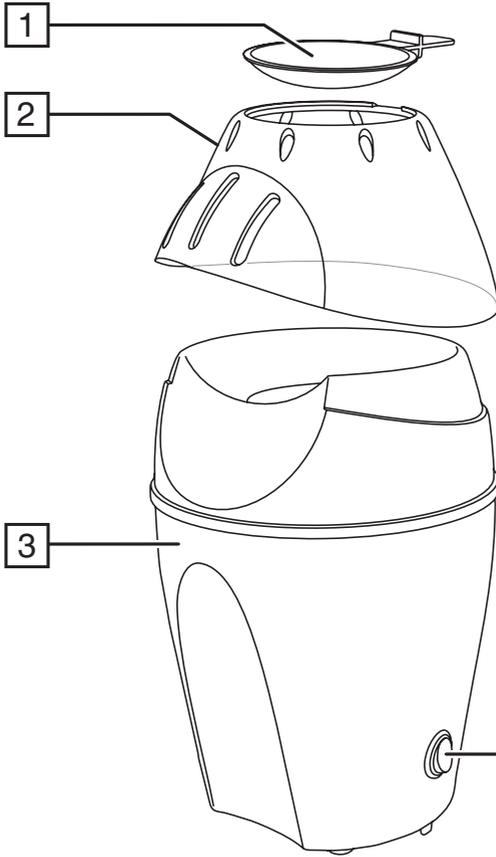

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.

Don't connect the appliance via a timer or remote control system. Don't use the appliance near or below combustible materials such as curtains.

 The surfaces of the appliance will get hot during use.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

 Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Sit the appliance on a stable, level, heat-resistant surface.
- Always turn off and unplug from the wall power outlet when not in use, before fitting or removing parts, and before cleaning the appliance.
- Do not move the product while it is in use. Always let it cool before moving, servicing, or cleaning it.
- Don't leave the appliance unattended while plugged in.
- Always clean the appliance after use.
- Don't use the appliance for any purposes other than those described in these instructions.
- Route the cable so it doesn't overhang, and can't be tripped over or caught.
- Don't cover the appliance or put anything on top of it.
- Don't operate the appliance if it's damaged or malfunctions.

HOUSEHOLD USE ONLY

PARTS

- | | |
|------------------------|------------------|
| 1. Measuring spoon/cap | 3. Body |
| 2. Cover | 4. On/off switch |

BEFORE USING FOR THE FIRST TIME

- Wipe the interior surface of your popcorn maker with a damp clean cloth.
- Wipe the outside with a soft dry cloth.

USING YOUR POPCORN MAKER

Your popcorn maker may smoke a little at first. This is normal and will soon disappear.

1. Place your popcorn maker on a flat, heat-resistant surface.
2. Set the switch to the **O** position.
3. Add popcorn kernels into the body of your popcorn maker using the measuring spoon. Don't add more than one full spoonful of kernels. Don't put anything except popcorn kernels into the body of your popcorn maker.
4. Place a bowl in front of your popcorn maker to catch the popcorn.
5. Fit the cover over the body.
6. Place the measuring spoon over the cover as shown.
7. Move the switch to the **I** position.
8. After a short time, the kernels will start popping and be collected by the bowl.
9. Switch off and unplug your popcorn maker when the popcorn has finished popping and carefully pour out any remaining unpopped kernels that might be left inside the body.

HINTS AND TIPS

 
- The corn is done when there is less than one pop per minute or after 2 minutes—whichever comes first.
- Do not operate your popcorn maker for longer than 2 minutes
- Turn off your popcorn maker and allow it to rest for 15 minutes between each new batch of popcorn.
- Never operate your popcorn maker without kernels in it. This will cause irreparable damage.

CARE AND CLEANING

Clean your popcorn maker after every use.

1. Unplug your popcorn maker and let it cool down.
 2. Wash the cover and measuring spoon in warm soapy water.
 3. Wipe the interior and exterior surfaces with a damp cloth.
- Never clean any parts in a dishwasher.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.russellhobbs.co.uk/productregister/

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

ONLINE

www.russellhobbs.com for more products

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.russellhobbs.co.uk/productregister/

*You must register within 28 days of purchase.