



# Russell Hobbs





**25940**

 [www.russellhobbs.com](http://www.russellhobbs.com)

**Register online for an EXTRA year guarantee**

Visit [uk.russellhobbs.com/product-registration](http://uk.russellhobbs.com/product-registration) You must register within 28 days of purchase

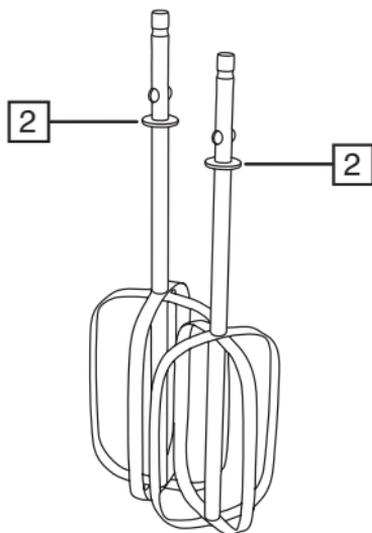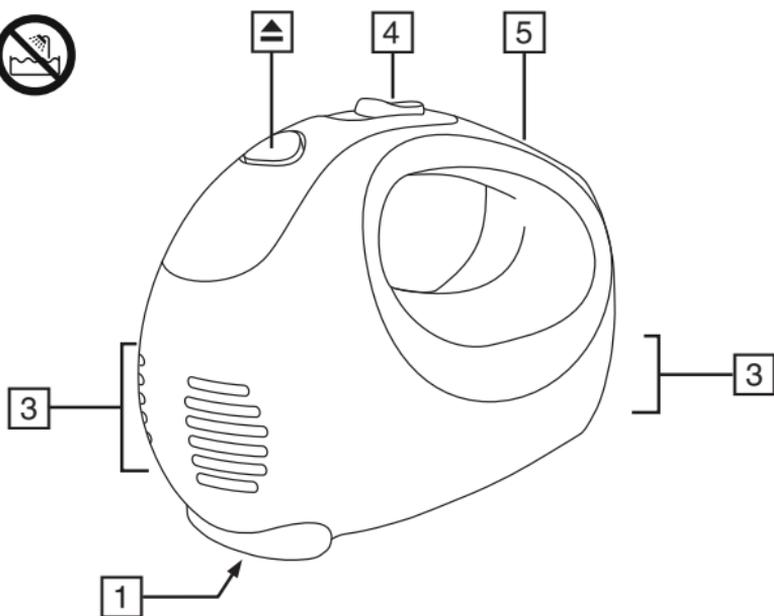

Read the instructions, keep them safe, pass them on if you pass the appliance on.  
Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children must not use or play with the appliance. Keep the appliance and cable out of reach of children.

Always disconnect the appliance from the mains supply socket if it is left unattended and before assembling, disassembling or cleaning.

 Misuse of the appliance may cause injury.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

-  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't use accessories or attachments other than those we supply.
- Don't operate the appliance if it's damaged or malfunctions.
- Don't run the mixer for more than 5 minutes at a time, or it'll overheat. After 5 minutes, let it rest for 5 minutes. Your mixer will automatically switch off after 5 minutes of continuous use.

## **HOUSEHOLD USE ONLY**

---

## PARTS

- |                             |                  |
|-----------------------------|------------------|
| 1. Drive heads (underneath) | 4. Speed control |
| 2. Whisks                   | 5. Handle        |
| 3. Vents                    |                  |

---

## FITTING THE WHISKS

1. Switch off **(0)** and unplug your mixer before fitting or removing the whisks.
2. Turn each whisk to align the pins on the shaft with the slots in the drive head, then push it into the drive head till it clicks into place.

### To remove the whisks:

1. Switch your mixer off **(0)** and unplug it.
2. Hold the whisks (to prevent them jumping out) and press the eject button (). This will eject them from the drive heads.

---

## USING THE MIXER

1. Move the switch up to switch on.
  2. Put the plug into the power socket.
  3. Choose a speed between **1** (low), and **5** (high).
  4. Slide the switch fully downwards **(0)** to switch off.
- Generally, large quantities, thick mixes, and a high ratio of solids to liquids need longer mixing times at slower speeds.
  - Smaller quantities, thinner mixes, and more liquids than solids need shorter mixing times at higher speeds.
  - Use the whisks for beating/aerating light dough, batter, egg whites and cream.
  - When making dough, use your mixer only for mixing the ingredients. Don't use it for kneading. You'll overload it and damage the motor.
  - If the motor starts to labour, add more liquid to the mix, if possible, or switch off and carry on by hand.

---

## CLEANING

1. Unplug the appliance.
  2. Disassemble the appliance.
  3. Wipe the outside of the motor unit with a clean damp cloth.
-  Wash the whisks in hot soapy water, or in the cutlery basket of your dishwasher.

---

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.





---

## SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

---

## GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at: **[uk.russellhobbs.com/product-registration](http://uk.russellhobbs.com/product-registration)**

Consumables are guaranteed only for their recommended lifecycle. Replacement/ Spare parts\* are excluded and are only covered by a 1 year warranty.

\* Examples include filters, removable grill plates, drip trays/crumb trays etc.

---

 **ONLINE**

**[www.russellhobbs.com](http://www.russellhobbs.com)** for more products