


GIZMO

BY Russell Hobbs



instructions

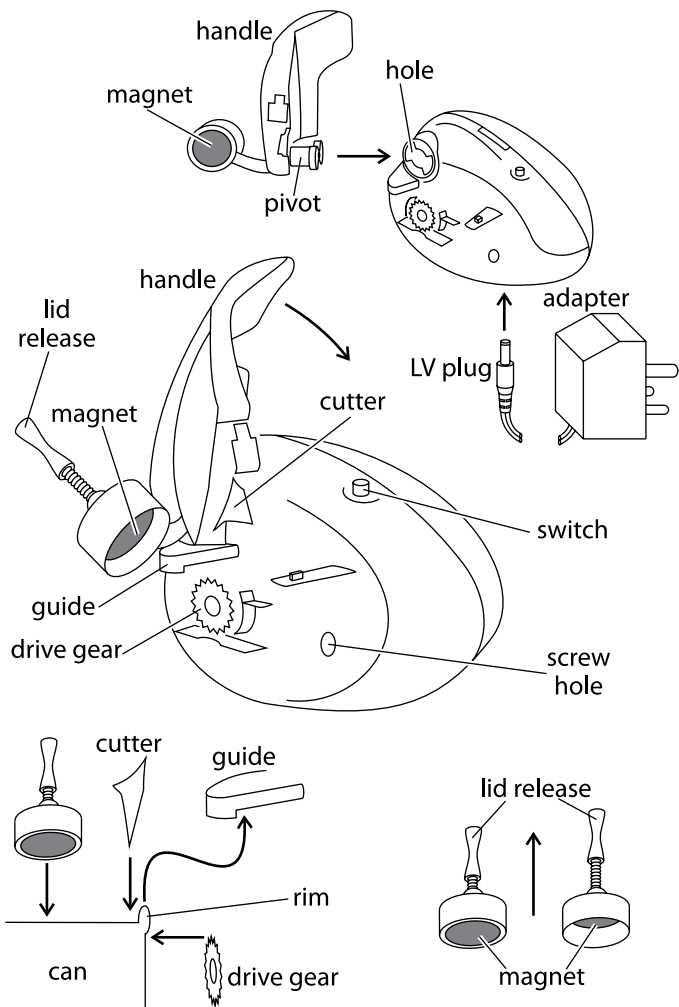

Read the instructions and keep them safe. Pass them on if you pass the opener on. Remove all packaging, but keep it till you know the opener works.

important safeguards

Follow basic safety precautions, including:

- 1 The opener must only be used by a responsible adult. Use and store it out of reach of children.
- 2 Don't put the opener in liquid. Don't use it in a bathroom, near a source of water, or outdoors.
- 3 Keep clear of the cutter and drive gear, they're sharp.
- 4 Don't touch the cut edges of the opened can or lid.
- 5 Don't leave the lid attached to the magnet as its sharp edges could cause injury.
- 6 Don't try to open aluminium cans, ring pull cans, aerosol cans, or other pressurised cans.
- 7 Don't try to open cans of flammable materials (paint, etc.).
- 8 Don't run the motor for more than 1 minute at a time, it'll overheat. After 1 minute, leave it to cool for 15 minutes.
- 9 Don't put it on or near a source of heat.
- 10 Don't use accessories unless we supply them.
- 11 Don't use the opener for any purpose other than those described in these instructions.
- 12 Don't use the opener if it's damaged or malfunctions.



household use only

before using for the first time

- 1 Lay the opener on a stable, flat work surface.
- 2 Put the LV plug into the socket under the opener.
- 3 Plug the adapter into a power socket (switch the socket on, if it's switchable), and leave it to charge for 16 hours.
- 4 Route the cable so it doesn't overhang, and can't be caught or tripped over.

fit the handle

- 5 Hold the handle vertically, with the pivot at the bottom.
- 6 Put the pivot into it's hole, and lower the handle towards the opener.
- 7 Don't press it down on the switch, or the motor will start.

opening cans

caution Don't try to open aluminium cans, aerosol cans, pressurised cans, or cans of flammable materials.

- 8 Clean the top of the can.
- 9 Sit the can on a stable, flat work surface.
- 10 Support the lower part of the can loosely in one hand.
- 11 Hold the can opener in the other hand.
- 12 Lift the handle a bit more than 45 degrees – it'll stay there.
- 13 Lower the opener till the guide rests on the rim of the can, and the drive gear is against the side of the can.
- 14 Lower the handle, to bring the cutter down inside the rim of the can, then press a bit harder, to pierce the can.
- 15 Keep pressing, and the handle will push down the switch, and start the motor.
- 16 Let the opener turn the can – it'll need a bit of help on corners.
- 17 The magnet will pull itself down against the top of the can.
- 18 Let go the handle – the opener will keep going.
- 19 When the opener completes the operation, it should switch itself off – if it doesn't, flip the handle up.
- 20 Lift the handle, to release the can.
- 21 Lift the opener off the can – the top of the can (which is now the lid) will stick to the magnet.
- 22 Hold the magnet and lid over a sink or basin, and pull up the lid release, to pull the magnet away from the lid.
- 23 The lid will drop into the basin/sink.

caution take care disposing of the lid, as its edge will be very sharp.



showing off

- 24 If the can is round or oval, with no corners, you may let go of the opener when the motor starts.
- 25 You must keep hold of the can, or it might topple.
- 26 The opener will whiz round the top of the can on its own.
- 27 It'll even stop when the top is completely severed.

care and maintenance

- 28 Switch off before cleaning.
- 29 Lift the handle till it's vertical, then pull it out of the opener.

caution be wary of the cutter – it's sharp

- 30 Wash the handle in warm soapy water.
- 31 Rinse and dry it thoroughly before refitting.
- 32 Wipe the opener with a soft, damp cloth, with a little washing-up liquid, if necessary.
- 33 Don't put the opener in water or any other liquid.
- 34 Don't put any part of the appliance in a dishwasher.
- 35 Don't use harsh or abrasive cleaning agents or solvents.
- 36 Don't oil or grease the drive gear or cutting blade.

charging

- 37 The battery loses its charge slowly when it's not in use.
- 38 A charge should last a couple of weeks in "average" use.
- 39 We recommend recharging after 20 cans, or after two weeks, whichever comes first.
- 40 Recharge for at least 12 hours – overnight is usually easiest.
- 41 Don't leave the adapter permanently connected – you'll reduce the battery life.
- 42 The adapter gets a bit hot – don't worry about it.
- 43 Use the opener only with the adapter supplied, and vice versa.

battery disposal

Sadly, nothing lasts forever, and the day will come when your opener comes to the end of its natural life. When this happens, don't put the dead opener out with your normal household rubbish. It contains a nickel metal hydride (NiMH) battery, which must be removed from the product, and recycled, or disposed of in an environmentally friendly way. Your local authority will have arrangements for recycling or disposing of the battery.

To remove the battery:

- a) remove the screws buried in the screw holes on either side of the appliance
- b) pull the body apart
- c) pull the connectors off the battery terminals.
- d) dispose of the battery and appliance separately
- e) don't put either in your wheelie bin.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



We are required, for the moment, to add the following to our instructions:

- 1 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2 Children should be supervised to ensure that they do not play with the appliance.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, and check that it's fully charged. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products