 




Russell Hobbs

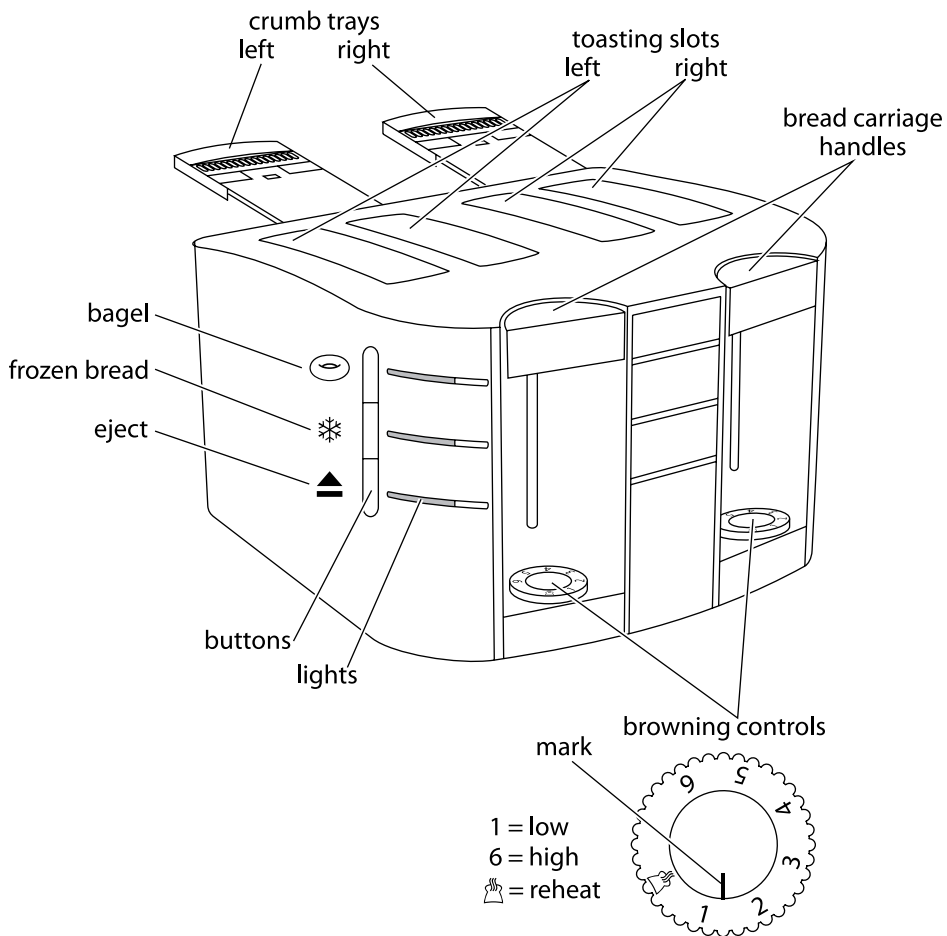

instructions



Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging, but keep it till you're satisfied the toaster is working.

important safeguards

Follow basic safety precautions, including:

- 1 This toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright on a stable, level, heat-resistant surface.
- 4 Don't put it on or near anything that might be damaged even by moderate heat.
- 5 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 6 The area round the toasting slots gets very hot – don't touch!
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 When using only one of a pair of toasting slots, don't let anything get into the other slot, as both slots will become "live" when you lower the bread carriage handle.
- 9 Don't let the toasting slots become covered while toasting, or while the toaster is hot.
- 10 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread. Don't use anything sharp, you'll damage the elements.
- 11 Don't toast sandwiches or buttered items, the fillings or the butter may burn.
- 12 Don't use torn, curled, misshapen or oversized bread. You may jam the toaster. You may create a fire hazard.
- 13 Unplug the toaster when not in use, before moving, and before cleaning. Let it cool down fully before cleaning and storing away.
- 14 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 15 Don't use the toaster unless both crumb trays are fitted and closed.
- 16 Keep the toaster and cable away from sources of heat.
- 17 Don't use the toaster for any purpose other than those described in these instructions.
- 18 This toaster must not be operated by an external timer or remote control system.
- 19 Don't use the toaster if it's damaged or malfunctions.
- 20 If the cable is damaged, return the toaster, to avoid hazard.



household use only

before using for the first time

- 1 Before using the toaster for the first time, you need to cure the elements, to remove their protective coating.
- 2 This may smell a bit, but it's nothing to worry about. Just make sure the room is well ventilated.
- 3 Check that there's nothing in the slots, turn the browning control to 7, and run the toaster without bread.
- 4 When it's done, leave the toaster to cool down fully, then you can use it normally.

toasting bread

- 5 Sit the toaster upright on a stable, level, heat-resistant surface.
- 6 Don't put it on or near anything that might be damaged even by moderate heat.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 9 Put the plug into the power socket. Switch the socket on, if it's switchable.
- 10 You can treat the left and right pairs of toasting slots as two independent 2-slice toasters, with two independent sets of controls.
- 11 Turn the browning control to the required setting (1 = light, 6 = dark).
- 12 Put bread into the toasting slots (maximum thickness 27mm).
- 13 Press the bread carriage handle down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 14 The ▲ light will glow, to show that the elements are heating.
- 15 When it's done, the toast will pop up, the light will go out, and the elements will turn off.
- ✱ Take care – if you're using both pairs of slots, they'll probably pop up at different times.

eject ▲

 
- 16 To stop toasting, press the ▲ button – the toast will pop up, the light will go out, and the elements will turn off.

extra lift 🍞↑

- 17 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

bagel ☉

- 18 Only the brown outside surfaces of bagels should be toasted, the soft inner surfaces shouldn't be browned.
- 19 Split your bagel, and put the two halves into the slots with the brown outsides facing the centre elements.
- 20 Leave the browning control at your favoured setting, lower the bread carriage handle, then press the ☉ button. This heats only the centre elements
- 21 The ☉ and ▲ lights will glow, the brown outsides of the bagel will be toasted, and the cut sides will be warmed.

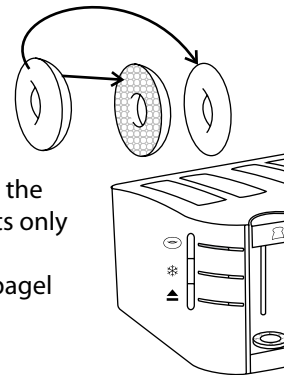

frozen bread ✱


- 22 This feature takes the guesswork out of toasting frozen bread.
- 23 Leave the browning control at your favoured setting, insert the frozen bread, lower the bread carriage handle, then press the ✱ button.
- 24 The ✱ and ▲ lights will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

caution don't try to defrost bread – you'll probably wreck the toaster

- a) toasting frozen bread changes ice to steam, which escapes via the toasting slots
- b) defrosting bread on a low setting changes ice to water, which drips into the toaster, over the electronics and maybe the elements, causing mayhem

reheating toast

25 You must only reheat plain, unbuttered toast.

26 Turn the browning control down to , the lowest setting, before reheating toast.

hints and tips

27 If you're toasting more than one slice of bread, both slices should be of similar size, thickness and freshness, or they'll brown differently.

28 Old (yesterday's) bread contains less moisture, so makes crisper toast.

29 Old or thin bread cooks faster than fresh or thick bread. so use a lower setting.

30 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so use a lower setting.

crumbs

31 Clean the crumb trays frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.

a) unplug the toaster and let it cool

b) slide the crumb trays out of the rear of the toaster

c) empty them

d) wipe them with a damp cloth

e) dry them

f) slide them back into place at the rear of the toaster.

33 Don't use the toaster unless both crumb trays are fitted and closed.

care and maintenance

34 Unplug the toaster when not in use, before moving and before cleaning. Let it cool before cleaning and storing away.

35 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

36 Don't let anything enter the slots, you might damage the elements.

37 Don't put the toaster in liquid.

 
38 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

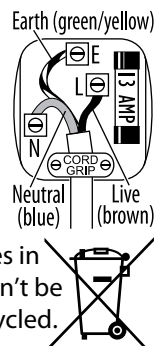

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products