




# Russell Hobbs



instructions

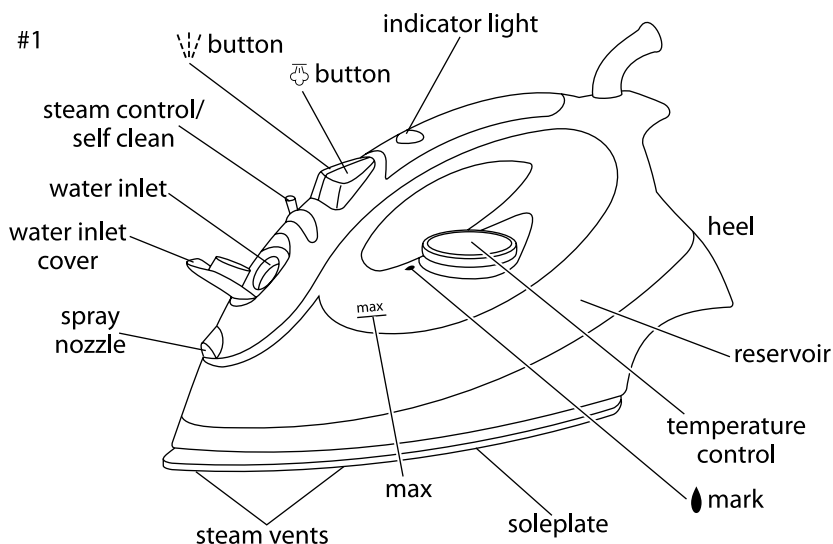

Read the instructions and keep them safe. If you pass the iron on, pass on the instructions too. Remove all packaging, but keep it till you know the iron works.

## important safeguards

Follow basic safety precautions, including:


 
- 1 This iron must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
- 5 Don't touch the soleplate, and keep away from the steam coming from it.
- 6 Take care when emptying the iron – it may contain hot water.
- 7 Don't use the iron in the vicinity of children.
- 8 Use the iron on a stable, level, heat-resistant surface, preferably an ironing board.
- 9 Don't leave the iron unattended while plugged in, or while it's standing on the ironing board. It could be knocked over by you, by a child, or by a pet.
- 10 Unplug the iron before filling, before cleaning, and after use.
- 11 Don't fill the iron directly from the tap, use the jug.
- 12 Don't fill past **max**, or water may escape in use.
- 13 Sit the iron upright when you're not ironing, and when you store it away.
- 14 Leave the iron upright to cool before cleaning.
- 15 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 16 Don't fit any attachment or accessory other than those we supply.
- 17 Keep the iron and the cable away from hotplates, hobs or burners.



- 18 Don't use the iron for any purpose other than those described in these instructions.
- 19 Take care not to scratch the soleplate – avoid buttons, zips, etc.
- 20 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.
- 21 Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- 22 If the cable is damaged, return the iron, to avoid hazard.

## **household use only**








### **before using for the first time**

- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.
- Press the  button 3 or 4 times, to check it out.
- Press the  button 3 or 4 times, to check it out.



### **auto shut-off**


- If the iron is motionless, the element will switch itself off after about 30 seconds with the soleplate down or on its side, or about 8 minutes if it's upright.
- The indicator light will flash.
- To switch on again, lift it up, tilt it forward, then sit it upright to return to its operating temperature.

### **preparation**



- 1 Check for textile care symbols (   ).
- 2 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures .

### **filling (#2)**


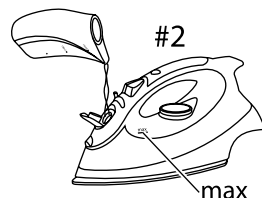
- 3 You may use the iron with tap-water, but if you live in a hard water area, you should use distilled water (not chemically descaled or softened water).
- 4 If you buy distilled water, check that it's marketed as suitable for use in irons.
- 5 Unplug the iron.
- 6 Turn the temperature control to , slide the steam control to  (#3).
- 7 Hold the iron with the soleplate down (#2).
- 8 Lift the bottom of the water inlet cover to open it.
- 9 Pour slowly, to let the air in the reservoir escape, otherwise you'll cause an air lock and the water will overflow.
- 10 Don't fill past **max**, or water will escape in use.
- 11 Wipe up any spillage.



### **switch on**

- 12 Turn the temperature control to .
- 13 Sit the iron on its heel.
- 14 Put the plug into the power socket (switch the socket on, if it's switchable).
- 15 Turn the temperature control to bring the setting you want next to the  mark (#3).
- 16 The indicator light will come on.
- 17 When the iron reaches the temperature you set, the indicator light will go off. It'll then cycle on and off as the thermostat operates to maintain the temperature.

#3 temperature control mark

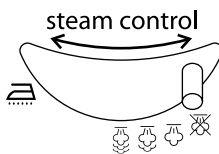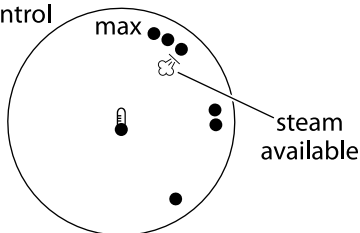

high steam  
medium steam  
low steam  
no steam  
self clean

## temperature setting guide

### label marking

- cool – nylon, acrylics, polyester
- warm – wool, polyester mixtures
- hot – cotton, linen
- do not iron

### temperature dot setting



✱ If the instructions on the fabric label differ from this guide, follow the instructions on the label.

## reducing temperature


18 Reducing the temperature takes a bit longer, as the element has to lose the heat it has built up, so be patient. It's best to organise your ironing so that you don't need to reduce the temperature ("**preparation**" page 3, point 2).

## steam ironing

- 19 When steam ironing, you must set the temperature control at or higher.
- 20 If you don't, you'll get water on your clothes, not steam.
- 21 Move the steam control to the setting you want, = no steam, = high steam (#3).
- 22 Wait till the indicator light goes out, then start ironing.


## spray

- ✱ Water spotting affects some fabrics. Test this out on a hidden part of the fabric.
- 23 This works with dry or steam ironing, as long as there's water in the reservoir.
- 24 Check that there's water in the reservoir.
- 25 Lift the iron off the fabric.
- 26 Aim the spray nozzle at the fabric.
- 27 Press the button.
- 28 You may have to press it 2 or 3 times to pump water through the system.

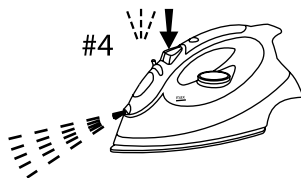

## shot of steam

- 29 This works with dry or steam ironing, as long as there's water in the reservoir, and the temperature is above .
- 30 Check that there's water in the reservoir.
- 31 Check that the temperature control is at or higher.
- 32 Lift the iron off the fabric.
- 33 Press the button.
- 34 You may have to press it 2 or 3 times to pump water through the system.
- 35 Leave 4 seconds between shots, to let the temperature build up.

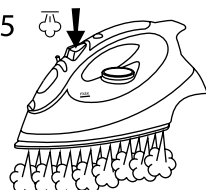


## dry ironing

36 If you're going to be dry ironing for 20 minutes or more, empty the reservoir first, to avoid spontaneous bursts of steam.

37 Move the steam control to ☒.

38 Wait till the indicator light goes out, then start ironing.

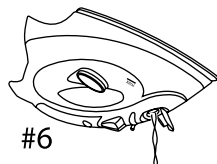

## vertical steaming

39 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.

40 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

41 Check that there's nothing behind the fabric that may be damaged by the steam.

42 Check that pockets, turn-ups, and cuffs are empty.

43 Check that there's water in the reservoir.


44 Turn the temperature control to **max**, move the steam control to ☒.

45 Hold the iron close to (but not touching) the fabric.

46 Press the ☒ button (you're using the "shot of steam" function vertically).

47 You may have to press it 2 or 3 times to pump water through the system.

48 Leave 4 seconds between shots, to let the temperature build up.

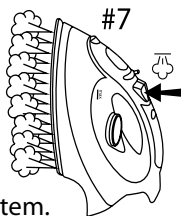


## after use

49 Turn the temperature control to ●, move the steam control to ☒.

50 Unplug the iron.

51 Lift the bottom of the water inlet cover to open it.

52 Hold the iron over a sink, turn it upside down, and drain the water from the reservoir.

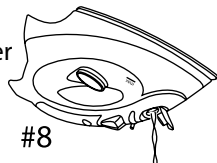

**caution** the water may be hot

53 Sit the iron on its heel.

54 Leave it to cool down completely.

55 When it's cold, wipe off any moisture, and close the water inlet cover.

56 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

## self clean

57 To prevent scale building up, use the self clean function regularly, at least monthly in normal water areas, more often in hard water areas.

58 You'll need a basin or a large bowl to catch the water coming out of the soleplate.

59 Fill the reservoir to the **max** mark.

60 Turn the temperature control to **max**, move the steam control to ☒.

61 Sit the iron on its heel.

62 Put the plug into the power socket, and wait till the indicator light goes out.

63 Now hold the iron over the basin or bowl, with the soleplate down (#9).

64 Move the steam control to ☒, hold it there, and gently move the iron to and fro, over the basin or bowl.



**caution** keep clear of the escaping water and steam

65 Water and steam will wash scale and dust through the soleplate, and into the sink.

- 66 When the reservoir is empty, release the self clean button.
- 67 Unplug the iron, and sit it on its heel to cool.
- 68 When it's cold, wipe off any moisture.
- 69 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

### **anti-scale**

- 70 The anti-scale agent incorporated in the iron helps prevent the build-up of scale.
- 71 Don't use a descaling solution, or you'll destroy the anti-scale agent.

### **cleaning**

- 72 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 73 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 74 Remove spots from the soleplate with a little vinegar.
- 75 Take care not to scratch the soleplate.
- 76 Don't put the iron in water or any other liquid.
- 77 Don't use harsh or abrasive cleaning agents or solvents.




## connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

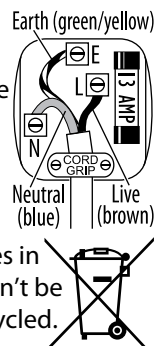

## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

### Customer Service

(correspondence only)

Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS

### Customer Returns

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))  
telephone 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products