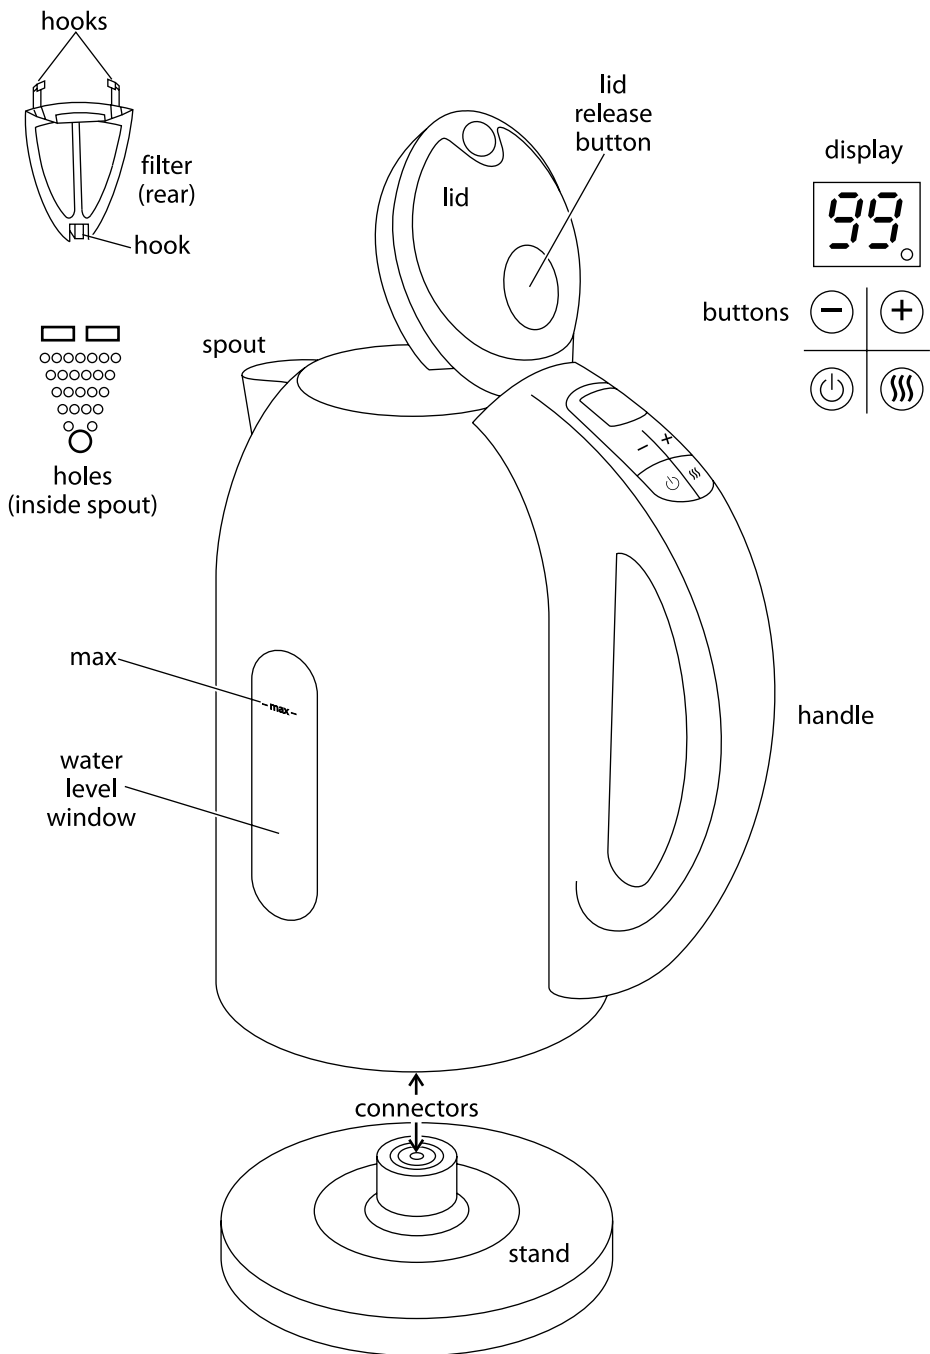 




# Russell Hobbs




instructions



Read the instructions and keep them safe. Pass them on if you pass the kettle on. Remove all packaging, but keep it till you know the kettle works.

## **important safeguards**

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid. Don't use the kettle in a bathroom, near water, or outdoors. 
- 3 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 4 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 5 Don't use the kettle without the filter in place – it may spit boiling water.
- 6 Don't touch hot surfaces. Use the handle.
- 7 Don't open the lid while the water is heating.
- 8 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 9 Don't switch on unless the kettle contains at least 2 cups of water.
- 10 Don't fill past the **max** mark (inside the kettle), or it may spit boiling water.
- 11 Remove the kettle from its stand before filling or pouring.
- 12 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 13 Check the lid is fully closed before switching the kettle on, or it may not switch off.
- 14 Keep the kettle, stand, cable, and plug away from sources of heat.
- 15 Don't use the kettle for any purpose other than heating water.
- 16 Use the kettle only with the stand supplied (and vice versa).
- 17 This appliance must not be operated by an external timer or remote control system.
- 18 Don't use the kettle if it's damaged or malfunctions.
- 19 If the cable is damaged, return the kettle, to avoid hazard.

## **household use only**

### **before using for the first time**

- Fill to **max**, boil, discard the water, then rinse. Do this 3 times, to remove manufacturing dust, etc.

### **positioning**


 
- 1 Put the stand on a stable, level surface.
- 2 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 3 Wind excess cable beneath the stand.

### **filling**

 
**caution** keep clear, steam may escape from the lid

- 4 Remove the kettle from the stand.
- 5 Press the lid release button to open the lid.
- 6 Fill the kettle with at least 2 cups of water, but don't fill above **max**.
- 7 If you overfill, the kettle may spit boiling water.
- 8 Close the lid, and press it down, to lock it closed.
- 9 Check the lid is closed, or the kettle won't switch off when it boils.

 
## switching on

- 10 Put the kettle on the stand – take care not to spill.
- 11 Plug the stand into a power socket (switch the socket on, if it's switchable).
- 12 Press and release the  button – this switches on the display and the element.
- 13 The display will show  (flashing), and the kettle will start to heat up.

## boil

- 14 If you want to boil the water, leave it at .
- 15 When the water boils, the element will switch off, and the display will stop flashing.
- 16 After about a minute, the display will switch off.


 
## variable temperature

- 17 If you want to heat the water to a different temperature, use the **—** and **+** buttons to change the display from  (boil) to the temperature you want.
- 18 The temperatures available are: 99 (boil), 95, 90, 85, 80, 75, 70, 65, and 60 (that's °C).
- 19 The display will flash while the water is heating, then stop flashing to show that it has reached the set temperature.
- 20 After about a minute, the display will switch off.

## changing temperature


- 21 When the kettle has reached the set temperature, you can't reduce the temperature setting on the display till the water has cooled down.
- 22 Normally, this wouldn't matter, because you would use the water at the temperature you set, then refill the kettle.
- 23 If you get the temperature wrong, and want to change it:
  - either** pour the hot water away, and refill with cold water
  - or** wait till the kettle cools down (it'll cool a bit faster if you open the lid)

## keep warm

- 24 If you want the kettle to keep the water at the set temperature, press and release the  button.
- ★ This function only works at the 90, 85, 80, 75, 70, 65, and 60 settings.
- 25 A dot will appear on the bottom right of the display to show that the keep warm function is operating.
- 26 When the keep warm function is operating, the display won't switch off after a minute, it'll remain lit.
- 27 The element will switch on intermittently, to keep the water hot.
- 28 When it's heating, the display will flash. The flashing will stop when the water again reaches the set temperature.
- 29 To cancel the keep warm function, press and release the  button again – the dot will disappear.

**caution** keep an eye on the water level – don't let the level get below 2 cups

## switching off

- 30 To switch off manually, press and release .
- 31 This will switch off the element and the display, and put the kettle into standby mode.
- 32 To save electricity, unplug the stand.

## **general**

- 33 Remove the kettle from the stand before pouring.
- 34 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 35 Don't tilt the kettle backwards – water might get on to the control area.
- 36 If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 37 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch the kettle off automatically, which then condenses and escapes via vents under the kettle.
- 38 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

## **using with insufficient water**

- 39 This will shorten the life of the element.
- 40 A boil-dry cut-out will switch the kettle off.
- 41 To reset the cut-out, you must remove the kettle from the stand and let it go cold.
- 42 Sit the kettle on the work surface till it's cold.
- 43 Don't fill the kettle till it's cold, or it may spit.

## **care and maintenance**

- 1 Unplug the stand (switch the socket off first, if it's switchable), and let the kettle cool down fully.
- 2 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 3 Keep all connectors and sockets dry.
- 4 Don't put the kettle or stand in liquid.
- 5 Don't use harsh or abrasive cleaning agents or solvents.

## **descale regularly – even in soft water areas**

- 6 **Limescale** may be white, coloured, even rusty-looking, but it's normally visible.
- 7 **Phosphate scale** isn't generally visible, but it's there, even in soft water areas.
- 8 **All scale** causes overheating, reduces the kettle's life, and may trigger the boil-dry cut-out.
- 9 So, even with soft water, descale regularly, to help keep your kettle in working order.
- 10 Use a descaler suitable for plastic products (all kettles have plastic parts).
- 11 Follow the instructions provided with the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.
- ✱ Products returned under guarantee with faults due to scale will be subject to a repair charge.

## **water filter**

- 12 Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

## **cleaning the filter**

- 13 Check your hands are free from soap, hand cream, or anything which might leave a taint.
- 14 Switch the kettle off, and let it cool.

- 15 Open the lid.
- 16 Push the top of the filter down and back, into the kettle, to release the hooks on the top of the filter from the rectangular holes on either side of the spout.
- 17 Lift the filter out of the kettle, to disengage the bottom hook from the circular hole at the bottom of the spout.
- 18 Rinse the filter under a running tap while brushing with a soft brush.
- 19 Rinse the kettle, in case scale particles have fallen inside.
- 20 Lower the filter into the kettle, and engage the bottom hook in the circular hole at the bottom of the spout.
- 21 Press the top of the filter gently down and towards you, to force the hooks on the top of the filter into the rectangular holes on either side of the spout.
- 22 Close and lock the lid.

**caution** Don't use the kettle without the filter in place – it may spit boiling water.



## connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

**Customer Service, Salton Europe Ltd, Failsworth, Manchester M35 0HS**

email: [service@saltoneurope.com](mailto:service@saltoneurope.com)

telephone: 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products

