




# Russell Hobbs



instructions

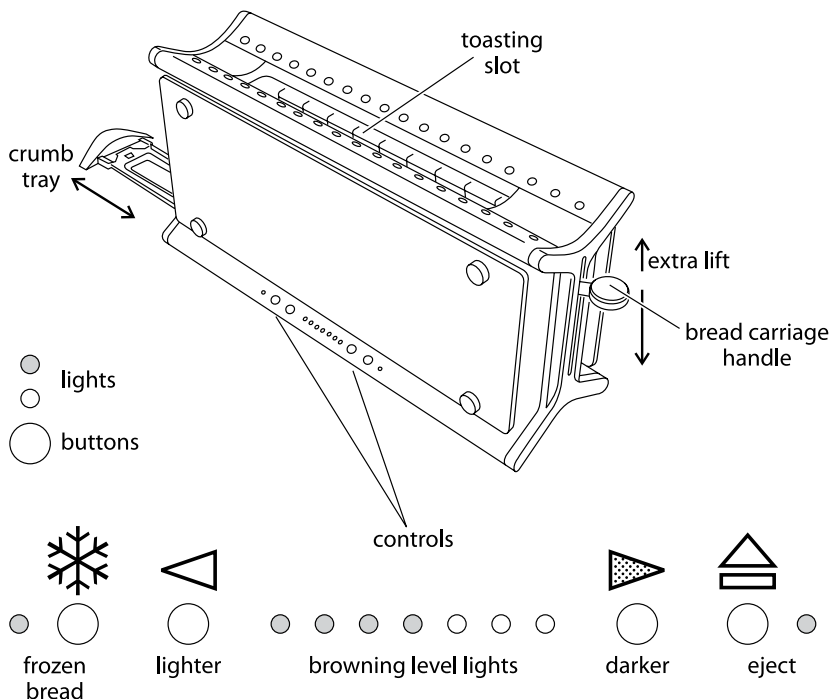

Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging, but keep it till you're satisfied that the toaster is working.

## important safeguards

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright on a firm, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 6 The area round the toasting slot gets very hot – don't touch!
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Don't cover the toaster or put anything on top of it – you'll cause a fire hazard.
- 9 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread. Don't use anything sharp, you'll damage the elements.



- 10 Don't toast sandwiches or "buttered" items, they may catch fire.
- 11 Don't toast torn, curled, oversized, or misshapen slices of bread, you may jam the toaster.
- 12 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is fitted and closed.
- 15 Don't connect the toaster to an external timer or remote control system.
- 16 Keep the toaster and the cable away from hotplates, hobs or burners.
- 17 Don't use the toaster for any purpose other than those described in these instructions.
- 18 Don't operate the toaster if it's damaged or malfunctions.
- 19 If the cable is damaged, return the toaster, to avoid hazard.

### **household use only**

#### **before using for the first time**

Set the browning level to maximum (all browning level lights on), and run the toaster without bread. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

#### **toasting bread**

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
- 2 Don't put it on or near anything that could be damaged even by moderate heat.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 5 Put the plug into the power socket (switch the socket on, if it's switchable).
- 6 The left four browning level lights will light up.
- 7 Use the ◀ buttons ▶ at either end of the browning level lights to lighten ◀ or darken ▶ the toast.
- 8 The browning level lights will come on/go off to indicate the level chosen. The more lights showing, the darker the toast.
- 9 Put bread into the toasting slots (maximum thickness 28mm/1⅛").
- 10 Press the bread carriage handle down fully.
- ★ It won't lock down unless the toaster is connected to the electricity supply.
- 11 The ☐ light will come on, and the elements will heat up.
- 12 When it's done, the ☐ light will go out, the toast will pop up and the elements will turn off.

#### **eject ☐**

- 13 To stop the toaster before it's finished, press the ☐ button. The ☐ light will go out, the toast will pop up and the elements will turn off.

#### **extra lift**

- 14 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

## **frozen bread ❄️**

- 15 This takes the guesswork out of toasting frozen bread.
- 16 Leave the browning level at your favoured setting, insert the frozen bread, lower the bread carriage handle, then press the ❄️ button.
- 17 The ❄️ light will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

**caution** don't try to defrost bread – you'll probably wreck the toaster

- a) toasting frozen bread changes ice to steam, which escapes via the toasting slots
- b) defrosting bread on a low setting changes ice to water, which drips into the toaster, over the electronics and maybe the elements, causing mayhem

## **reheating toast**

- 18 Use the lowest setting.
- 19 You must only reheat plain, "unbuttered" toast.

## **hints and tips**

- 20 If toasting more than one slice, use slices of similar size, thickness and freshness.
- 21 Old (yesterday's) bread contains less moisture, so makes crisper toast
- 22 Old or thin bread cooks faster than fresh or thick bread. Use a lower setting
- 23 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting

## **crumbs**

- 24 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 25 Unplug the toaster and let it cool down.
- 26 Slide the crumb tray out from underneath the side of the toaster, and empty it.
- 27 Wipe the crumb tray with a damp cloth, dry it, then replace it in the toaster.
- 28 Don't use the toaster unless the crumb tray is fitted and closed.

## **care and maintenance**

- 29 Unplug the toaster and let it cool.
- 30 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 31 Don't let anything enter the slot, you might damage the elements.
- 32 Don't put the toaster in water or any other liquid.
- 33 Don't use harsh or abrasive cleaning agents or solvents.








## connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

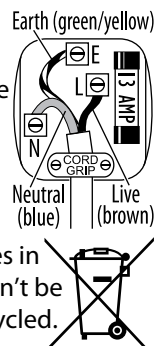

## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

### Customer Service

(correspondence only)

Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS

### Customer Returns

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))  
telephone 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products