




Russell Hobbs



instructions

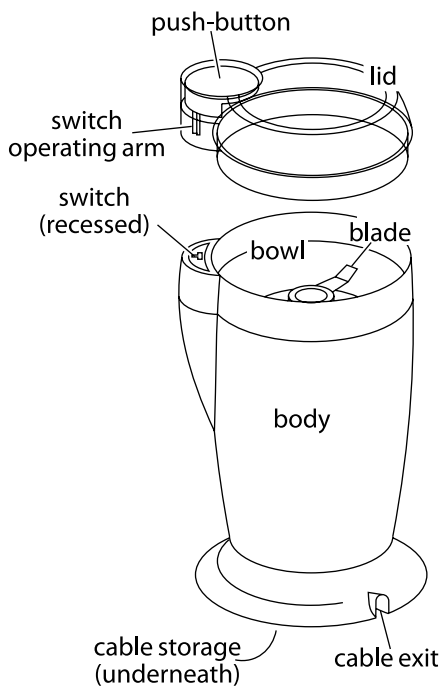

Read the instructions and keep them safe. Pass them on if you pass the grinder on.

Remove all packaging, but keep it till you're satisfied the grinder is working.

important safeguards

Take basic safety precautions including:

- 1 The grinder must only be used by a responsible adult.
- 2 Don't put the grinder in water, don't use it in a bathroom, near water, or outdoors. 
- 3 The switch is recessed so it can't be switched on accidentally. Don't try to overcome this – it's for your own safety. To switch the grinder on, fit the lid then press the push-button.
- 4 Store and use the grinder out of reach of children.
- 5 Unplug from the power socket when not in use, and before cleaning.
- 6 Don't leave the grinder unattended when plugged in.
- 7 Don't try to use the grinder without fitting the lid.
- 8 Don't use the grinder if the lid or blade is damaged.
- 9 Don't put your fingers into the bowl, even when cleaning, the blades are sharp. 
- 10 Use and store the grinder out of reach of children.
- 11 Route the cable so it doesn't overhang and can't be caught or tripped over.
- 12 Don't grind for more than 1 minute. After 1 minute, let it rest for at least 3 minutes, or you'll damage the motor.
- 13 Don't fill above the rim and don't run it empty, or you'll damage the motor.
- 14 Sit the grinder on a stable, level surface.
- 15 Keep the grinder and cable away from hotplates, hot hobs, burners, etc.

- 16 Don't use accessories or attachments other than those we supply.
- 17 Don't use the grinder for any purpose other than those described in these instructions.
- 18 Don't use the grinder if it's damaged or malfunctions.
- 19 If the cable is damaged, return the grinder, to avoid hazard.

household use only

positioning

- 1 Sit the grinder on a stable, level surface.
- 2 The cable is stored underneath the grinder. Unwind enough to reach the power socket. Push the cable into the cable exit.
- 3 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 4 Don't plug it in yet.

filling

- 5 Lift the lid off.
- 6 Measure coffee beans into the bowl. The amount depends on the type of coffee, how strong you like it, and how many cups you want.
- 7 To start off, try 1 rounded dessert spoon (10ml) of coffee beans per cup. The grinder holds 5 rounded dessert spoons (5 x 10ml).
- 8 Don't fill it right up to the rim – it'll spill when you take the lid off.
- 9 Grind only what you need. You can keep coffee beans in a sealed container for about two weeks, but ground coffee starts to lose flavour as soon as it comes out of the grinder. That lovely smell that fills the room is flavour stolen from your cup.

grinding

- 10 Align the push-button with the switch and lower the lid on to the bowl.
- 11 Check that it's seated properly on the bowl.
- 12 Plug the grinder into the power socket.
- 13 Hold the lid down.
- 14 Press the push-button to start grinding.
- 15 Release the push-button button to stop grinding.
- 16 Keep hold of the lid till the blade has stopped moving, so you can't cut yourself, and you won't spray the kitchen with ground coffee.

grind size

- 17 You need a fine grind for espresso coffee, medium grind for filter coffee, and coarse grind for percolators and cafetières.
- 18 Grind in 5 second bursts, watch the grind through the lid, stop when it looks about right.
- 19 Saying "one hundred and one, one hundred and two, one hundred and three, one hundred and four, one hundred and five" takes roughly 5 seconds.
- 20 This is best said in a firm, clear voice. Anyone watching will probably realise you're timing something. If you say it to yourself, they'll just see your lips moving and jump to conclusions. You could lose friends that way.
- 21 Don't grind for more than a minute. It won't do the coffee or the grinder any good.

emptying

- 22 Unplug the grinder.
- 23 Tap the side of the grinder to settle the coffee in the bowl.
- 24 Lift the lid off – take care not to spill too much.
- 25 Tip or spoon the coffee into the coffee maker..
- 26 Wait a couple of minutes before grinding again.

care and maintenance


- 1 Unplug before cleaning.
- 2 Take care when cleaning round the blade. It may not look sharp, but it can cut you if it's not treated with respect.
- 3 Don't lubricate the blade or spindle – it won't to any good, as the spindle is sealed, but it will contaminate your coffee.
- 4 Clean out the bowl with a soft brush (e.g. a pastry brush), after each use – stale coffee grounds from a previous grinding will taint the next grinding.
- 5 Wipe the outside of the body with a soft damp cloth.
- 6 Wipe the inside and outside of the lid with a soft damp cloth, then dry it thoroughly before use.
- 7 Don't put the grinder in any liquid.
- 8 Don't use harsh or abrasive cleaners or solvents.



connection

This product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

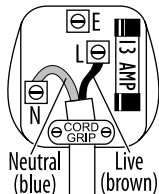

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.