



# Russell Hobbs

*Smart in the kitchen...*



## coffee mill

### instructions and guarantee

Read the instructions and keep them safe. Pass them on if you pass the coffee mill on. Remove all packaging, but keep it till you're satisfied the coffee mill is working.

### **important safeguards**

Follow basic safety precautions, including:

1. Don't put the coffee mill in liquid, don't use it in a bathroom, near water, or outdoors.
2. The coffee mill must only be used by a responsible adult.
3. Use and store it out of reach of children.
4. Unplug the coffee mill when not in use.
5. Don't leave the coffee mill unattended when plugged in.
6. Sit the coffee mill on a stable, level surface, near a power socket, and out of reach of children.
7. Route the cable so it doesn't overhang, and can't be tripped over or caught.
8. Keep the coffee mill away from hotplates, hobs, and burners.
9. Don't fill the coffee bean hopper above the rim and don't use it empty, or you may damage the motor.
10. Don't use the coffee mill for longer than 2 minute. After 2 minutes, leave it to cool for at least 2 minutes before reuse.
11. Don't use accessories or attachments other than those we provide.
12. Don't use the coffee mill for any purpose other than those described in these instructions.
13. Don't use the coffee maker if it's damaged or malfunctions. If the cable or plug is damaged, return the coffee mill in order to avoid hazard.



### **household use only**

#### **before use for the first time**


Clean the coffee mill to remove manufacturing dust, etc.

#### **assembly**

1. Sit the coffee mill on a stable, level work surface, near a power socket, and out of reach of children.
2. Lower the hopper on to the mill.
3. Because of the shape of the mount underneath the hopper, it'll go on in any of three positions. Make sure you can see one of the —max— marks.
4. Tilt the coffee bin (1), fit the outside bottom edge to the outside of the stand, then push the slot over the chute (2).
5. Align the cutout on the lid with the slot on the coffee bin, and put the lid on the coffee bin.

#### **fill**

6. Put the coffee beans into the hopper. The amount will vary with the type of coffee and your own taste. We suggest starting with 1 scoop of coffee beans per cup of coffee. Don't fill above **max**.
7. Put the lid on the hopper.

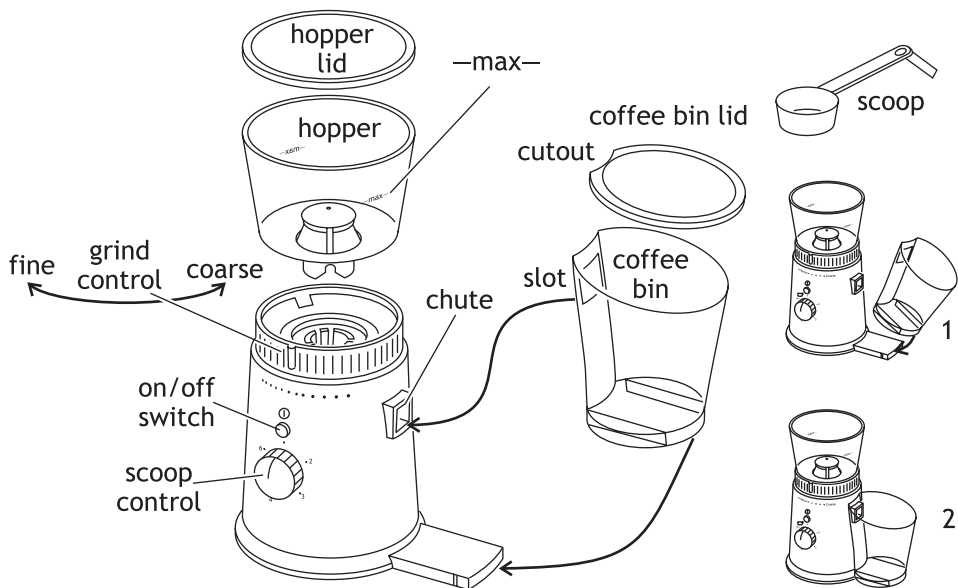

## set the controls

8. Turn the the grind control (and the hopper) left for fine, right for coarse.
9. In general, use fine for espresso machines, coarse for percolators, cafetières etc., and medium (half way) for filter coffee makers.
10. You'll need to experiment to find the settings that suit your taste
11. Set the scoop control to the number of scoops used. It's marked 1 to 6.
12. These settings are a guide only. Fine milling takes longer than coarse. If in doubt, use a higher number and stop it when the hopper empties.

## grind

13. Plug the coffee mill in (switch the socket on, if it's switchable).
14. Press the on/off switch ① to start the grind.
15. When it stops, your ground coffee is ready for use.
16. If you need to stop the coffee mill before the process has finished, press the on/off switch ① again, or turn the scoop control to point straight up.
17. Unplug the coffee mill (switch the socket off first, if it's switchable).
18. Lift out the coffee bin, remove the lid, and tip or spoon the milled coffee into the filter, basket, etc. of your coffee maker.
19. If you want to grind more coffee, let the coffee mill rest for 2 minutes first.
20. Don't leave coffee beans in the hopper for more than an hour or so. They'll lose flavour.
21. Don't leave ground coffee in the coffee bin — it'll lose flavour very fast.
22. If you want to store ground coffee in the coffee bin, put the coffee bin into the fridge. This'll slow (but not stop) the flavour loss.
23. Empty the coffee bin before you use it again. Stale coffee will spoil the flavour of your next grind.

## care and maintenance

Unplug the coffee mill (switch the socket off first, if it's switchable).

Remove the coffee bin, the hopper, and both lids, and wash in warm soapy water. Rinse and dry thoroughly before use. They're not dishwasher-safe. The harsh environment inside the dishwasher will damage the surface finishes.

Any coffee in the chute can be dislodged with the end of the scoop.

Clean the outer surfaces of the coffee mill with a soft damp cloth.


Don't try to lubricate the coffee mill, don't put the coffee mill in water or any other liquid, and don't use harsh or abrasive cleaners or solvents.

## connection

The product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

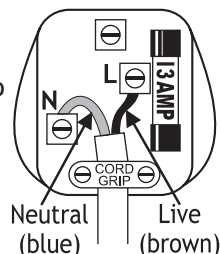

## service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Service. They'll give you an estimate for inspection/repair.

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

Customer Service (service@saltoneurope.com)  
 Salton Europe Ltd, Failsworth, Manchester M35 0HS UK  
 www.eSaltoneurope.com  
 Telephone 0845 658 9700 (local rate number)