



Russell Hobbs



THE SLICK STICK

2 YEAR WARRANTY

RHSM150 SERIES

RHSM150_IB_FA_190614

INSTRUCTIONS & WARRANTY

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside

Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: info@spectrumbrands.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket

Auckland 1149 New Zealand

Customer Service in New Zealand

TollFree: 0800 736 776

Email: service@spectrumbrands.co.nz

Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects



In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials from the date of purchase (**Warranty Period**), for the period of:-
 - (a) Two (2) years for Russell Hobbs products (see product packaging for details)
 - (b) Two (2) years with five (5) year motor warranty for Russell Hobbs products (see product packaging for details)
 - (c) Limited Lifetime, Ten (10) years for Russell Hobbs cookware.
 - (d) One (1) year for George Foreman® appliances.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty


If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

Congratulations on the purchase of your new Russell Hobbs appliance. Each unit is manufactured to ensure safety and reliability. **Before using the appliance for the first time, please read this instruction booklet carefully and keep it for future reference.**

Pass it on if you pass on the appliance. When using this appliance, basic safety precautions should always be followed.

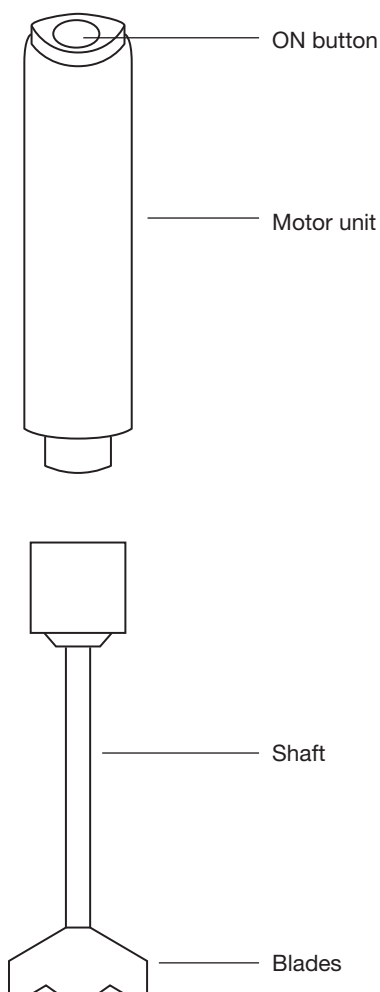

BEFORE FIRST USE

CAUTION: Always turn off and unplug from the wall power outlet before fitting or removing the shaft.





- Carefully remove all contents from the packaging.
- Take extreme care when unpacking and handling the sharp blades.
- Dismantle and clean all parts as instructed in the “CARE AND CLEANING” section of this instruction book.

CAUTION: Handle chopping blades carefully.



USING THE ‘SLICK STICK’ MIXER

CAUTION: Always turn off and unplug from the wall power outlet before fitting or removing the shaft.

CAUTION: DO NOT handle by the blade. The blades are very sharp. Use caution when handling and storing.

- Connect the shaft to the motor unit by aligning the arrow symbol  on the motor unit with the unlocked  symbol on the shaft. Twist so that the locked symbol  and the arrow symbol  are aligned, and the shaft and the motor unit are tightly fitted together.
- Insert the plug into a wall power outlet and switch the outlet on.

NOTE: To avoid splashing, immerse the shaft end into the ingredients before operating the mixer.

- Holding the ‘Slick Stick’ mixer with a firm grip, press and hold the ON button to start the motor.
- Make a rotating, up and down motion to obtain even processing of the ingredients.
- Release the ON button to stop the motor.
- After use, switch off the wall power outlet and remove the plug from the socket.
- To disengage the shaft from the motor unit, twist the shaft so that the arrow symbol  on the motor unit aligns with the unlocked symbol  on the shaft.
- Always switch off and disconnect the appliance from the wall power outlet when not in use.

CAUTION: For your safety, we recommend you do not process liquids/foods that are hotter than 40°C.

PRACTICAL HINTS

- The ingredients must at least cover the lower part of the shaft/blade area for the process to be successful.
- Remove any cooking vessels (e.g. saucepan) from the source of heat before blending/mixing hot ingredients.
- Leave cooked foods to cool down for a while before blending/mixing. For your safety, we recommend you do not process foods and/or liquids at temperatures above 40°C.
- For fibrous foods (leeks, celery, asparagus, etc.) disconnect from the wall power outlet and clean the shaft and blade area regularly during use. Follow the safety instructions for disassembly and cleaning.
- For fruit-based preparations, first cut up the fruit into manageable sized pieces and remove pips, stones and thick skins.
- Use short bursts only when processing hard foods.

CARE AND CLEANING

CAUTION: Care should be taken when handling and cleaning sharp cutting blades.

CAUTION: Always turn off and unplug the appliance from the wall power outlet before cleaning.

- Do not immerse the motor unit in water or place in the dishwasher. Wipe over with a soft damp cloth only.
- Detach the shaft from the motor unit and clean the blade end in hot soapy water, with a nylon brush.
- Rinse thoroughly and ensure it is completely dry before storing.
- Do not use alkaline cleaning agents or harsh abrasives when cleaning this appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. To protect against electrical hazards, do not immerse the power cord, plug or stick mixer motor unit in water or any other liquid.
2. Do not use outdoors or in damp or moist areas.
3. Always use the appliance handles when handling.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Care should be taken to avoid personal injury when handling the sharp cutting blades. Use a glove or a towel for safety.
6. Always switch off and disconnect from the wall power outlet before assembling, disassembling, cleaning or leaving the appliance unattended.
7. Always switch off and disconnect the appliance from the wall power outlet when not in use.
8. To disconnect, switch off the wall power outlet, then grasp and pull the plug from wall outlet. Never pull by the cord.
9. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, been dropped or damaged in any manner. Contact Customer Service for examination, adjustment, repair or replacement.
10. There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
11. Do not use on an inclined plane or unstable surface.
12. Keep the appliance and power cord away from the edges of benches and countertops.
13. Keep hands and utensils away from moving blades when in use to prevent the possibility of severe personal injury and damage to the stick mixer. A plastic/silicone scraper may be used, but only when the appliance is not running.
14. Do not operate the stick mixer motor unit without the attachments fitted.
15. Always cut food items into manageable pieces before processing.
16. Do not use the stick mixer for more than 1 minute. Then allow the motor to cool for 2 minutes.
17. When processing hard food, use short bursts. Do not run for longer than 15 seconds at a time.
18. Ensure the stick mixer is switched off and the blades have come to a complete stop before removing processed contents.
19. The blender shaft blade is sharp and it rotates at high speed. So, to avoid serious injury:
 - a. do not switch on until the blade is inside the container
 - b. switch off before lifting the blade from the container
 - c. do not touch the blade edge – even when cleaning
 - d. do not plug in until just before use
 - e. unplug immediately after use
 - f. do not leave the appliance unattended while plugged in
20. When using the blender shaft in hot liquids, do not allow the blade to break the surface at an angle, in case you spray liquid outside the container.
21. Do not use the blender shaft in hot oil – splashes could cause a serious burn.
22. For your safety, we recommend that you do not blend liquids/foods that are hotter than 40°C.
23. Ensure the stick mixer is switched off and the blades have come to a complete stop before removing processed contents.
24. Do not overfill the mixing/processing containers.

25. Do not place on or near any heat sources.
26. CAUTION: The blades are extremely sharp. Handle with care.
27. Store the blades in a safe location out of reach of children or persons with disabilities.
28. Follow the instructions when cleaning this appliance.
29. Do not use alkaline cleaning agents or harsh abrasives when cleaning this appliance.
30. Always thoroughly clean the appliance after each use.
31. Do not use the appliance for other than its intended purpose. Misuse of the appliance may result in personal injury.
32. This appliance is not a toy. Children shall be supervised to ensure they do not play with this appliance.
33. This appliance is not intended to be operated by means of an external timer or separate remote control system.
34. For added safety, electrical appliances should be connected to a power outlet that is protected by a 'Residual Current Device' (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.

SAVE THESE INSTRUCTIONS.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.



www.russellhobbs.com.au

www.russellhobbs.co.nz

RUSSELL HOBBS and logo are Trade Marks of Spectrum Brands, Inc., or one of its subsidiaries.
Manufactured in China to Spectrum Brands specifications. ©2014 Spectrum Brands, Inc.