








Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

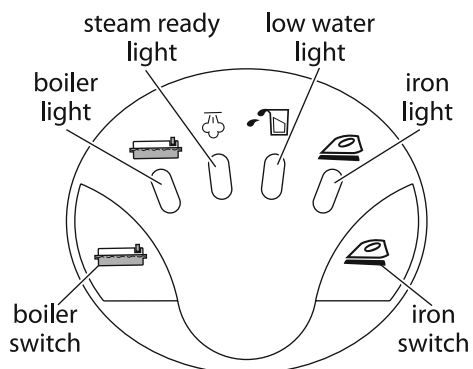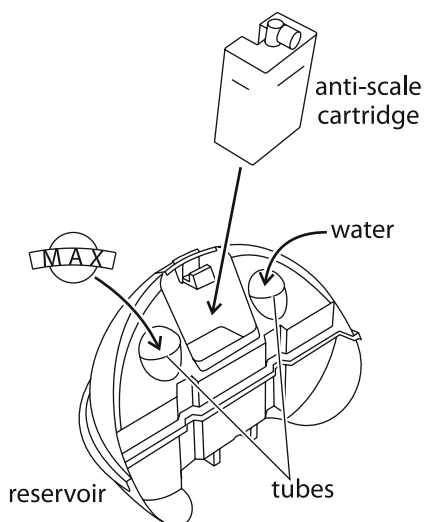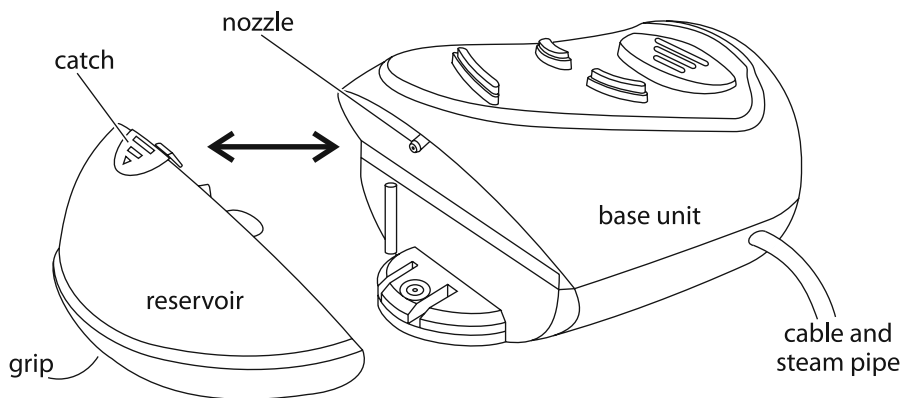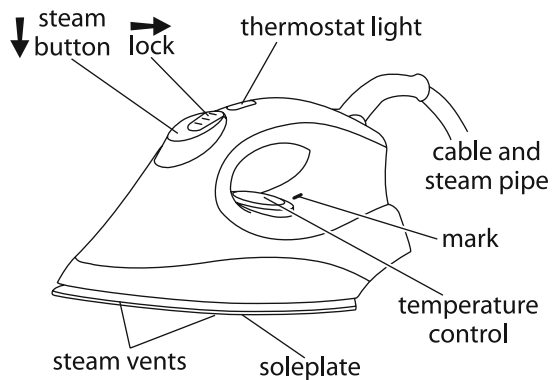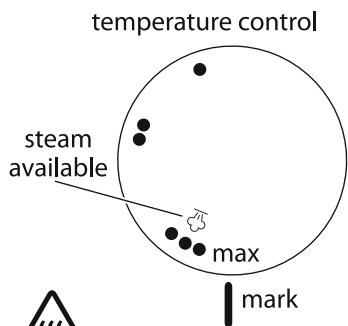



Read the instructions, keep them safe, pass them on if you pass the iron on.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the iron and cable out of reach of children under 8 years.
 - 2 Sit the base unit on a stable, level, heat-resistant surface, preferably a purpose-built "steam generator" type ironing board.
 - 3 Rest the iron only on the base unit.
 - 4 Use the iron only on a stable surface.
 - 5 Don't leave the iron unattended while plugged in or standing on the ironing board. It could be knocked over.
 - 6 Unplug the iron before filling, before cleaning, and after use.
 - 7 Don't use the iron if it's dropped, damaged, malfunctions or leaks.
 - 8 If the cable is damaged, return the iron, to avoid hazard.
-  The surfaces of the appliance will get hot.
-  Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.
- 9 Route the cable so it doesn't overhang, and can't be tripped over or caught.
 - 10 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
 - 11 Don't touch the soleplate, and keep away from the steam coming from it.
 - 12 Don't use the iron in the vicinity of children.
 - 13 Don't sit the base unit on a soft, carpeted, or upholstered surface, as this may block the vents underneath the base unit.
 - 14 Don't fit any attachment or accessory other than those we supply.
 - 15 Keep the cables and steam pipe away from hot parts.
 - 16 Don't use the iron for any purpose other than those described in these instructions.
 - 17 Take care not to scratch the soleplate – avoid buttons, zips, etc.
 - 18 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.

household use only



REMOVE ALL PACKAGING

- Remove any labels, stickers or packaging from the iron and soleplate.

CURE THE ELEMENT

- Before using the iron for the first time, or if it's not been used for a long time, iron a scrap piece of cotton (an old towel is ideal) to remove any accumulated residues.
- Don't worry if the iron smokes a bit at first, it'll stop as the residues evaporate.

WATER

- 1 Use ordinary tap-water – the anti-scale cartridge will soften the water.
- 2 If the anti-scale cartridge needs replacing, and you don't have a replacement, you should use distilled water while you're waiting for the replacement to be delivered.
- ★ Don't use chemically descaled water, or water from a water softener – softened water can do more damage to your iron than hard water.
- 3 If you buy distilled water, check that it's marketed as suitable for irons.
- 4 Don't add anything to the water, and don't use water with anything added to it.
- 5 When the water is converted to steam, chemicals, perfume, and other additives will coat the inside of the steam chamber, shortening the life of the iron.

FILLING


- 6 Switch off before filling – press and release the iron switch and the boiler switch, then unplug the iron.
- 7 Remove the reservoir:
 - a) put the fingers of one hand into the grip under the front of the reservoir
 - b) press the catch on the top rear of the reservoir with the other hand
 - c) pull the reservoir out of the base unit
- 8 Fill the reservoir:
 - d) one of the tubes in the rear of the reservoir has a MAX mark inside
 - e) pour water into the other tube
 - f) fill the reservoir up to the MAX mark (about 800ml)
 - g) don't fill past MAX, or water may escape in use
- 9 Replace the reservoir:
 - h) slide the reservoir into the base unit
 - i) check that the catch on the reservoir clicks into place in the base unit
 - j) prime the iron before use – see below

SWITCH ON

- 10 Sit the iron on the heatproof stand on top of the base unit.
- 11 Put the plug into the power socket (switch the socket on, if it's switchable).
- 12 Press and release the boiler switch, then the iron switch.
- 13 The boiler and iron lights will glow.
- 14 When the boiler is ready to generate steam (2-3 minutes), the steam ready light will glow.
- 15 It'll then cycle on and off as the boiler works to maintain the temperature.
- 16 If the temperature control on the iron is set above room temperature, the thermostat light on the iron will glow, to show that the soleplate is heating up.
- 17 It'll go out when the soleplate reaches the temperature set by the temperature control, then cycle on and off, as the thermostat works to maintain the temperature.



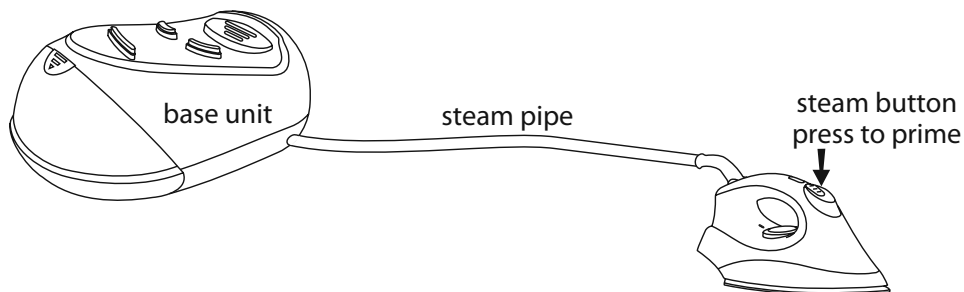

PRIMING



 
- 18 Prime the iron after filling the reservoir, to get water and steam through the system.



- 19 Hold the iron below the level of the base unit, and press the steam button, on top of the iron.
- 20 You'll hear the pump as it pushes water through the system, then, after 30 seconds or so, it'll start to quieten, and steam will come out of the soleplate.
- 21 The iron is now primed and ready for use.

👁 PREPARATION

22 Check for textile care symbols (   .





23 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures  (or max).

👁 SET THE TEMPERATURE

24 Turn the temperature control to bring the setting you require next to the mark.

temperature setting guide


label marking

-  cool – nylon, acrylics, polyester
-  warm – wool, polyester mixtures
-  hot – cotton, linen
- denim/jeans
-  do not iron


temperature setting




temperature control

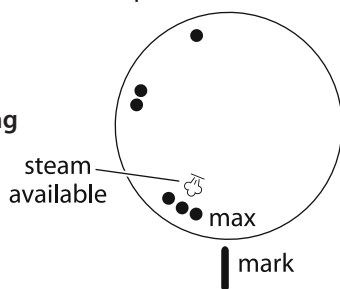

★ If the instructions on the fabric label differ from this guide, follow the instructions on the label.

- 25 If the soleplate is at a lower temperature than the one you've set, the thermostat light on top of the iron will glow, to let you know that the soleplate is heating up.
- 26 When the soleplate reaches operating temperature, the thermostat light will go out, then cycle on and off as the thermostat works to maintain the temperature
- ★ If you want to use steam, set the temperature to  or higher, or you may get water.

👁 STEAM IRONING

27 Set the temperature control to  or higher – otherwise the steam might condense on the soleplate, giving you water, instead of steam.

★ When you first want steam, you must prime the pump (page 4).

28 Press the steam button on top of the iron to produce steam, release it to stop the steam.

29 Don't let the reservoir empty in use, or you'll have to prime it again when you refill it.

★ Steam may still escape from the iron after you release the steam button. This is normal, don't worry about it.

CONSTANT STEAM

30 For a constant stream of steam, press the steam button, then slide the latch (on the rear of the button) back, towards the rear of the iron, to lock the button down.

31 Slide the latch forward, to unlock it, and revert to normal use.

DRY IRONING

32 You can dry iron by just not pressing the steam button, but if you want to make sure you don't press it accidentally, then you should iron with an empty reservoir.

33 Do your dry ironing first, then switch off, fill the reservoir, and do your steam ironing.

VERTICAL STEAMING


34 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.

35 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

36 Check that there's nothing behind the fabric that may be damaged by the steam.

37 Check that pockets, turn-ups, and cuffs are empty.

38 Check that there's water in the reservoir.

39 Check that the temperature control is at  or higher.

40 Wait till the thermostat light goes out, then start steaming.

41 Hold the iron close to (but not touching) the fabric.

★ Hold it well away for delicate fabrics.

42 Press the steam button to produce steam, release it to stop the steam.

NO WATER

43 When the water level gets low, the low water light will flash.

44 Fill the reservoir (see "filling", on page 4), then prime the iron again.

AFTER USE

45 Sit the iron on top of the base unit and turn the temperature control to ●.

46 Press and release the iron switch and the boiler switch to turn them off.

47 The boiler and iron lights will go out.

48 Unplug the base unit (switch the socket off first, if it's switchable).

49 Top up the reservoir a) this'll give you a head start next time you use the iron
 b) it'll help to avoid inadvertently running out of water

50 Let the iron cool down completely before cleaning it, moving it, or storing it away.

HOLIDAYS

51 If you leave the iron for more than a week, empty the reservoir, to avoid mould.

CARE AND MAINTENANCE

52 Unplug the base unit, and let it and the iron cool down fully.

53 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

54 Remove spots from the soleplate with a little vinegar.

55 Take care not to scratch the soleplate.

56 Don't put the iron in water or any other liquid.

57 Don't use harsh or abrasive cleaning agents or solvents.

THE ANTI-SCALE CARTRIDGE

58 To reduce scale build-up, you must change the anti-scale cartridge regularly. How often depends on the hardness of your water, and how much you use the iron.

59 An average user, steam ironing for 2 hours a week, should change the cartridge every 4 to 6 weeks in a soft water area, or 2 to 3 weeks in a hard water area.

👁️ WHAT TO WATCH FOR

60 Keep an eye on the steam output. If this reduces substantially, then it may be time to replace the anti-scale cartridge.

61 Look out for flecks of scale on your clothes. If scale is getting through the iron, it's time to replace the anti-scale cartridge.

👁️ CHANGING THE ANTI-SCALE CARTRIDGE

62 This is best done when refilling the reservoir, as you'll have to top up the reservoir after fitting the new cartridge anyway.

63 After removing the reservoir from the base unit, simply lift out the old anti-scale cartridge, drop in the new one, then top up the reservoir.

👁️ REPLACEMENT ANTI-SCALE CARTRIDGES

64 Have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

65 Ring 0845 658 9700, or email service@russellhobbs.com, for prices, then purchase replacements using VISA or MASTERCARD.

👁️ DESCALING THE BOILER

66 Descale the boiler every time you replace the anti-scale cartridge.

67 Leave it for a minimum of 4 hours to cool down completely (overnight is best).

68 Mix 1 tablespoon of white vinegar and 2 tablespoons of warm water in a jug.

69 It's best to do this on top of a towel on the work surface in the kitchen, as you're likely to spill a bit, and you'll need access to water and a sink (or a basin).

70 Remove the reservoir (you're going to turn the base unit upside down).

71 Set the iron down on the work surface – take care not to scratch the soleplate.

72 Turn the base unit upside down.

73 Unscrew the cap.

74 Turn the base unit over, and empty the boiler into the sink.

75 Pour the vinegar/water mix into the hole.

76 Replace the cap and shake the base unit from side to side.

77 Leave it for half an hour, then unscrew the cap again.

78 Turn the base unit over, and empty the boiler into the sink.

79 Now rinse, to remove scale and vinegar:


- unscrew the cap
- turn the base unit over, and empty the boiler into the sink
- pour fresh water into the hole
- replace the cap

80 Repeat point 79 till the water that comes out is clear, free of scale particles, and doesn't smell of vinegar.

81 Finally, empty the boiler, replace the cap, turn the base unit upright, store it away.

82 Don't let liquid get into the grille round the hole – if you do, turn the base unit upright, and leave it somewhere warm for 12 hours, to dry out.

★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

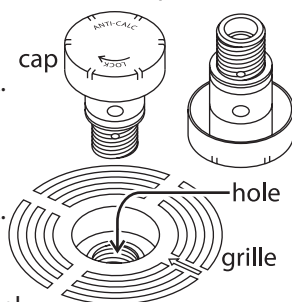



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)



GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –



£10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.