

CHILE

GARANTIA

REMINGTON®
Póliza de Garantía

FECHAS DE VIGENCIA: El artículo que usted acaba de adquirir, ha sido diseñado y construido con la más avanzada tecnología Remington y sometido a un estricto control de calidad. Recomendamos leer cuidadosamente el manual de uso, en el cual se indica el plazo de vigencia de esta garantía antes de usar su nuevo producto.

Para hacer más fácil su GARANTÍA:

- Deberá presentar esta tarjeta. En caso que ella no esté fechada y firmada al momento de la compra.
- Antes que nada lea que el artículo al cual conecta el producto está en buenas condiciones.
- Si se indica en el artículo que hay un error, que podría causar daños y/o lesiones.
- Si el producto después de seguir todas las instrucciones de manual, no funciona correctamente comuníquese a nuestro número de atención al cliente.

Fecha de Garantía

Producto: _____ N° de Serie: _____

Modelo: _____

Lugar de Compra: _____

Fecha de Compra: _____ Boleta: _____

Datos Consumidor

Nombre: _____

Dirección: _____

Comuna: _____ Ciudad: _____

Teléfono: _____

Atención al Cliente:

(56-2) 5713701

Remington es una marca registrada de Remington Corporation, Inc. en los Estados Unidos y en otros países. Remington Corporation, Inc. es una empresa registrada en los Estados Unidos. Remington Corporation, Inc. es una empresa registrada en los Estados Unidos. Remington Corporation, Inc. es una empresa registrada en los Estados Unidos.

www.remington.cl

GARANTIA PARA PRODUCTOS REMINGTON EN CENTRO AMERICA

RAYOVAC CENTRO AMERICA Garantiza este producto por un periodo de 3 años en todas sus partes, contra cualquier defecto de fabricación a partir de la fecha de compra.

CONDICIONES:

1. Para hacer efectiva esta garantía deberá presentar la nota de compra o factura correspondiente, junto con el producto en nuestras oficinas:

a. Guatemala

17 avenida 24-75 zona 11
C. Comercial Novicentro 2do Nivel. Local #37
Guatemala City, Guatemala
Tel. 1-800-Rayovac / Tel. (502) 2222-7200

b. El Salvador

Bldv. Merlot, Jardines de la Libertad Ciudad Merlot,
Santa Tecla
Apartado Postal 2079
El Salvador, C.A.
Tel. (503) 2278-9466

c. Honduras

Distribuidora Rayovac Honduras, S.A.
Boulevard Suyapa 100 metros al Norte de Emisoras
Unidas frente a Sears
Apartado Postal 499
Tegucigalpa, M.D.C. Honduras C.A.
Tel. (504) 231-3542

d. Costa Rica

Rayovac Costa Rica ,S.A.
San Francisco de Dos Rios de la Bomba La Pacifica,
400 Este carretera a Curridabat,
San Jose Costa Rica
Apartado Postal 52-2010 Zapote
Tel. 506 2272 2242

e. Nicaragua

Importadora y Distribuidora Ocal, S.A.
Km 17 Carretera a Masaya
Tip Top Industrial, 300 metros al este
Nindirí, Masaya, Nicaragua
Tel. (505) 276-9400

2. RAYOVAC CENTRO AMERICA. se compromete sustituir el producto por uno igual o similar, y a rembolsar al consumidor los gastos razonables de envío o transportación del producto.

3. RAYOVAC CENTRO AMERICA se compromete a cambiar el producto, si la falla es atribuible a defecto de fabricación. Durante los 30 días inmediatos posteriores a la compra del producto esta garantía se hace válida en la misma tienda en la que se adquirió el producto, presentando la presente garantía y la nota de compra o factura correspondiente. Después de ese tiempo deberá contactar a las oficinas de Rayovac a las direcciones antes mencionadas, presentando la presente garantía, la nota de compra o factura y el producto.

Esta garantía será nula en los siguientes casos:

1. Cuando el producto se hubiese utilizado en condiciones distintas a las normales.
2. Cuando el producto no hubiese sido operado de acuerdo con el instructivo de uso que se acompaña.
3. Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por RAYOVAC CENTRO AMERICA

NOTA: En caso de extravío de la presente póliza de garantía, el consumidor puede recurrir a la tienda o proveedor para que se le expida otra póliza de garantía previa presentación a la nota de compra o factura.

Apartado: _____
Modelo: _____
Nombre y/o razón social del distribuidor. _____

Dirección y teléfono: _____
Fecha de Entrega: _____
Sello y Firma: _____

La Garantía no cubre los siguientes daños

- Cuando el producto no se hubiese sido operado normalmente, abuso o alteración de producto.
- Cuando el producto es serviciado por personas no autorizadas.
- Cuando el producto es utilizado con accesorios no autorizados.
- Conectando el artefacto al un voltaje incorrecto.
- Enrollando el cable alrededor del artefacto causando que el cable se gaste y re rompa prematuramente.
- Cualquier otra condición fuera de nuestro control.

REPÚBLICA DOMINICANA
Rayovac Republica Dominicana S.A.
Prolongación Ave. Rómulo Betancourt Zona Industrial de Herrera
Santo Domingo, Republica Dominicana
Tel. (1-809) 530-5409

ECUADOR
Línea de servicio al cliente
593 2 326 1638
Quito-Ecuador

PANAMA
DISTRIBUIDORA J MALLOL E HIJOS
Parque Industrial Costa del Este
Teléfono: (507) 2715000
Ciudad de Panama-Panamá

VIDA PANAMA
Calle 16 Av Enrique A Jimenez. Apartado Postal 0203-00535
Teléfono: (507) 4339000
Zona libre Colon-Panamá

PERU
Spectrum Brands del Peru S.A.C
Manuel Olguin No. 335 Oficina 504,
Edificio Link Tower.
Santiago de Surco, Lima Perú
Telef. 511-716-8600 RUC: 20550512590

Importado por:
RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Piso #3
(C1425FUG) C.A.B.A. Argentina.
CUIT No: 30-70706168-1
Importador # 76983
Hecho en CHINA.

Hecho en CHINA.

LA CORPORACION RAYOVAC NO SE RESPONSABILIZA POR NINGUN INCIDENTE, ESPECIALMENTE DEBIDO AL USO DE ESTE PRODUCTO. TODAS LAS GARANTIAS SON LIMITADAS A 3 AÑOS EMPEZANDO EN LA FECHA DE COMPRA.

Comentarios o sugerencias:
Visite www.ProductosRemington.com

© Marca registrada por Spectrum Brands, Inc. (SBI).

Distribuido por: Spectrum Brands, Inc.
Middleton, WI 53562

© 2014 SBI
01/14 Job#2013-5-1_10_RevA **T22-0001522**

Diseñado en USA

HECHO EN CHINA

-Características eléctricas:

S-9600 110V: 120V~ 60Hz
145W (a 1 min.) 40W (en constante)
S-9600 220V: 120-240V~ 50/60 or 50-60Hz

S-9620 110V: 120V~ 60Hz 57W

REMINGTON®

Use and Care Guide

S-9600 series



- (A)** Ceramic silk plates for a smooth, snag-free glide
(B) Innovative LCD temperature display
(C) Graphic heat setting indicator
(D) Temperature adjustment
(E) Turbo boost function
(F) Switch lock function
(G) On/Off button
(H) Hinge lock
(I) Swivel cord

IMPORTANT SAFETY INSTRUCTIONS

Use and Care Guide

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER. DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.

- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- This appliance is for household use only.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.

- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.

- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- This appliance is for household use only.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.

- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.

- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- This appliance is for household use only.

- Do not plug or unplug this appliance when your hands are wet.

- Attachments may be hot during use. Allow them to cool before handling.

- For additional protection the installation of a residual current device (RDC) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice (Argentina/Chile).

- This appliance is for household use only.

- This appliance is for household use only.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.

- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.

- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- This appliance is for household use only.

How to Use

Silk

The most advanced ceramic coating, with real SILK proteins provides more ceramic content than traditional straighteners, giving you an effortless glide and smooth, healthy hair with less frizz. Silk ceramic, combined with 240° C high heat and professional performance, creates a silky smooth salon finish.

Ceramic
Ceramic protects against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

Styler Settings
Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct settings for your hair type.

On/Off Button Features

- Turn on. During heat up, the LCD blue temperature display will pulse from 0 to 3 bars until the desired temperature is reached (Dia D).

- **Normal Mode +/- Button Features**
- Press “+” button to increase temperature
- Press “-” button to decrease temperature

- **Turbo Boost:** (hold time about 2 seconds)

Plate Temperature	Number of bars	Symbol	Hair Type
150°-170°C	1 bar		Very fine, fragile, damaged hair
180°-200°C	2 bars		Normal, easy to curl hair
210°-235°C (110V) 210°-240°C (220V)	3 bars		Thick, difficult to curl hair

Usage Tips

Straightening Your Hair

1. Hair should be dry and free of tangles before using the styling iron.
2. Plug the styler into an electrical outlet. Press and hold the ON/OFF button until the unit turns on and the LCD lights up.
3. Adjust the temperature using the temperature buttons. The display will flash while the unit heats up, then glow steadily when it has reached the selected temperature. The unit will beep when ready.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher setting while straightening your hair, simply adjust the temperature to a higher heat setting.
- While straightening your hair, if you find that you need a lower setting, adjust the temperature to a lower heat setting. Because the unit is already hot, it may take a few minutes to cool off.

6. Take a small section of hair and pull hair down and away from your scalp, and hold it taut.
7. Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.

Maintenance

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

NOTE: Make sure the switch lock function is unlocked or the unit will not turn off.

Dual Voltage Use
This appliance contains a special electronic circuit that automatically converts it for worldwide usage-from 120 to 240 volts AC, 50 to 60 Hz. Plug it into the local outlet and use it as normal; the styler will automatically adjust to the local current. (You may need an adapter to allow the plug to fit into the local outlets.)

NOTE: Make sure the switch lock function is unlocked or the unit will not turn off.

Dual Voltage Use
This appliance contains a special electronic circuit that automatically converts it for worldwide usage-from 120 to 240 volts AC, 50 to 60 Hz. Plug it into the local outlet and use it as normal; the styler will automatically adjust to the local current. (You may need an adapter to allow the plug to fit into the local outlets.)

Limited Three-Year Warranty
Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a three-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse, servicing by unauthorized persons, use with unauthorized accessories, connecting it to incorrect current and voltage, wrapping cord around appliance causing premature wear and breakage or any other conditions beyond our control.

Questions or comments:
Visit www.productosremington.com

© Registered Trademark of Spectrum Brands, Inc. (SBI).

© 2014 SBI
01/14 Job# CS2013-5-1_10_RevA **T22-0001522**

Spectrum Brands, Inc.
Middleton, WI 53562

MADE IN CHINA
Electrical Characteristics:
S-9600 110V: 120V~ 60Hz
145W (at 1 min) 40W (at steady)
S-9600 220V: 120-240V~ 50/60 or 50-60Hz
S-9620 110V: 120V~ 60Hz 57W

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.