

REMINGTON®

EST. NEW YORK 1937





Blow Dry & Style Caring 1200W Airstyler AS7700

 remington-europe.com

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

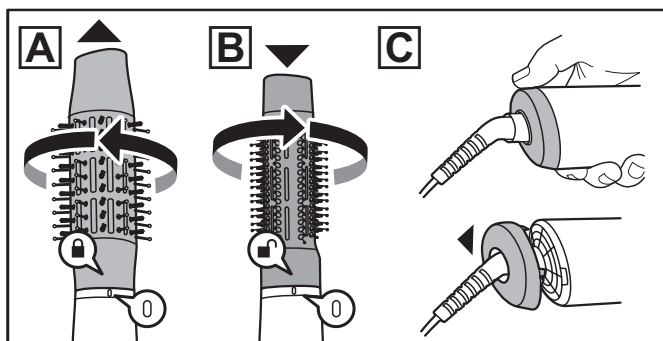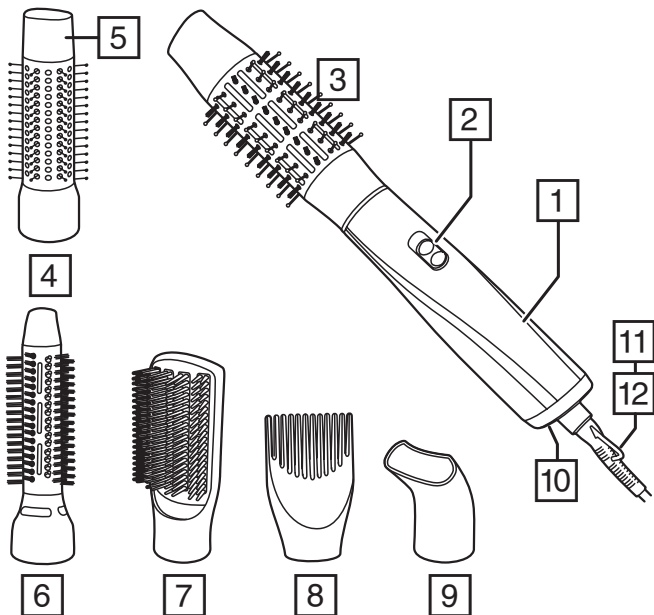

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Do not allow any part of the appliance touch the face, neck or scalp.
 - Keep the power plug and cord away from heated surfaces.
 - Do not use attachments other than those we supply.
 - Do not use the appliance if it is damaged or malfunctions.

- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|---|----------------------------|
| 1. 1200W power handle | 7. Paddle brush |
| 2. Speed/heat selector switch (☼, ☹, ☺) | 8. Root boost attachment |
| 3. 50 mm mixed bristle brush | 9. Pre-styling nozzle |
| 4. 38 mm retractable brush | 10. Removable inlet grille |
| 5. Bristle retraction control | 11. Hang up loop |
| 6. 25 mm mixed bristle brush | 12. Swivel cord |
-

INSTRUCTIONS FOR USE

Prepare the hair for styling

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Using the pre-styling nozzle rough dry the length and roots until 80% dry.
- Divide the hair into sections, style the lower layers first.

To fit/remove attachments

Fit the attachment before you turn on the appliance.

CAUTION: Attachments can become hot during use, let them cool before removing.

1. To remove, twist the attachment until the markings line up as shown in figure A and pull it off the power handle.
2. To fit an attachment, align the symbols on the power handle and attachment as shown in figure B then twist the attachment until it locks into place.

Speed and temperature settings

1. Plug your styler in to the mains power supply.
2. Turn your air styler on and select the appropriate setting for your hair by sliding the speed/heat selector switch.
3. Your air styler has three settings:
 - High heat/speed (☺): Thick and difficult to style hair.
 - Low heat/speed (☹): Thin/fine, damaged or bleached hair.
 - Cool (☼): Helps to set your style with cool air.

Create volume using the 50mm brush

- To dry your roots and add volume, place the brush underneath the section close to the roots and hold for a few seconds, lifting the hair as you dry.

- Move the styler downward through the hair section.
- Repeat this around the head.
- Let the hair cool before further styling.

Create curls and shaped ends using the 38mm and 25mm brushes

- To curl the ends in, place the brush underneath the section close to the ends and rotate the styler inwards allowing the hair to wrap around the barrel and hold for a few seconds.
- To curl the ends out, place the brush on top of the section close to the ends and rotate the styler outwards allowing the hair to wrap around the barrel and hold for a few seconds.
- **38 mm retractable brush** - the bristles of this brush can be retracted by twisting the cool tip. This makes it easier to withdraw the brush from the hair.
- Repeat this around the head.
- Let the hair cool before further styling.

Create smooth, sleek hair using the paddle brush

- Starting at the roots, slowly brush through each section just as you would with a normal brush.
- To add additional volume tip your head upside down and brush the underneath of your hair.
- When dry use your fingers to shape the hair and ends.

Root volume using the root boost attachment

- Push the root boost slowly into your roots towards the centre of your head.
- Allow the hair to push against the root boost and hold the root boost there for up to 10 seconds.
- Repeat until you have voluminous hair.

CLEANING AND MAINTENANCE

- After use, turn the appliance off by moving the temperature control switch to the O position.
- Unplug the appliance and allow to cool before cleaning and storing away.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- To clean the area covered by the grille, push it off the body as shown (Fig. C) and slide it down the cable. Clean the inside area then slide the grille back up the cable and click it into place.
- Don't use harsh or abrasive cleaning agents or solvents.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. AS7700

Type No. AS21A

22/UK/ AS7700 T22-7002572-B Version 04 /22

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2022 Spectrum Brands, Inc.