

REMINGTON®

EST. NEW YORK 1937

 
 
 


Blow Dry & Style Caring 400W Airstyler AS7100

 remington-europe.com

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

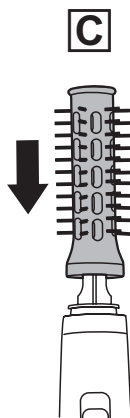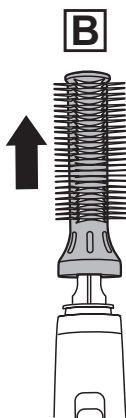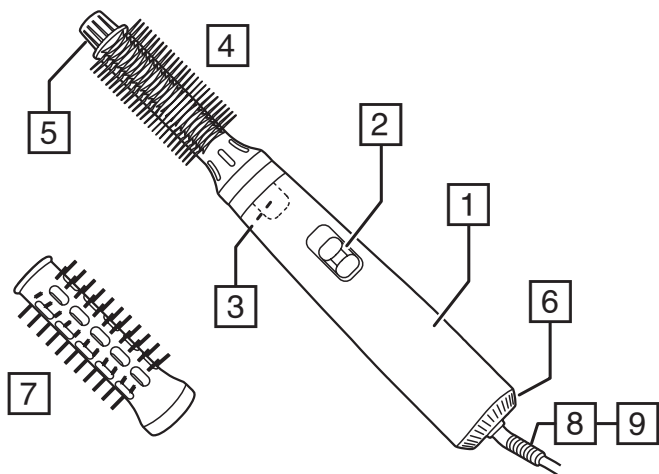

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Do not allow any part of the appliance touch the face, neck or scalp.
 - Keep the power plug and cord away from heated surfaces.
 - Do not use attachments other than those we supply.
 - Do not use the appliance if it is damaged or malfunctions.

- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|---------------------------------------|-----------------|
| 1. 400W power handle | 6. Inlet grille |
| 2. Speed/heat selector switch (I, II) | 7. 25 mm brush |
| 3. Brush rotation lock button | 8. Hang up loop |
| 4. 19 mm brush | 9. Swivel cord |
| 5. Attachment retaining cap | |
-

INSTRUCTIONS FOR USE

Prepare the hair for styling

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- For best results, dry your hair as normal until it is about 70-80% dry.
- Divide the hair into sections, style the lower layers first.

To fit/remove attachments

Fit the attachment before you turn on the appliance.

CAUTION: Attachments can become hot during use, let them cool before removing.

1. Unscrew the attachment retaining cap (fig. A).
2. Slide the attachment off (fig. B).
3. Slide the new attachment on (fig. C).
4. Refit the cap (fig. D).

Speed and temperature settings

1. Plug your styler in to the mains power supply.
2. Turn your air styler on and select the appropriate setting for your hair by sliding the speed/heat selector switch.
3. Your air styler has two settings:
 - High heat/speed (II): Thick and difficult to style hair.
 - Low heat/speed (I): Thin/fine, damaged or bleached hair.

Create volume with the 25mm brush

- To dry your roots and add volume, place the brush underneath the section close to the roots and hold for a few seconds, lifting the hair as you dry.
- Move the styler downward through the hair section.
- Repeat this around the head.
- Let the hair cool before further styling.

Create shaped ends with the 19mm brush

- To curl the ends in, place the brush underneath the section close to the ends and rotate the styler inwards allowing the hair to wrap around the barrel and hold for a few seconds.
- To curl the ends out, place the brush on top of the section close to the ends and rotate the styler outwards allowing the hair to wrap around the barrel and hold for a few seconds.
- Repeat this around the head.
- Let the hair cool before further styling.

Brush rotation lock

To help you release hair wrapped around the brush during styling, you can release the brush lock. This allows the brush to freely rotate.

- To release, slide the brush rotation lock button back in the direction of the handle.
- Release the button to lock the brush again.

CLEANING AND MAINTENANCE

- After use, turn the appliance off by moving the temperature control switch to the O position.
- Unplug the appliance and allow to cool before cleaning and storing away.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Don't use harsh or abrasive cleaning agents or solvents.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. AS7100

Type No. AS18A

22/UK/ AS7100 T22-7001225-B Version 04 /22

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2022 Spectrum Brands, Inc.