

REMINGTON®

AC 2200W Dryer



AC3300


Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product.
Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 5 For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- 6 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 7 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 8 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 Do not allow any part of the appliance touch the face, neck or scalp.
- 11 Keep direct airflow away from eyes or other sensitive areas. Keep direct airflow away from eyes or other sensitive areas.
- 12 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- 13 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 14 Do not leave the appliance unattended while plugged in.
- 15 Do not set the appliance down while still on.

- 16 Do not place the appliance on any soft furnishings.
- 17 Do not use attachments other than those we supply.
- 18 Do not use diffuser on the highest heat setting.
- 19 This appliance is not intended for commercial or salon use.
- 20 Let the attachments cool down before removing.
- 21 Let the appliance cool down before cleaning and storing away.








KEY FEATURES

- | | | | |
|---|------------------|---|----------------------------------|
| 1 | 3 heat settings | 5 | Removable easy clean grille |
| 2 | 2 speed settings | 6 | Hang up loop |
| 3 | True cold shot | 7 | Salon length 3m cord (not shown) |
| 4 | Concentrator | 8 | Diffuser |

PRODUCT FEATURES

- 1850-2200 watt long life AC motor.
- Ceramic grille.
- Ionic conditioning for frizz free styling.
- 7mm slim air concentrator for precision styling.
- True cold shot – to set your style and add extra shine.

INSTRUCTIONS FOR USE

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
- ★ Hairsprays contain flammable material – do not use while using this product.
- 3 Plug the product into the mains power supply.
- 4 Select the desired temperature and speed setting using the switches on the handle.
- 5 To switch product on press speed setting once clicking it right to medium speed setting . To increase speed press switch to the right again to high speed setting .
- 6 To select heat setting press the temperature setting switch to the low , medium  or high setting .
- 7 To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- 8 To set your style, press the cool shot button whilst styling then release it to reactivate the heat.
- 9 To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- 10 To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a low heat / low speed setting.
- ★ Caution: Do not use the diffuser on the highest heat setting.
- 11 Let the attachments cool before removing.
- 12 After use, turn the appliance off and unplug.
- 13 Let the appliance cool before cleaning and storing away.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.
- ★ **To remove the rear grille for cleaning** - hold the dryer handle in one hand, then with the other place your thumb and index finger on either side of the rear grille. Twist anti-clockwise and pull grille away from the dryer.
- ★ **To replace the rear grille** - insert rear grille piece into the back of dryer and turn clockwise to click into place.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0345 6460 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. AC3300

14/UK/ AC3300 T22-0002877 Version 09 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI