

REMINGTON

Big Style



AS7055

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.


Thank you for buying your new Remington® product.
Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 **Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.**
- 2 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 3 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 4 **Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- 5 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 Keep direct airflow away from eyes or other sensitive areas.
- 11 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop.
If this should occur, switch off and allow the unit to cool.
- 12 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 13 Do not leave the appliance unattended while plugged in.
- 14 Do not set the appliance down while still on.
- 15 Do not place the appliance on any soft furnishings.
- 16 Do not use attachments other than those we supply.
- 17 Do not use diffuser on the highest heat setting.
- 18 This appliance is not intended for commercial or salon use.



- 19 Let the attachments cool down before removing.
20 Let the appliance cool down before cleaning and storing away.

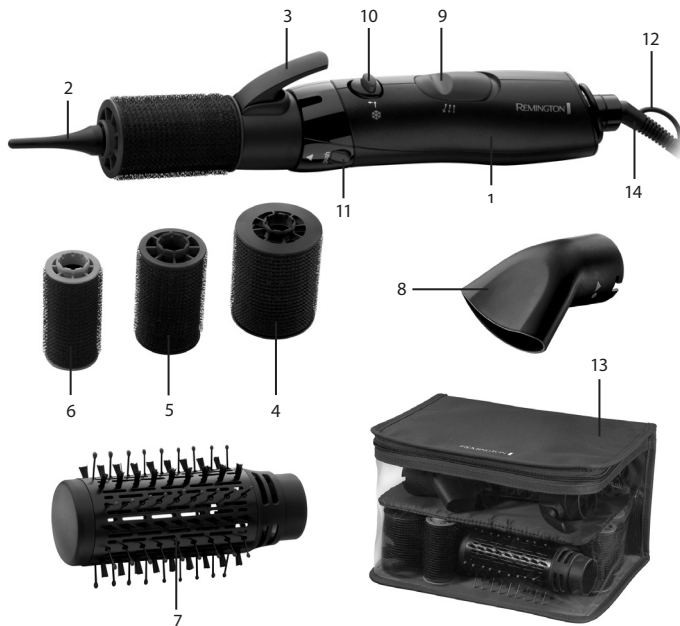

KEY FEATURES

- | | |
|------------------------------------|-------------------------------------|
| 1 800 Watt power handle | 8 Concentrator |
| 2 Roller adaptor attachment | 9 Speed/ heat setting switch |
| 3 Roller release clip | 10 Cool shot button |
| 4 50mm self-grip rollers | 11 Attachment lock / release button |
| 5 38mm self-grip rollers | 12 Hang up loop |
| 6 30mm self-grip rollers | 13 Storage bag |
| 7 50mm thermal mixed bristle brush | 14 Swivel cord |

PRODUCT FEATURES

- 800 watts.
- 15 self-grip rollers in 3 sizes– 5x 30mm, 5 x 38mm, 5 x 50mm.
- 2 speed/heat settings for versatile styling.
- 3 year guarantee.

INSTRUCTIONS FOR USE

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
- ★ Hairsprays contain flammable material – do not use while using this product.
- 3 Select your attachment before turning the appliance on.
- 4 Attachments can be connected to the power handle by simply aligning the arrow above the attachment lock/release button with the power handle and clicking to the left to lock.
- 5 Plug the product into the mains power supply.
- 6 Section the hair prior to styling. Style the lower layers first.
- 7 Dry roots and length partially prior to styling.
- 8 To dry hair, use the concentrator attachment.
- 9 The 50mm thermal volume brush adds root volume and fullness. It can also be used to style the ends of long hair and smooth out natural curls.
- 10 Select the desired temperature and speed setting using the switch on the handle.

★ **Roller Attachment**

- 11 Select the preferred size of roller and slide the roller down the adaptor. Press the roller release clip and push the roller towards the handle. Release the clip locking the edge of the roller firmly in place.
- 12 Take 1 inch of hair and hold it taught above or to the side of your head.
- 13 Keeping the hair taught wrap the ends around the self-grip area of the roller.
- 14 Without turning on the heat, rotate the handle wrapping the hair around the roller. Ensuring all ends are tucked in.
- 15 When the roller is half way along the hair strand turn on the hot air to full heat for approximately 8-10 seconds or when you feel the section has had the appropriate time to dry or style.
- 16 Turn the heat off and continue to wind the roller firmly to the scalp, ensuring to keep the section taught as you wind.
- 17 Turn the heat on again for a further 8 seconds.
- ★ Note: Use lower heat setting close to the head to prevent burning.

- 18 Press the roller release clip and slide the adaptor out from the centre of the roller; leaving the roller firmly in place in the hair.
- 19 Repeat with the next section of hair.
- 20 Leave all the rollers in the hair until the rollers and hair have fully cooled down and set the style.
- ★ Note: Using fixing spray to help set and keep your style for longer
- 21 Slowly and carefully unwind each roller, to allow the hair to keep its shape.

★ **Cool Shot**

- 22 To set your style and add shine use the cool shot function. To operate press the button down and slide forward. Slide back to turn off.
- 23 Tip: to cool your hair more quickly use the cool shot function each time you've wound a roller in the hair.
- 24 Let the attachments cool before removing.
- 25 To remove the attachment press the attachment lock/release button, twist attachment slightly to the right and pull attachment away from the main housing.
- 26 After use, turn the appliance off and unplug.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.
Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at
www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

☎ Tel 0800 212 438 (free call mainland UK)

☎ +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

☎ Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

📄 REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. AS7055

13/UK/ AS7055 T22-0001399 Version 06 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI