



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at

www.remington.co.uk/parts-accessories

SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk



REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. AS8090

13/UK/ AS8090 T22-0000963 Version 01 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI



AS8090

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.




Thank you for buying your new Remington® product.
Please read these instructions carefully and keep them safe. Remove all packaging before use.
Claim your extra 1 year warranty by registering your product online.
Simply go to: www.productregister.co.uk/remington

STOP IMPORTANT SAFEGUARDS

- 1 **Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.**
- 2 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 3 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 4 **Warning:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 5 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance to touch the face, neck or scalp.
- 10 Keep direct airflow away from eyes or other sensitive areas.
- 11 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- 12 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 13 Do not leave the appliance unattended while plugged in.
- 14 Do not set the appliance down while still on.
- 15 Do not place the appliance down on any soft furnishings.
- 16 Do not use attachments other than those we supply.
- 17 Do not use the diffuser on the highest heat setting.
- 18 This appliance is not intended for commercial or salon use.
- 19 Let the appliance cool down before cleaning and storing away.

Keratin Therapy Volume & Protect

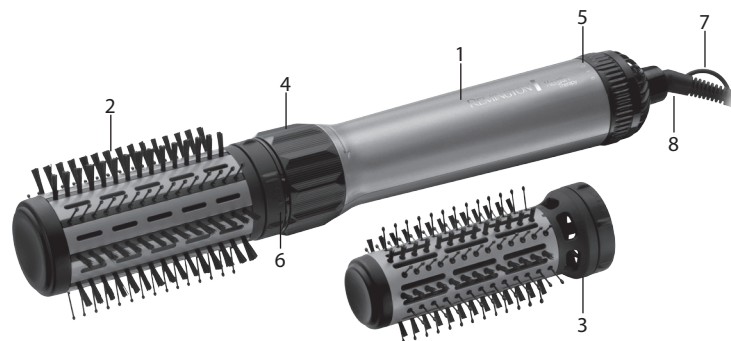

KEY FEATURES

- 1 700 watt power handle
- 2 50mm thermal mixed bristle brush
- 3 40 mm thermal mixed bristle brush
- 4 2-way rotation switch
- 5 Speed / heat setting switch
- 6 Attachment locking function
- 7 Hang up loop
- 8 Swivel Cord

PRODUCT FEATURES

- 700 watts.
- Advanced ceramic coated barrels infused with Keratin micro conditioners.
- 2 speed/heat settings for versatile styling.
- 3 year guarantee.

INSTRUCTIONS FOR USE

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
- ✳ Hairsprays contain flammable material – do not use while using this product.
- 3 Select your attachment before turning on the appliance.
- 4 Attachments can be connected to the power handle by simply aligning the arrow on the attachment locking function with the power handle and clicking to the left to lock.
- 5 Plug the product into the mains power supply.
- 6 Dry roots and length partially prior to styling.
- 7 Section the hair prior to styling. Style the lower layers first.
- 8 The 50mm bristle brush adds volume and fullness and is ideal for mid to longer hair.
- 9 Use 40mm bristle brush to add root volume and create loose curls. Ideal for shorter finer hair.
- 10 To turn the product on turn the speed/heat setting switch to the right and select either setting 1 or 2.
- 11 To use the rotating function, turn the switch to the right for the brush to rotate clockwise. Turn the switch to the left for the brush to rotate anti-clockwise.
- 12 Wrap the bottom of the hair partly round the airstyler and press the rotating function. This function will help wrap and release hair to gain volume and curls.
- 13 Select the desired temperature and speed setting using the switches on the handle.
- 14 Let the attachments cool before removing.
- 15 To remove attachments, click the attachment locking function to the right and pull attachment away from main housing.
- 16 After use, turn the appliance off and unplug.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.