

# REMINGTON®

## Delicates & Body Hair Trimmer



**BHT250**

**Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery**




Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors when plugged in.
- 3 Suitable for use in shower. 
- 4 Do not submerge the appliance.
- 5 Do not use attachments other than those we supply.
- 6 Do not use the appliance if it is damaged or malfunctions.
- 7 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8 Do not plug or unplug the appliance with wet hands.
- 9 Store the product at a temperature between 15°C and 35°C.
- 10 This appliance is not intended for commercial or salon use.
- 11 This appliance should be charged by approved safety isolating adaptors VA050035J (EU), BA050035J (UK) with the output capacity of 5Vac; 350mA.



## KEY FEATURES

- |                           |                       |
|---------------------------|-----------------------|
| 1 On/off switch           | 5 Hang loop           |
| 2 Main blade              | 6 Washout port        |
| 3 Detail blade            | 7 Charging indicator  |
| 4 Fixed combs (2, 4, 6mm) | 8 Adaptor (not shown) |

---


## GETTING STARTED

---

- Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- Connect the product to the adaptor and then to the mains.

### Charge Level Indicators

Charge Level	Indicator
Charging	LED will show
Fully Charged	LED will show

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.
-  Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.


---

## INSTRUCTIONS FOR USE

---

- Switch the product on by pressing the on/off switch.
- Select the desired trim length prior to trimming by attaching one of the fixed combs.
- If trimming for the first time, always start with the longest length comb (6mm).
- Always ensure the trimmer is switched off before attaching or removing a comb.

### CHANGING ATTACHMENTS

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer blade. Slide the comb down the grooves until it clicks into place.
- To remove the comb, unclick the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.
-  Note: Using the detail blade side of trimmer with no combs attached will trim down to 0.2mm. Using the main trimmer blade with no combs attached will trim hair to 1mm. Holding the main blade perpendicular to the skin will trim hair to 0.4mm.

### ★ DELICATES TRIMMING

- Choose and attach the desired fixed comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair in around your delicates, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.


★ Note: Take your time when trimming the delicates area, using slow and even strokes.

### ★ BODY TRIMMING

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, in the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.

### ★ EDGING AND SHAPING OR CLOSE TRIM

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.

★ Note: This trimmer has been designed so that it can be used in the shower for greater ease and convenience. 

Please do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower. Do not submerge the trimmer in water.

### ➡ Tips for best results

- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting.

---

## CLEANING AND MAINTENANCE

---

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- Allow water to run into and through the wash out port to help wash any hair trimmings from the inside out.

✱ Note: Suitable for cleaning under water.

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Firstly, pry the TST (detail blade) head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at  
[www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➡ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.

## **Model No. BHT250**

14/UK/ BHT250 T22-0002486 Version 09 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2014 SBI