# REMINGTON®

**Anywhere Curls** 





Redicted Collins for dearth of the state of

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**★** WARNING: This appliance is hot. Keep out of reach of children at all times.

# ♠ IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 5 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 Do not leave the appliance unattended while plugged in.
- 11 Only set the appliance down on a heat-proof surface.
- 12 Do not place the appliance on any soft furnishings.
- 13 Do not use attachments other than those we supply.
- 14 This appliance is not intended for commercial or salon use.
- 15 Let the appliance cool down before cleaning and storing away.



# KEY FEATURES

- 1 25mm clip less retractable barrel
- 2 On indicator light
- 3 Cool tip
- 4 Travel storage pouch (not shown)
- 5 Protection glove first line protection only (not shown)
- 6 Swivel cord

# PRODUCT FEATURES

- Special design allows the barrel to be retracted into the handle for neat and compact storage.
- Ceramic coating for even heat.
- High heat 210°C.
- Fast heat up ready in 30 seconds.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

# INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
- Hairsprays contain flammable material do not use while using this product.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Plug the product into the mains power supply.
- 5 Holding the cool tip pull out the barrel from the handle fully extending it until you hear it click to turn on.
- 6 Use heat resistant glove to avoid any accidental burns.
- 7 Hold the handle and wrap a section of hair around the heated barrel.
- 8 Wait about 10 seconds for curl to form.
- 9 Unwind the hair and release the curl.
- 10 Let the hair to cool before styling
- 11 Repeat this around the head to create as many curls as desired.
- 12 After use, switch the styler off by retracting the barrel fully into the handle. To do this press down on the cool tip until the barrel is locked firmly into place and the LED ceases to be lit.
- 13 Let the appliance cool before cleaning and storing away.

### CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

## **ENVIRONMENTAL PROTECTION**

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



#### ⇒ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

#### **⇒** SERVICE CENTRE

#### **United Kingdom**

Tel 0345 6460 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 OHS, UK

www.remington.co.uk

#### Ireland

**Tel** 142 951 40

— Emington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

# **𝔔** REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

# Model No. Cl2725

14/UK/ CI2725 T22-0002520 Version 07 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth.

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI