

REMINGTON®

Dual Curl



CI63E1

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




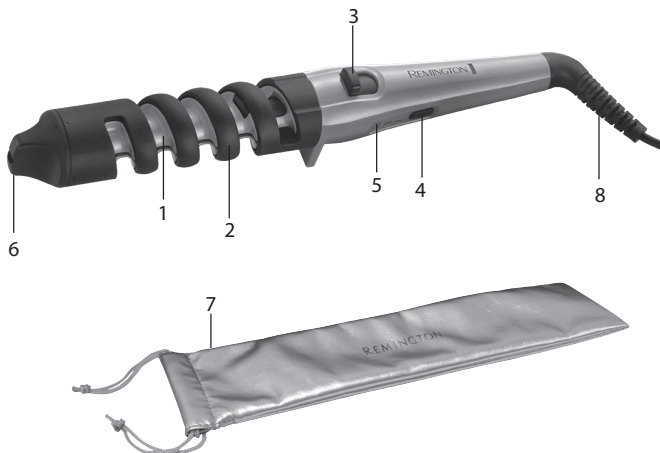
Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product.
Please read these instructions carefully and keep them safe. Remove all packaging before use.

★ **WARNING:** This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. 
- 5 For UK, Household Use Only. Currently the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 Do not leave the appliance unattended while plugged in.
- 11 Only set the appliance down on a heat-proof surface.
- 12 Do not place the appliance on any soft furnishings.
- 13 Do not use attachments other than those we supply.
- 14 This appliance is not intended for commercial or salon use.
- 15 Let the appliance cool down before cleaning and storing away.




KEY FEATURES

- | | |
|---------------------------------------|------------------------------------|
| 1 19mm and 31mm ceramic coated barrel | 5 Temperature indicator LEDs |
| 2 Spiral curling guides | 6 Cool tip and barrel size changer |
| 3 Spring clip | 7 Heat resistant pouch |
| 4 On-off switch & temperature control | 8 Swivel cord |

PRODUCT FEATURES


- Unique barrel size selector allows you to select from a 19mm and 31mm barrel for different size curls.
- 4 x Protection coated barrel for smooth shine and less static – anti static, ceramic, tourmaline ionic, smooth glide coating.
- 3 variable heat settings - 200°C, 180°C and 160°C.
- Fast heat up - ready in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
-  Hairsprays contain flammable material – do not use while using this product.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Select your desired barrel size prior to turning on the product.
- 5 19mm barrel size is ideal for tight defined curls. 31mm barrel size is ideal for looser curls.
- 6 To change the barrel size from 19mm to 31mm twist the cool tip clockwise, directing the arrow on the cool tip from the small circle to the large circle and allow the curling guide to extend away from the handle.
- 7 To change the barrel size from 31mm to 19mm push down on the cool tip pushing the curling guide towards the handle and twist anti-clockwise.
- 8 Plug the product into the mains power supply. Press and hold the on button for 3 seconds to switch on.
- 9 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the on/off button.
- 10 On/Off button controls:-
Press and hold for once to turn on and select low temperature setting.
Press twice for medium temperature setting.
Press three times for high temperature setting.

Recommended temperatures:-

Temperature	Hair type
1 LED = Low – 160°C	Thin/ Fine, damaged or bleached hair
2 LEDs = Medium - 180°C	Normal, healthy hair
3 LEDs = High - 200°C	Thick, very curly and difficult to style hair

-  **Caution:** The hottest temperatures should only be used by experienced stylists.

- 12 The temperature indicator LEDs will stop flashing when the product is ready to use.
 - 13 Secure one inch of hair at base of the styler by retracting the spring clip.
 - 14 Twist the styler allowing the hair to be guided up the length of the barrel and hold for around 10 seconds.
 - 15 Release the spring clip and untwist to release the hair.
 - 16 Let the hair to cool before styling.
 - 17 Repeat this around the head to create as many curls as desired.
 - 18 After use, press and hold the off button for 3 seconds to turn off then unplug the appliance.
- ★ Let the appliance cool before cleaning and storing away.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0345 6460 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. CI63E1

14/UK/ CI63E1 T22-0002518 Version 07 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI