

REMINGTON®

Styler Kit



CI97M1



**Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery**

Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 5 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 6 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 7 Do not use the appliance if it is damaged or malfunctions.
- 8 Do not allow any part of the appliance touch the face, neck or scalp.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Only set the appliance down on a heat-proof surface.
- 11 Do not place the appliance on any soft furnishings.
- 12 Do not use attachments other than those we supply.
- 13 This appliance is not intended for commercial or salon use.
- 14 Let the appliance cool down before cleaning and storing away.





KEY FEATURES

- | | |
|-----------------------------------|---|
| 1 13-25mm conical wand attachment | 8 Cool tip |
| 2 38mm hot brush attachment | 9 Stand |
| 3 19mm tong attachment | 10 Tong clip |
| 4 Temperature control switch | 11 Heat proof storage bag |
| 5 Attachment locking ring | 12 Heat resistant glove – first
line protection only |
| 6 Attachment pins | 13 Swivel cord |
| 7 Ready indicator light | |

PRODUCT FEATURES

- Includes 3 attachments
- 13 - 25mm conical wand for cute curls.
- 19mm tong for bouncy curls.
- 38mm hot brush for volume and shape.
- 4 x Protection coating – Anti static, Ceramic Tourmaline Ionic, smooth glide
* Vs standard ceramic coating
- High heat - 160°C to 220°C.
- Hot brush attachment - 140-180°C.
- Fast heat up - ready in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
 - 2 For extra protection use a heat protection spray.
 - ✱ Hairsprays contain flammable material – do not use while using this product.
 - 3 Select your attachment before you turn on the appliance.
- ✱ **To Secure Attachments to the Handle**
- 4 Ensure the locking ring is in the unlocked position, ready to insert the attachment.
 - 5 Locate the pins on the attachment holes on the handle (fig. 1).

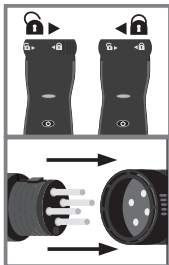


Fig. 1

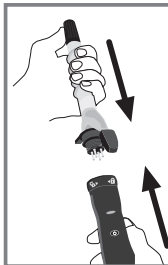


Fig. 2



Fig. 3

- 6 Firmly push together.
- 7 Turn the locking ring anti-clockwise to secure the handle and the attachment together (fig. 2).
- 8 Section the hair prior to styling. Style the lower layers first.
- 9 Plug the product into the mains power supply. Slide the temperature control switch to the right once to position 'I' to turn on.
- 10 Start styling on lower temperatures first. Select the appropriate temperature for your hair type using the controls on the top of the styler.
- 11 To increase the temperature slide the temperature control switch to position 'II' for medium heat and position 'III' for high heat.

✱ **Recommended temperatures:-**

✱ **19mm tong and conical wand**

Symbol	Temperature	Hair Type
I	Low - 160°C	Thin/Fine, damaged or bleached hair
II	Medium - 190°C	Normal, healthy hair
III	High - 220°C	Thick, very curly and difficult to style hair

- ✱ **Caution:** The hottest temperatures should only be used by experienced stylists

✱ **Hot Brush**

Symbol	Temperature	Hair Type
I	Low - 140°C	Thin/Fine, damaged or bleached hair
II	Medium - 160°C	Normal, healthy hair
III	High - 180°C	Thick, very curly and difficult to style hair

- The indicator light will stop flashing once the desired temperature is reached.

✱ **Cute Curls with the Conical Wand Attachment**

- 12 Use the conical wand attachment to create cute curls.

- 13 Use the heat resistant glove to avoid any accidental burns.
- 14 Hold the handle and wrap a section of hair around the heated barrel.
- 15 Wait about 10 seconds for curl to form.
- 16 Unwind the hair and release the curl.
- 17 Allow the hair to cool before styling.
- 18 Repeat this around the head to create as many curls as desired.

★ Volume and Shape with the Hot Brush Attachment

- 19 Use the 38mm hot brush attachment to add volume and to create polished ends, flick outs or loose curls.

★ Loose Curls

- 20 Take a section of hair and place the ends around the brush.
- 21 Rotate the styler allowing the hair to wrap around the barrel of the brush and styling as you go.
- 22 Hold the styler in the hair for about 10-20 seconds then unwind the hair by rotating the styler in the opposite direction.

★ Polished Ends and Flick Outs

- 23 Take a section of hair and wrap the end around the barrel of the brush, either wrapping under for polished ends or outwards for flick outs, shaping the hair around the barrel.

★ Root Volume

- 24 Section your top layer of hair and lift it up.
- 25 Hold the hot brush underneath the top section at the roots and bend the hair around it.

★ Beautiful Bouncy Curls with the 19mm Tong Attachment

- 26 Use the 19mm tong attachment for bouncy curls.
- 27 Place a section of hair under the tong clip (smaller sections create tighter curls - larger sections create large curls or waves).
- 28 Turn the styler to roll the hair around the barrel.
- 29 Wait about 10 seconds for curl to form.
- 30 Unwind the tong and release the curl.
- 31 Repeat this around the head to create as many curls as desired.
- 32 Allow the hair to cool before styling.
- 33 Let the attachments cool before removing.

★ To Remove Attachments

- 34 To remove the attachment, turn the locking ring clockwise to the unlocked position and pull the attachment away from the handle.

- 35 After use, turn the appliance off by sliding the temperature control switch to far left and '0' position and unplug.
- 36 Let the appliance cool before cleaning and storing away.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. CI97M1

14/UK/ CI97M1 T22-0002002 Version 01 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI