

# REMINGTON®

## Dual Turbo 2200



D3711

**Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery**



Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFETY INSTRUCTIONS**

---

- 1 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 2 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 3 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 4 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 5 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 Keep direct airflow away from eyes or other sensitive areas.
- 11 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- 12 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 13 Do not set the appliance down while still on.
- 14 Do not place the appliance on any soft furnishings.
- 15 Do not use attachments other than those we supply.
- 16 Do not use diffuser on the highest heat setting.
- 17 This appliance is not intended for commercial or salon use.
- 18 Let the appliance cool down before cleaning and storing away.



## KEY FEATURES

- |                    |                                    |
|--------------------|------------------------------------|
| 1 3 heat settings  | 6 Diffuser                         |
| 2 2 speed settings | 7 Removable easy clean rear grille |
| 3 Turbo function   | 8 Hang up loop                     |
| 4 Cool shot        | 9 Cord                             |
| 5 Concentrator     |                                    |

---

## PRODUCT FEATURES




 



---

- 1850 – 2200 watts.
- Ceramic coated grille for even heat.
- Ion generator for smooth frizz-free styling.
- 2 turbo fans for 30% faster drying\*. \*Vs previous Remington Turbo Dryer.

---

## INSTRUCTIONS FOR USE

---

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
-  Hairsprays contain flammable material – do not use while using this product.
- 3 Plug the product into the mains power supply.
- 4 To switch the product on slide the speed setting switch up once to the medium speed setting .
- 5 Select the desired temperature and speed setting using the switch on the handle.
- 6 To increase the speed slide the switch up again to the high speed setting .
- 7 To select the heat setting slide the heat setting switch up once to the low setting , up twice to the medium setting  or up 3 times to the high setting .
- 8 For the fastest air flow use the turbo function.  
To operate, push the turbo cool shot switch to the left. Return to the centre to switch off.
- 9 To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- 10 To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- 11 To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a low heat / low speed setting.
-  Caution: Do not use the diffuser on the highest heat setting.
- 12 To set your style, press the cool shot button whilst styling then release it to reactivate the heat.
- 13 After use, turn the appliance off and unplug.

- 14 To turn off slide the speed setting switch down to the '0' position.
- 15 Let the appliance cool before cleaning and storing away.

---

## **CLEANING AND MAINTENANCE**

---

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.
- To remove the rear grille for cleaning hold the dryer handle in one hand, then with the other place your thumb on the indent on the top of the rear grille. Pull away and down to remove the rear grille from the dryer.
- To replace position the rear grille on the back of the dryer and click back in place.

---

## **ENVIRONMENTAL PROTECTION**

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## **SERVICE AND GUARANTEE**

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.**

### Model No. D3711

14/UK/ D3711 T22-0002141 Version 01 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2014 SBI