

REMINGTON®

7 in 1 Cordless Epilator



EP7035

**Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery**


 


Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.

Thank you for buying your new Remington product. Before use, please read these instructions carefully and keep them safe.
Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 This appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Only set the appliance down on a heat-proof surface.
- 4 Do not use the appliance if it is damaged or malfunctions.
- 5 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington service dealer for repair or replacement in order to avoid a hazard.
- 6 Store the product at a temperature between 15°C and 35°C.
- 7 Do not use attachments other than those we supply.
- 8 Do not twist or kink the cable, or wrap it around the appliance.
- 9 This product is for cordless use only. Do not use your epilator while it is plugged into the mains.
- 10 Make sure the power plug and cord do not get wet.
- 11 Do not plug or unplug the appliance with wet hands.
- 12 Suitable for use in a bath or shower. 
- 13 Ensure the appliance is switched off and unplugged from the mains before cleaning.
- 14 Do not use this appliance with a damaged or broken tweezer barrel as injury may occur.
- 15 This appliance is not intended for commercial or salon use.
- 16  This appliance should be supplied with approved safety isolating adaptors PA-0510EU (for Europe) and PA-0510U (for United Kingdom) with the output capacity of 5DC; 1000mA (adaptor output).



KEY FEATURES

- | | |
|--|-------------------------------|
| 1 Tweezers | 11 Detail Cap |
| 2 Perfect Angle Cap | 12 Massage Cap with Aloe Vera |
| 3 Removable & Washable Head | 13 Bikini Comb |
| 4 Pivoting Head | 14 Shaver Head |
| 5 Precision Light | 15 Pedicure Head |
| 6 On/Off Switch - 2 Speeds | 16 Exfoliating Brush Head |
| 7 Low Battery/Charging Indicator Light | 17 Cleaning Brush (not shown) |
| 8 Power Inlet | 18 Beauty Bag (not shown) |
| 9 Head Release Button | 19 Power Adaptor (not shown) |
| 10 Anti Slip Grip | |

GETTING STARTED

Be patient when first using your epilator as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your epilator, as we are confident you will receive years of enjoyable use and complete satisfaction.

★ INSTRUCTIONS FOR CHARGING


- Always ensure that your hands, epilator and adaptor are dry before charging.
- Before using your Remington epilator for the first time, charge for 4 hours for initial use and for every charge thereafter. One full charge allows 40 minutes of cordless usage time.
- Ensure the product is switched off and attach the mains adaptor to the epilator.
- The charging indicator will illuminate green while charging.
- Charge for the time indicated above.
- The epilator will be fully charged when the green light goes off.
- Use the product until the battery is low. This is indicated by a red indicator light.
- ★ Note: this product is for cordless use only. The epilator cannot be turned on while it is charging. Do not try to use the epilator while it is plugged into the mains.
- Your epilator cannot be overcharged, however, if the product is not going to be used for an extended period (2-3 months), unplug it from the mains and store. Fully recharge your epilator when you want to use it again.

★ GENERAL INFORMATION ON EPILATION

- This Remington epilator has been designed to make the removal of unwanted hair as efficient, gentle and easy as possible. The rotating tweezers catch even the shortest hairs (minimum length 0.5mm) and pull them out by the root. That hairs that grow back are soft and thin. Epilating leaves your skin smooth and hair-free for several weeks.
- If you have not used an epilator before, or if you have not epilated for a long period of time, it may take a short while for your skin to adapt to epilation.
- The discomfort experienced at first is considerably reduced with repeated use as the skin adjusts to the process.
- Using an epilator may cause reddening or irritation of the skin. This is a normal reaction that will quickly disappear. However, you should consult your doctor if the irritation has not disappeared within three days. All methods of hair removal from the root can result in in-growing hair depending on the condition of the skin and hair.

Regular exfoliation helps to prevent in-growing hair. In some cases inflammation of the skin could occur when bacteria penetrates the skin (eg. when sliding the appliance over the skin). Thorough cleansing of the epilation head before each use will minimise the risk of infection.

INSTRUCTIONS FOR USE

- This epilator is suitable for wet or dry use and may be used in the shower. 
- This epilator is for cordless use only.


USEFUL TIPS

- When using an epilator for the first time it is best to try it on a small area to get used to the process of epilation.
- The optimum length for hair removal is between 2-5mm. Epilation is easier and more comfortable.
- Take a warm bath or shower before epilating and exfoliate to remove dead skin cells. This will make your skin more pliable, making the epilation process less uncomfortable.
- Epilate in the evening so that any possible reddening can disappear overnight.
- After use you can use a body cream or aloe lotion to soothe the skin and reduce skin irritation.
- Exfoliate regularly to avoid in-growing hair.

WHY EXFOLIATE?

- Exfoliation prevents in-growing hairs. Ingrown hairs occur when the growing hair curls up under the skin instead of growing out like it should. It results in an often painful red bump and possible infections. Using the Exfoliating Brush Head provided with this product will help reduce ingrown hairs or infections.

 
 
 
 
 
WET USE:

- Ensure the skin is moist. For added comfort, shower gel can be added to the skin during use. It is best to try different methods to determine your preferred method of epilation.
-  Note: after each wet use with shower gel, clean the epilator under running water.

DRY USE:

- Before epilating make sure that the skin is clean, dry and free from creams or oils. Rub the skin in the area to be epilated to lift short hairs to optimise hair removal.

- Turn the epilator on to the desired speed:
- LOW is recommended for fine hair.
- HIGH is recommended for coarse hair or stronger hair growth.



- Using your free hand, hold the skin taut to make the hairs stand upright.
- Position the epilator flat so that the tweezers are at a 90° angle and flat against the skin. The Perfect Angle Cap will ensure the optimum tweezing angle (Diagram A).
- Using small circular motions, slowly and gently glide the epilator over the skin. This circular motion is the most effective method and makes the process less uncomfortable. Alternatively, guide the epilator in a slow, continuous movement against the hair growth (Diagram B).
- Repeat within each area until all the unwanted hair is removed.
- After epilating, turn the epilator off.

✱ ARM/LEG EPIRATION: (Diagram C)

- Epilate from the lower arm/leg and slowly move upwards. To epilate behind the elbow/knee, keep the arm/leg straight to stretch the skin.

✱ UNDERARMS AND BIKINI: (Diagram D and E)

- Please be aware that these areas are particularly sensitive. However this sensitivity will reduce after repeated usage. For more comfort, ensure that the skin is held taut and that the hair is at the optimum length of 2-5mm. If it has been an extended period of time since you have removed hair, trim the hair with the Bikini Comb Attachment before epilation.
- It is recommended to use LOW speed or detail cap for these sensitive areas.

✱ FACIAL EPIRATION

- Use the detail cap.
- Place the epilator at a 90° angle to the skin and move the epilator head in a circular motion.

- ✱ **Note:** Do not use for removing hair from the eyebrow.
- Keep the product away from hair on the scalp, eyebrows and eyelashes.

✱ **PRECISION LIGHT**

- The precision light is incorporated into the ON/OFF switch to help to see every hair.

✱ **DETAIL CAP**

- The detail cap is designed for small areas (including the face) and spot treatments.
- Ensure the epilator is switched off.
- Remove the Perfect Angle or Massage Cap.
- Place the Detail Cap into the appropriate slots at the top of the epilator.
- Gently press the Detail Cap into place until you hear a 'click'.

✱ **MASSAGE CAP WITH ALOE VERA**

- The Massage Cap is designed for gentler epilation.
- Ensure the epilator is switched off.
- Remove the Perfect Angle or Detail Cap.
- Place the Massage Cap into the appropriate slots at the top of the epilator.
- Gently press the Detail Cap into place until you hear a 'click'.

✱ **SHAVER HEAD**

- The Shaver Head provides a close shave for sensitive areas.
- Ensure the epilator is switched off.
- Press the head release button and remove the Epilator Head.
- Attach the Shaver Head until it clicks into place.
- Hold the shaver head at a 90° angle to the skin and move against the direction of hair growth.

✱ **TRIMMING AND SHAPING**

- Attach the bikini trimmer attachment.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the areas as desired.

✱ **EXFOLIATING BRUSH HEAD**

- The Exfoliating Brush spins to remove dead skin cells from the surface and helps to prevent ingrowing hairs.
- Ensure the epilator is switched off.
- Press the head release button and remove the Epilator Head.
- Attach the Exfoliating Brush Head until it clicks into place.

- For best results dampen the skin with water and apply shower gel or body wash.
- Turn the unit on to the LOW speed setting.
- Applying gentle pressure sweep the brush over the skin targeting the desired areas. If required the Exfoliating Brush can also be operated on the HIGH speed setting.
- ✱ Note: The Exfoliating Brush is not to be used on the face or sensitive areas.
- Can be used on wet or dry skin.

✱ PEDICURE HEAD

- The Pedicure Head spins to gently remove hard, dry skin from the feet.
- Ensure the epilator is switched off.
- Press the head release button and remove the Epilator Head.
- Turn the unit on to the LOW speed setting.
- Attach the Pedicure Head until it clicks into place.
- Applying gentle pressure glide the roller over the hard skin you wish to remove. Do not press too hard.
- After 2-3 seconds, stop and check the skin. Repeat this process until you have the desired effect. If required the Pedicure Head can also be operated on the HIGH speed setting.
- ✱ Note: The Pedicure Head is only designed for use on the feet. DO NOT use on any other part of the body.
- Do not use on wet skin.
- Do not use in the same area for more than 2-3 seconds at a time.

✱ CAUTION

- For your protection your epilator may slow down or even stop if pressed too firmly against the skin.
- Do not use the Epilating Head on irritated skin or skin with varicose veins, rashes, spots, moles or wounds without consulting a doctor. People with reduced immune response eg: during pregnancy, or people who suffer from diabetes mellitus, haemophilia or immunodeficiency should also consult their doctor before using this product.
- Do not use the Exfoliating Brush or Pedicure Head on broken, sore or irritated skin or on warts or any other protrusions.
- For hygiene reasons do not let another person use your epilator. It is recommended for use by one person only.

CLEANING AND MAINTENANCE

- To ensure a long lasting performance of your epilator, clean the head assembly regularly.
- ✱ **CLEANING THE EPILATION HEAD AFTER EACH USE:**
 - Ensure the epilator is turned off and disconnected from the mains.
 - Press the head release button and open the head assembly (Diagram F).
 - Turn the head assembly upside down.
 - The epilator head can be removed and rinsed for cleaning. For optimal cleaning, brush hairs from the tweezers before rinsing.
 - Although the epilator is suitable for use under running water, it is not recommended to submerge the unit under water.
- ✱ **NOTE:** Do not completely submerge in water. The epilator head can be submerged after it has been removed from the epilator body.
- ✱ **TO REMOVE RESIDUE:**
 - To remove residue from the stainless steel tweezers, dampen a swab with alcohol.
 - Gently rub the swab over the tweezers until the residue has been removed.
- ✱ **CAUTION:** Make sure the cotton swab is not soaked in alcohol as this may damage the epilator.
- ✱ **CLEANING THE SHAVER HEAD AFTER EACH USE:**
 - Ensure the epilator is turned off and disconnected from the mains.
 - Press the head release button and remove the shaving head.
 - Remove the blade and trimmer assembly by placing your fingers either side of the assembly pulling upwards.
 - Gently shake the blade and trimmer assembly to remove the hair. Use the cleaning brush to brush the trimmer and shaver housing.
 - Replace the blade and trimmer assembly.
- ✱ **NOTE:** Never use the cleaning brush on the foil as damage may occur.
- ✱ **CLEANING THE PEDICURE HEAD AFTER EACH USE:**
 - Ensure the epilator is turned off and disconnected from the mains.
 - Press the head release button and remove the pedicure head.
 - To clean, gently brush the roller head with the cleaning brush.
- ✱ **Note:** the Pedicure Head is not washable.

★ **CLEANING THE EXFOLIATING BRUSH HEAD AFTER USE:**

- Ensure the epilator is turned off and disconnected from the mains.
- Press the head release button and remove the exfoliating brush head.
- To clean, rinse bristles under water and allow to dry.



BATTERY REMOVAL

- Battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Turn the unit on and discharge all remaining power.
- Begin by removing the head attachment from the unit.
- Using a small screw driver remove the screw at the bottom of the unit.
- Unclip the decorative panel from the unit.
- Pull and slide out the inner housing to reveal the PCB and battery.
- Cut the wires on both ends of the battery. Remove the battery.
- Battery is to be disposed of safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. EP7035

16/UK/ EP7035 T22-0004298 Version 05 /16

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester
M35 0HS

www.remington.co.uk

© 2016 Spectrum Brands, Inc.