

# REMINGTON®

## Foil Shaver



F7805

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not leave the appliance unattended while plugged in except when charging.
- 3 Keep the power plug and cord away from heated surfaces.
- 4 Make sure the power plug and cord do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- 8 Store the product at a temperature between 15°C and 35°C.
- 9 Suitable for cleaning under an open water tap. 
- 10 This appliance is not intended for commercial or salon use.



## KEY FEATURES

- |                     |                              |
|---------------------|------------------------------|
| 1 On/off switch     | 7 Pop-up trimmer             |
| 2 Screens           | 8 Head guard (not shown)     |
| 3 Cutter assembly   | 9 Cleaning brush (not shown) |
| 4 Intercept trimmer | 10 Power cord (not shown)    |
| 5 Hairpocket        | 11 LED display               |
| 6 Power port        |                              |

---

## GETTING STARTED

---

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

### CHARGING YOUR SHAVER

- Ensure the product is switched off.
- Connect the shaver to the adapter and then to the mains.
- When charging a square pattern will cycle around the display.
- Charge for at least 24 hours when using for the first time.
- Once the shaver batteries are fully charged, the display will flash "60".
- Use the product until the battery is low as indicated by the digital display showing "Lo".
- To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
- When empty, the battery will be charged within 120 minutes
- The shaver automatically adjusts to a mains voltage between 100V and 240V.

### CORDED USE

- Connect the shaver to the adaptor, then to the mains and recharge for 5 minutes before use.

### CAUTION

- Extended mains only use will result in the reduction of the battery life.

---

## INSTRUCTIONS FOR USE

---

### SHAVING

- Make sure your shaver is properly charged.
- Switch the shaver on.
- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so that the foils touch your face.
- Use short, linear strokes.

### TRIMMING

- Switch the appliance on.
- Push the trimmer release button.
- Hold the trimmer at a right angle to your skin.

- To retract the trimmer, push the top rear of the trimmer downward until it locks under the trimmer release button.

#### ➔ **Tips for best results**

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the foil heads.

---

## **CARE FOR YOUR SHAVER**

---

- Care for your appliance to ensure a long lasting performance.
- We recommend you clean your product after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
- Keep the switch in the “off” position when not in use.

### **DRY CLEANING**

- Ensure the appliance is switched off and unplugged from the mains.
- Pull the foil assembly up to remove from the hair pocket.
- Tap out the excess hair shavings and use a cleaning brush if necessary.
- Do not clean the shaving foil with a brush.
- Replace the head assembly.

### **WASHABLE CLEANING**

- Ensure the shaver is switched off and unplugged from the mains.
- Pull the foil assembly up to remove from the hair pocket.
- Foils – do not use the brush to clean the foils. Instead, rinse the foils under cold or warm water.
- Cutters and Trimmers – Rinse any loose hairs away in cold or warm water. Do not use hot water.
- After cleaning, replace the head assembly.
- Do not submerge in water as damage will occur.

### **CLEANING TRIMMER**

- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

### ✦ REPLACING THE FOILS AND CUTTERS

- To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced regularly.

### ✦ Signs that your foils and cutters need replacing.

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

### ✦ TO REPLACE THE FOIL

- Pull the foil assembly up to remove from the hair pocket.
- Insert new foil assembly in hair pocket until it snaps into place.

### ✦ Replacing the Cutters

- Grasp the cutter between your thumb and forefinger and pull upwards.
- Snap the new cutter into the oscillator tip.

- ✦ Note: DO NOT press on the cutter ends as this may cause damage.

### ✦ Foils head replacement model: SPF300

### ✦ TROUBLESHOOTING

- If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, a 5 minute quick charge will allow for 3 minutes of shaving.



## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Using a small screwdriver, pry off the 2 side panels.
- Using a Philips screwdriver remove the 4 screws from the front of the shaver and remove the front housing.
- Using a Philips screwdriver, remove the 8 screws from the front of the shaver.
- Remove and open the core from the shaver to expose the batteries.
- Cut the wires connecting the batteries to the circuit board and remove the batteries.
- Dispose of the batteries safely.

---

 **ENVIRONMENTAL PROTECTION**

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

**➡ SERVICE AND GUARANTEE**

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

---

**➡ SERVICE CENTRE**

---

**United Kingdom**

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

**Ireland**

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

 **REGISTER ONLINE FOR**

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

## **Model No. F7805**

15/UK/ F7805 T22-0003100 Version 02 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2015 SBI